

## Hoval TopVent<sup>®</sup>








CP | SP

Design handbook

Recirculation and supply air units configured as roof units with efficient air distribution for heating and cooling with decentralised Belaria<sup>®</sup> VRF heat pump



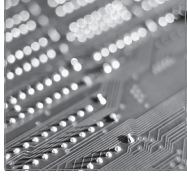

	<p><b>Hoval Indoor Climate Systems</b> 3</p> <p>Efficient. Flexible. Reliable.</p>	<p>A</p>
	<p><b>TopVent® CP</b> 7</p> <p>Recirculation units configured as roof units with efficient air distribution for heating and cooling spaces up to 25 m in height with decentralised heat pump</p>	<p>B</p>
	<p><b>TopVent® SP</b> 29</p> <p>Supply air units configured as roof units with efficient air distribution for ventilating, heating and cooling spaces up to 25 m in height with decentralised heat pump</p>	<p>C</p>
	<p><b>Options</b> 51</p>	<p>D</p>
	<p><b>Transport and installation</b> 57</p>	<p>E</p>
	<p><b>System design</b> 69</p>	<p>F</p>
	<p><b>Control systems</b></p> <p>Hoval TopTronic® C          → see 'Control Systems for Hoval Indoor Climate Systems' manual</p>	<p></p>







## Hoval Indoor Climate Systems

Efficient. Flexible. Reliable.

A





## Efficient. Flexible. Reliable.

Hoval indoor climate systems are decentralised systems for heating, cooling and ventilating halls for industrial, commercial and leisure applications. The systems have a modular structure. One system comprises several ventilation units which are spread around the room. These units are equipped with reversible heat pumps and gas-fired appliances for decentralised heat and cold generation, or they heat and cool with a connection to a central energy supply. Tailored control systems complete the system and ensure the effective combination and optimal use of all resources.

### Diverse range of units ensures flexibility

Different types of ventilation units can be combined to create the perfect system for the project in question:

- RoofVent® supply and extract air handling units
- TopVent® supply air units
- TopVent® recirculation units

The number of supply and extract air handling units depends on how much fresh air is required in order to create a comfortable atmosphere for people in the building. Recirculation units cover additional heat or cool demand as required. A broad range of unit types and sizes with heating and cooling coils in various output levels means that the overall output of the system can be scaled to whatever level is required.

Specially designed unit versions are also available for halls with particularly humid or oily extract air.

Furthermore, there is a range of units available which have been expressly developed for very specific purposes. ProcessVent units, for example, are coupled with extract air purification systems in industrial halls and recover heat from process air.

### Draught-free air distribution

A key feature of Hoval indoor climate units is the patented vortex air distributor, known as the Air-Injector. It is controlled automatically and changes the blowing angle of the air continuously between vertical and horizontal. The highly efficient air supply system has many advantages:

- It provides a high level of comfort during heating and cooling. No draughts develop in the hall.
- The efficient and even air distribution ensures that the indoor climate units cover a large area.
- The Air-Injector keeps the temperature stratification in the room low, thus minimising heat loss through the roof.

### Control with specialist expertise


The TopTronic® C control system, which was specifically developed for Hoval indoor climate systems, regulates the separate units individually and controls them based on zones. This enables optimal adjustment to the local requirements of the different usage areas in the building. The patented control algorithm optimises energy use and ensures maximum comfort and hygiene levels. Clear interfaces make it easy to connect the system to the building management system.

Simpler control systems are also available for units that are only used for supply air or air recirculation.


### Competent and reliable

Hoval will support you and provide expert knowledge throughout all project phases. You can rely on comprehensive technical advice when it comes to planning Hoval indoor climate systems and on the skills of the Hoval technicians during the installation, commissioning and maintenance of the system.


## System with decentralised heat and cold generation with heat pump

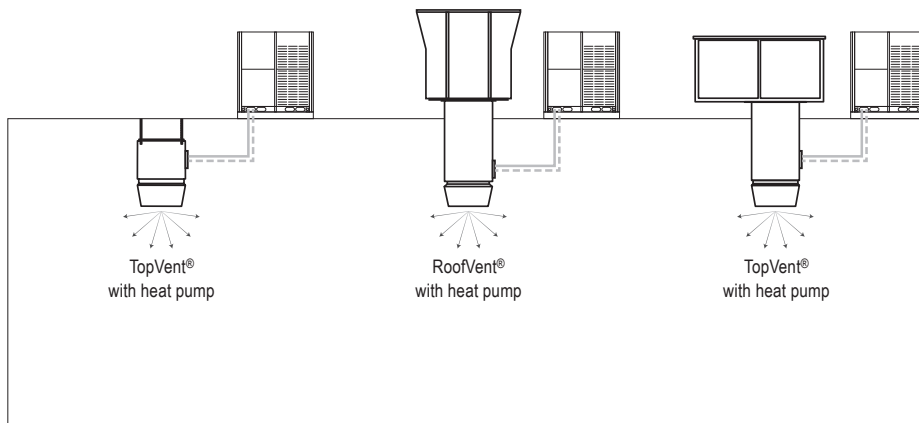

## System with central heat and cold generation

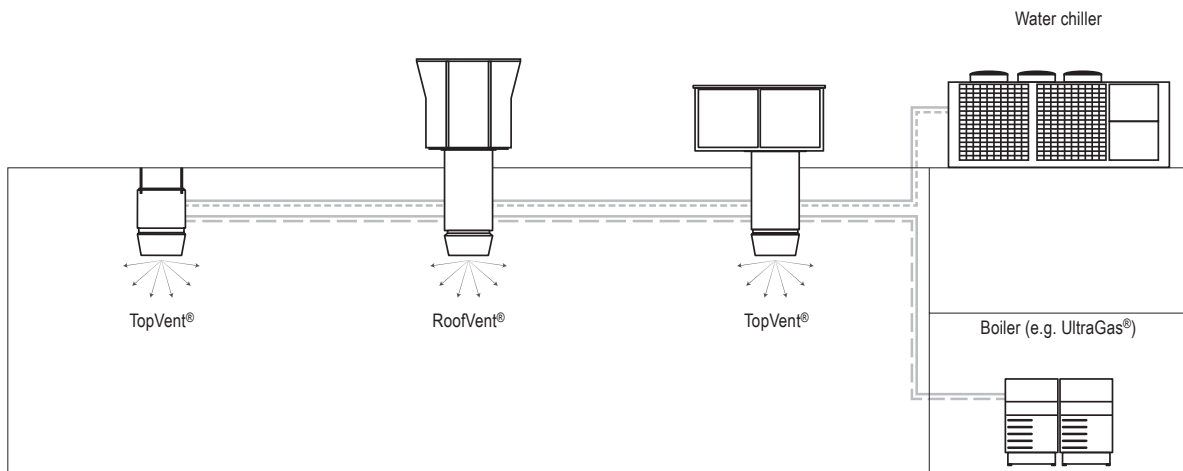

## System with decentralised, gas-fired heat generation

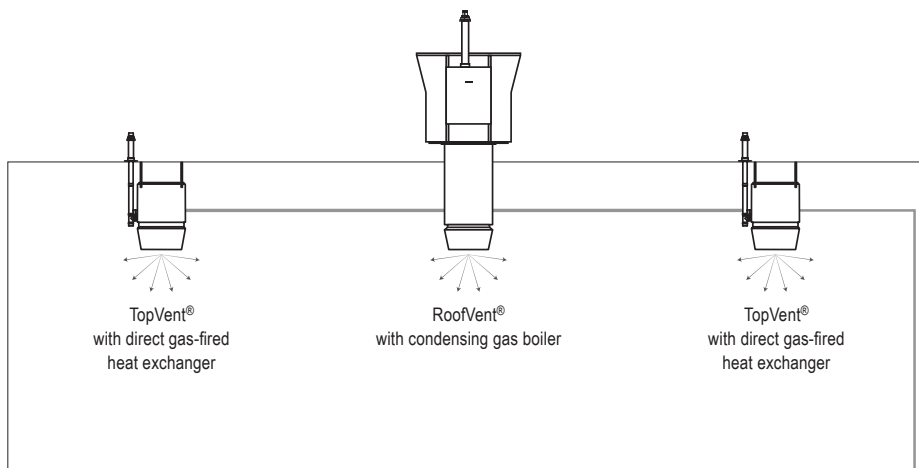





**TopVent® CP**

Recirculation units configured as roof units with efficient air distribution for heating and cooling spaces up to 25 m in height with decentralised heat pump

1 Use . . . . .	8
2 Construction and operation . . . . .	8
3 Technical data . . . . .	15
4 Specification texts . . . . .	24

B

# 1 Use

## 1.1 Intended use

TopVent® CP units are recirculation units intended for heating and cooling spaces up to 25 m in height with decentralised heat pump. They have the following functions:

- Heating and cooling with heat pump
- Recirculation operation
- Air distribution and destratification with adjustable Air-Injector
- Air filtration

The TopVent® CP unit complies with all the requirements of the Ecodesign Directive 2009/125/EC relating to environmentally friendly design of ventilation systems. It is a system of the 'fan coil unit' type, provided for in Commission Regulation (EU) 2016/2281.

The Hoval TopTronic® C integrated control system ensures energy-efficient, demand-based operation of Hoval indoor climate systems.

Intended use also includes compliance with the operating instructions. Any usage over and above this use is considered to be not as intended. The manufacturer can accept no liability for damage resulting from improper use.

## 1.2 User group

The units are only allowed to be installed, operated and maintained by authorised and instructed personnel who are well acquainted with the units and are informed about possible dangers.

# 2 Construction and operation

TopVent® CP units consist of the following components:

### Roof unit

The self-supporting housing for mounting on the roof frame is of double-shell construction; this ensures good thermal insulation and high stability. The roof unit includes the following components:

- Fan
  - Heating/cooling section
    - Heating/cooling coil for heating and cooling the supply air
    - Condensate separator
  - Extract air filter
  - Unit control box (part of the TopTronic® C control system)
- All components are easily accessible for maintenance work through large access openings.

### Below-roof unit

The below-roof unit comprises the following components:

- Connection module:
 

The connection module serves as an air duct through the roof and for drawing in extract air from the hall through the extract air grille. To enable easy adaptation to local installation conditions, the connection module is available in 3 lengths.
- Air-Injector:
 

The Air-Injector is a patented, infinitely variable vortex air distributor for the draught-free introduction of air into the hall under changing operating conditions.

### Heat pump system


The reversible air/air heat pump system in split design generates both heat and cold decentrally. It consists of the following components:

- Belaria® VRF heat pump with continuously modulating inverter technology for precise output control and high efficiency
- Conversion board for communication between heat pump, expansion valve and indoor climate unit (mounted in the roof unit)
- Expansion valve (supplied loose)

TopVent® CP units are available in 2 unit sizes and a total of 3 output levels:

Unit size	Heat pump	Conversion board and expansion valve
CP-6	Belaria® VRF (33)	1 x
	Belaria® VRF (40)	1 x
CP-9	Belaria® VRF (67)	2 x


Table B1: Availability

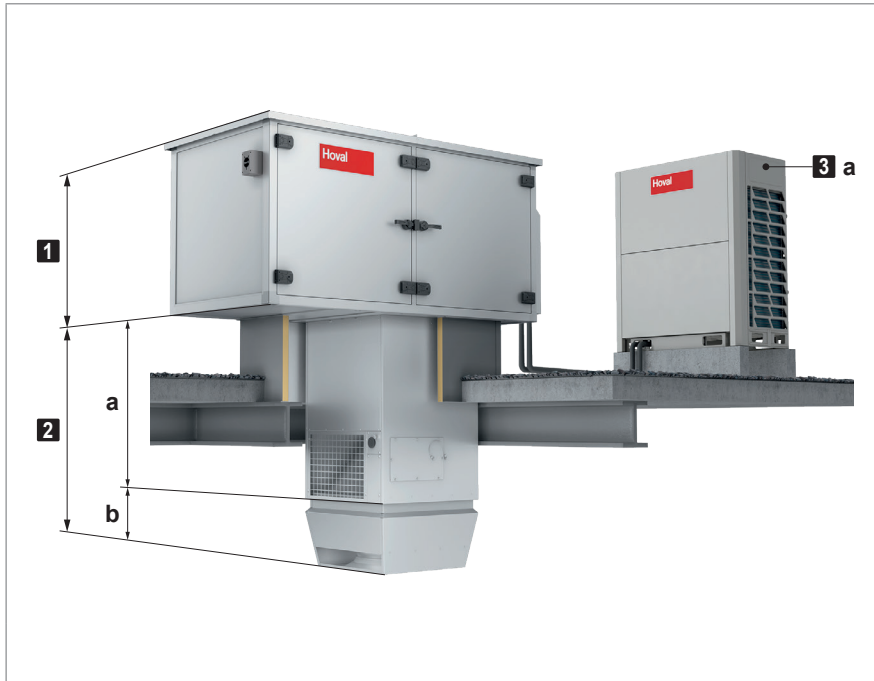

- 1** Roof unit
- 2** Below-roof unit
  - a** Connection module
  - b** Air-Injector
- 3** Heat pump system
  - a** Heat pump Belaria® VRF
  - b** Conversion board (mounted in the roof unit)
  - c** Expansion valve (supplied loose)

Fig. B1: TopVent® CP components


2.1 Construction and operation TopVent® CP-6

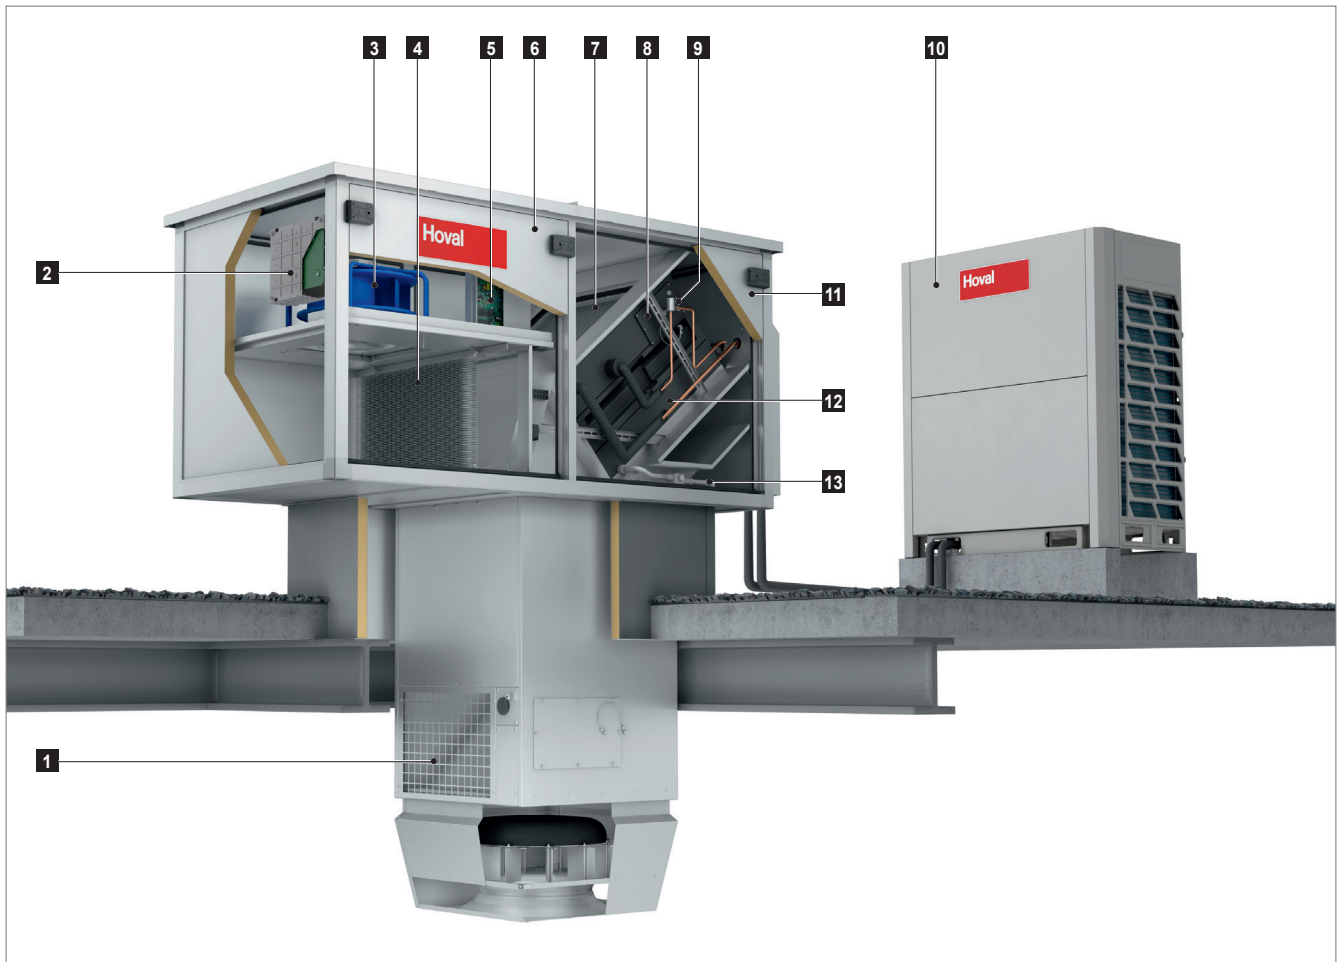

- |                               |  |
|-------------------------------|--|
| <b>1</b> Extract air grille   | <b>8</b> Access panel, liquid temperature sensor |
| <b>2</b> Unit control box     | <b>9</b> Expansion valve (supplied loose)        |
| <b>3</b> Fan                  | <b>10</b> Heat pump Belaria® VRF (33, 40)        |
| <b>4</b> Extract air filter   | <b>11</b> Refrigerant connection access door     |
| <b>5</b> Conversion board     | <b>12</b> Condensate separator                   |
| <b>6</b> Fan access door      | <b>13</b> Condensate drain                       |
| <b>7</b> Heating/cooling coil |  |

Fig. B2: Construction TopVent® CP-6




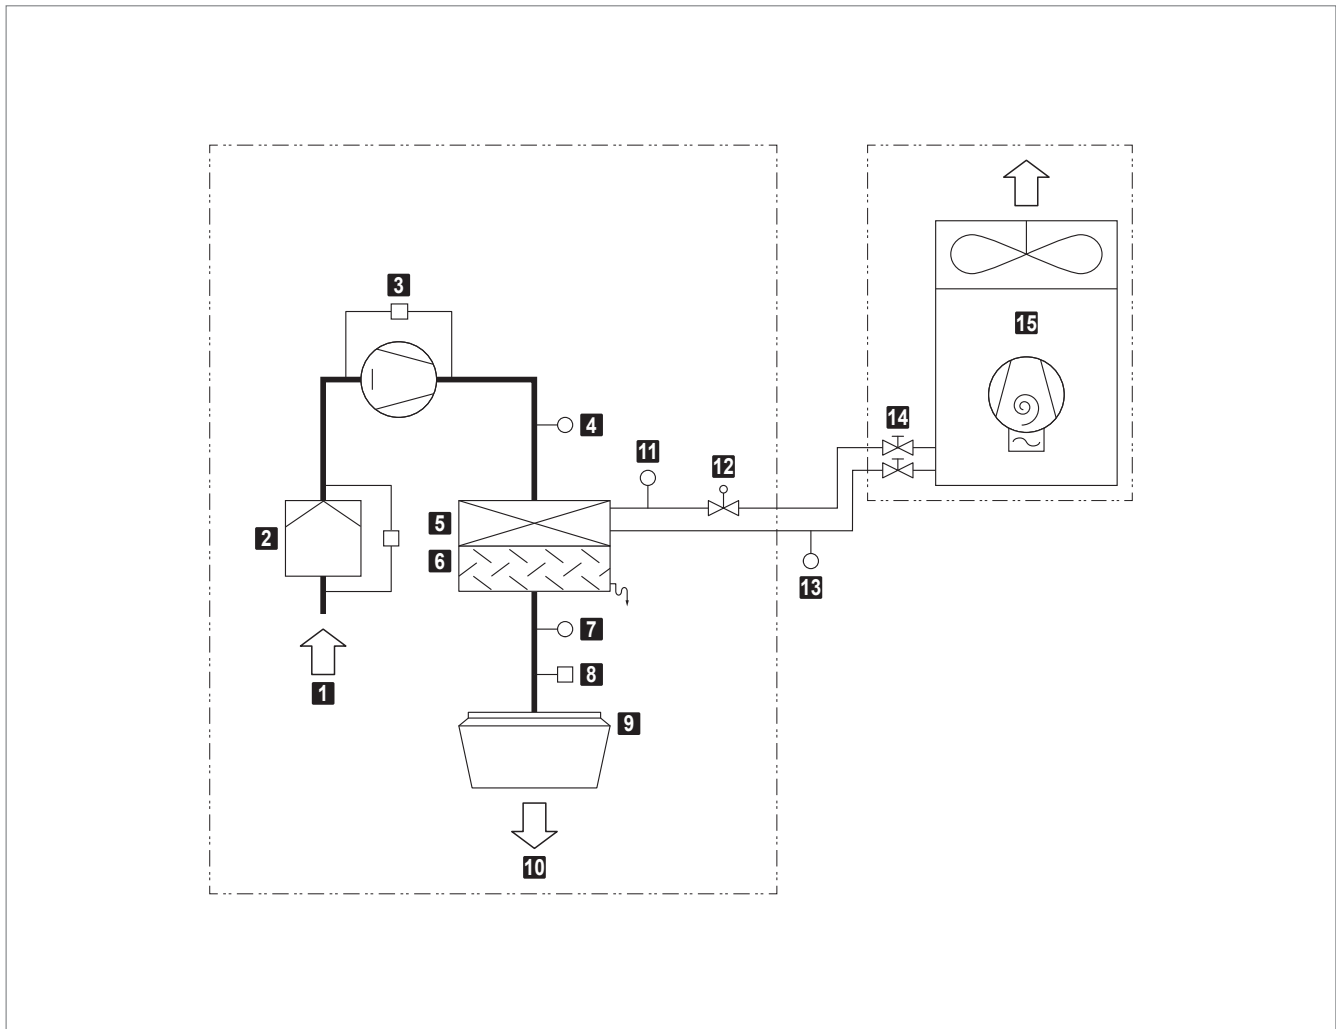

<b>1</b> Extract air	<b>9</b> Air-Injector
<b>2</b> Extract air filter with differential pressure switch	<b>10</b> Supply air
<b>3</b> Fan with flow rate monitoring	<b>11</b> Liquid temperature sensor
<b>4</b> Air inlet temperature sensor heating/cooling coil	<b>12</b> Expansion valve (supplied loose)
<b>5</b> Heating/cooling coil	<b>13</b> Gas temperature sensor (supplied loose)
<b>6</b> Condensate separator	<b>14</b> Shut-off valves
<b>7</b> Supply air temperature sensor	<b>15</b> Heat pump Belaria® VRF (33, 40)
<b>8</b> Actuator Air-Injector	


Table B2: Function diagram TopVent® CP-6

2.2 Construction and operation TopVent® CP-9

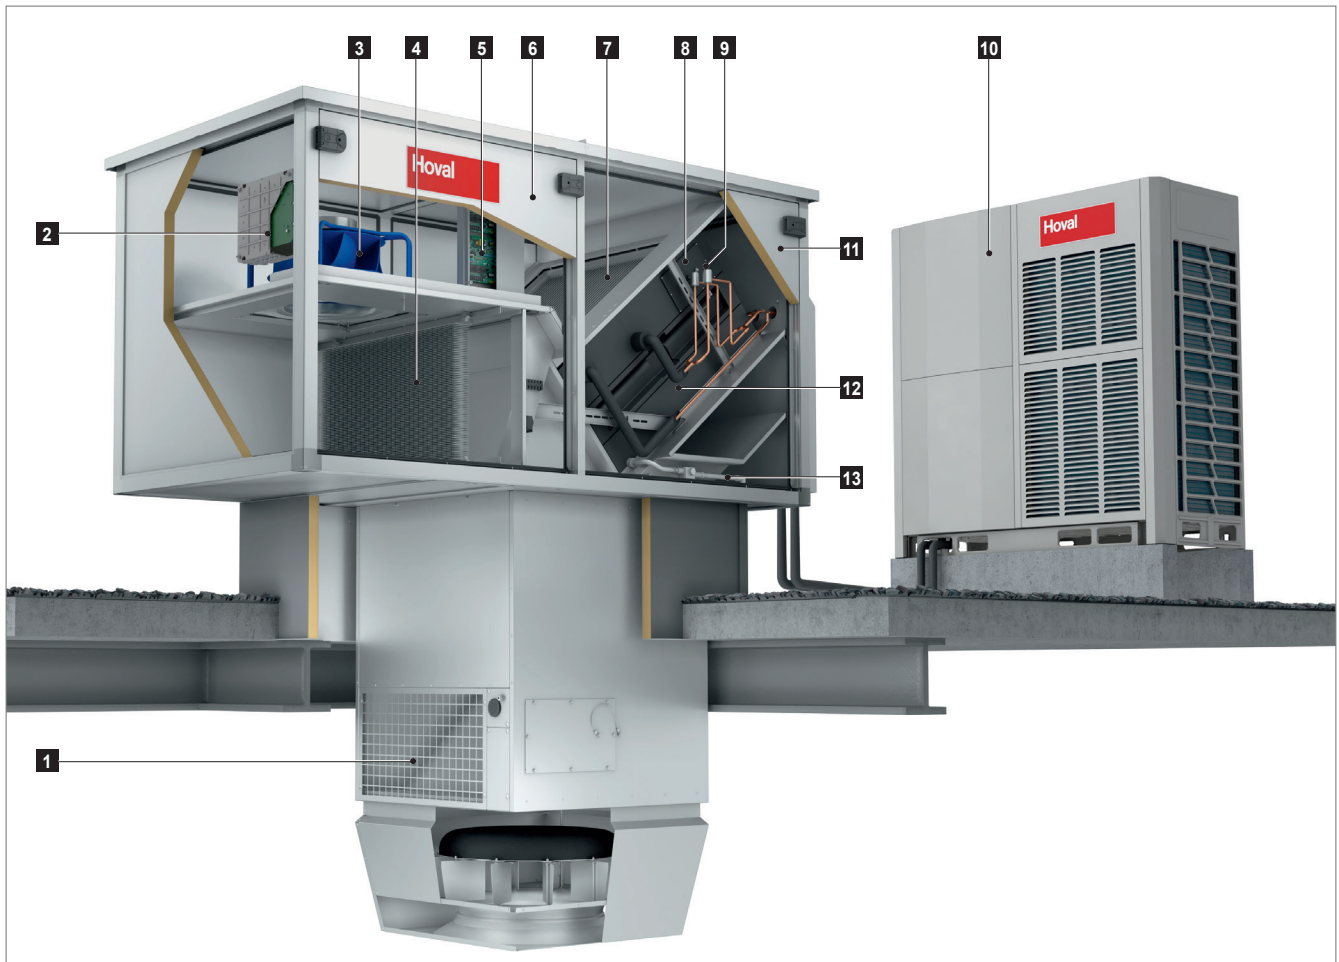

- |                               |  |
|-------------------------------|--|
| <b>1</b> Extract air grille   | <b>8</b> Access panel, liquid temperature sensor |
| <b>2</b> Unit control box     | <b>9</b> Expansion valves (supplied loose)       |
| <b>3</b> Fan                  | <b>10</b> Heat pump Belaria® VRF (67)            |
| <b>4</b> Extract air filter   | <b>11</b> Refrigerant connection access door     |
| <b>5</b> Conversion boards    | <b>12</b> Condensate separator                   |
| <b>6</b> Fan access door      | <b>13</b> Condensate drain                       |
| <b>7</b> Heating/cooling coil |  |

Fig. B3: Construction TopVent® CP-9

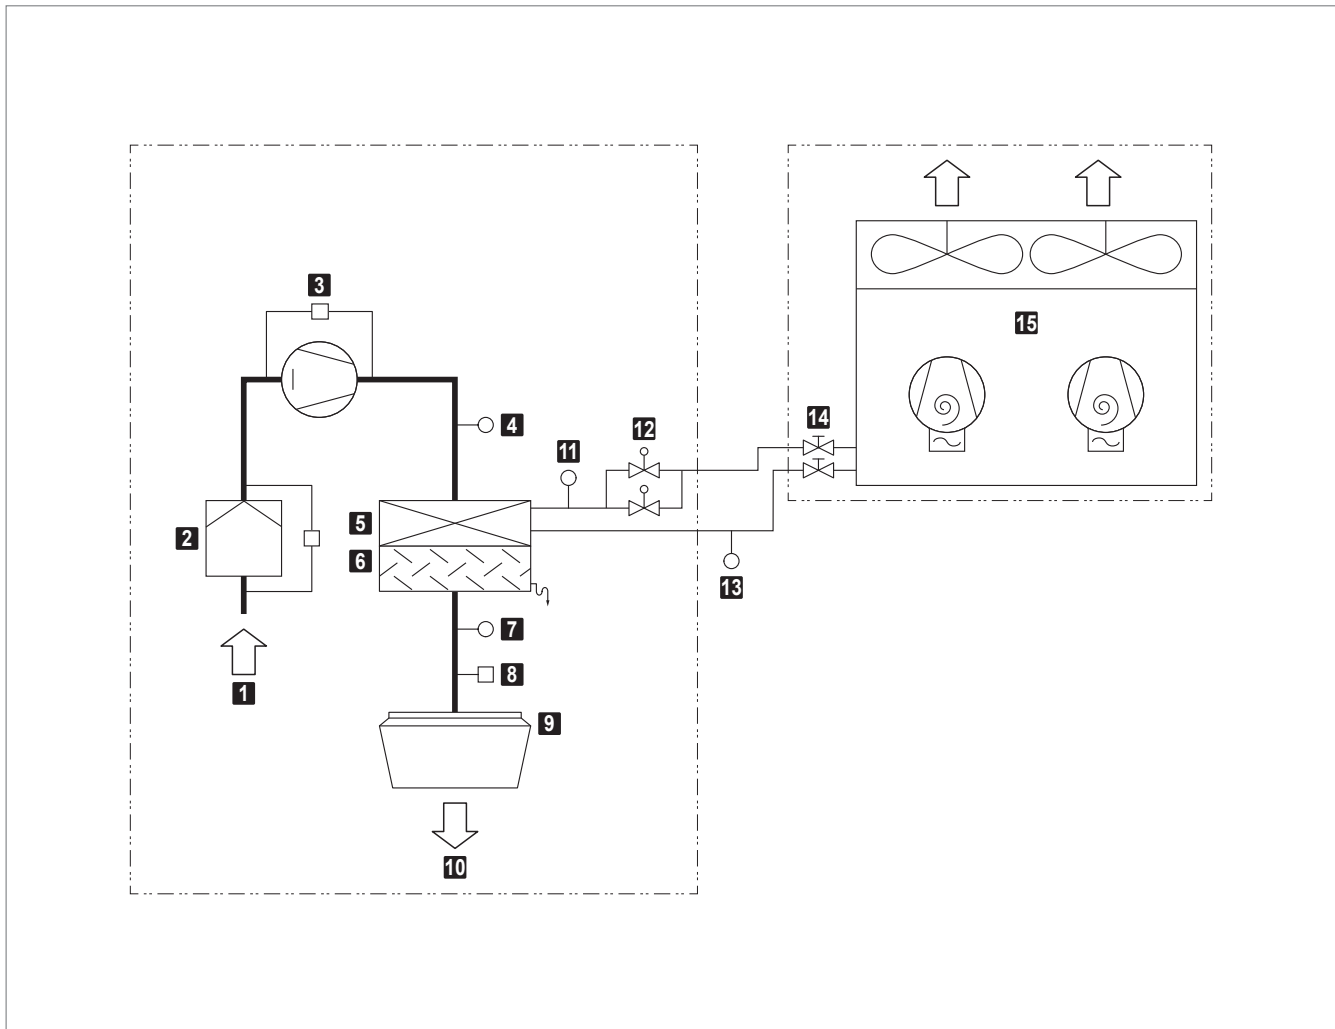

<b>1</b> Extract air	<b>9</b> Air-Injector
<b>2</b> Extract air filter with differential pressure switch	<b>10</b> Supply air
<b>3</b> Fan with flow rate monitoring	<b>11</b> Liquid temperature sensor
<b>4</b> Air inlet temperature sensor heating/cooling coil	<b>12</b> Expansion valves (supplied loose)
<b>5</b> Heating/cooling coil	<b>13</b> Gas temperature sensor (supplied loose)
<b>6</b> Condensate separator	<b>14</b> Shut-off valves
<b>7</b> Supply air temperature sensor	<b>15</b> Heat pump Belaria® VRF (67)
<b>8</b> Actuator Air-Injector	

Table B3: Function diagram TopVent® CP-9

### 2.3 Operating modes

TopVent® CP operates in the following modes:

- Recirculation
- Recirculation speed 1
- Standby

The TopTronic® C control system regulates these operating modes automatically for each control zone in accordance with the specifications in the calendar. The following points also apply:

- The operating mode of a control zone can be switched over manually.
- Each TopVent® unit can operate individually in a local operating mode: Off, Recirculation, Recirculation speed 1

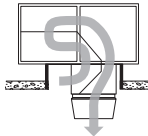
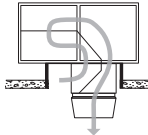
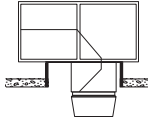
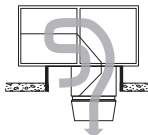
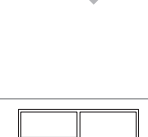
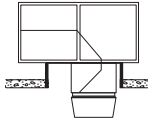
Code	Operating mode		Description
REC	<b>Recirculation</b> On/Off operation: during heat or cool demand, the unit draws in room air, heats or cools it and blows it back into the room. The room temperature set value day is active.		Fan ..... speed 1/2 <sup>1)</sup> Heating/cooling ..... on <sup>1)</sup>  1) Depending on heat or cool demand
DES	■ Destratification: To avoid heat build-up under the ceiling, it may be appropriate to switch on the fan when there is no heat or cool demand (either in permanent operation or in on/off operation depending on the temperature stratification, as desired).		Fan ..... speed 2 Heating/cooling ..... off
REC1	<b>Recirculation speed 1</b> The same as REC, but the unit operates only at speed 1 (low air flow rate)		Fan ..... speed 1 Heating/cooling ..... on <sup>1)</sup>  1) Depending on heat or cool demand
DES	■ Destratification: The same as for REC, but the unit operates only at speed 1		Fan ..... speed 1 Heating/cooling ..... off
ST	<b>Standby</b> The unit is ready for operation. The following operating modes are activated if required:		
CPR	■ Cooling protection: If the room temperature drops below the set value for cooling protection, the unit heats up the room in recirculation operation.		Fan ..... speed 2 Heating ..... on
OPR	■ Overheating protection: If the room temperature rises above the set value for overheating protection, the unit cools down the room in recirculation operation.		Fan ..... speed 2 Cooling ..... on
L_OFF	<b>Off (local operating mode)</b> The unit is switched off.		Fan ..... off Heating/cooling ..... off

Table B4: Operating modes TopVent® CP

### 3 Technical data

#### 3.1 Type code

	<b>CP - 6 - J ...</b>
<b>Unit type</b>	TopVent® CP
<b>Unit size</b>	6 or 9
<b>Heating/cooling section</b>	<p>J with coil type J for Belaria® VRF (33)</p> <p>L with coil type L for Belaria® VRF (40)</p> <p>N with coil type N for Belaria® VRF (67)</p>
<b>Further options</b>	

Table B5: Type code

#### 3.2 Application limits

<b>Heating mode</b>				
Fresh air temperature		min.	°C	-25
		max.	°C	24
Air inlet temperature to the heating/cooling coil		min.	°C	5
		max.	°C	30
<b>Cooling mode</b>				
Fresh air temperature		min.	°C	-15
		max.	°C	48
Air inlet temperature to the heating/cooling coil		min.	°C	17
		max.	°C	32
Extract air temperature		max.	°C	50
Moisture content of extract air <sup>1)</sup>		max.	g/kg	15
Supply air temperature		max.	°C	45
Room temperature setpoint		min.	°C	15
Air flow rate	Size 6:	min.	m³/h	3100
	Size 9:	min.	m³/h	5000
Condensate quantity	Size 6:	max.	kg/h	90
	Size 9:	max.	kg/h	150
The units cannot be used in:				
<ul style="list-style-type: none"> <li>■ Damp locations</li> <li>■ Rooms with mineral oil vapours in the air</li> <li>■ Rooms with a high salt content in the air</li> <li>■ Rooms with acidic or alkaline vapours in the air</li> </ul>				
<sup>1)</sup> Units for applications where the humidity in the room increases by more than 2 g/kg are available on request.				

Table B6: Application limits

### 3.3 Electrical connection

#### TopVent® CP

Unit type		CP-6	CP-9
Supply voltage	V AC	3 × 400	3 × 400
Permitted voltage tolerance	%	± 5	± 5
Frequency	Hz	50	50
Connected load	kW	2.1	3.3
Current consumption max.	A	3.7	5.9
Series fuse	A	13.0	13.0
Protection rating	–	IP 54	IP 54

Table B7: Electrical connection TopVent® CP

#### Heat pump Belaria® VRF

Heat pump Belaria®		VRF (33)	VRF (40)	VRF (67)
Supply voltage	V AC	3 × 400	3 × 400	3 × 400
Permitted voltage tolerance	%	± 2	± 2	± 2
Frequency	Hz	50	50	50
Connected load	kW	16.5	20.6	34.0
Current consumption max.	A	26.4	33.1	54.5
Series fuse	A	32.0	40.0	63.0
Inrush current	A	–	–	–

Table B8: Electrical connection Belaria® VRF

### 3.4 Air flow rate

Unit type		CP-6	CP-9
Nominal air flow rate	m³/h	6000	9000
Floor area covered			
<ul style="list-style-type: none"> <li>■ for applications with higher comfort requirements (e.g. production halls, assembly halls, sports halls)</li> </ul>	m²	537	946
<ul style="list-style-type: none"> <li>■ for applications with low comfort requirements (e.g. warehouses, logistics centres)</li> </ul>	m²	953	1674

Table B9: Air flow rate

### 3.5 Air filtration

Filter	Extract air
Class acc. to ISO 16890	ISO ePM <sub>1</sub> 55 %
Class acc. to EN 779	F7
Factory setting of differential pressure switches	300 Pa

Table B10: Air filtration

### 3.6 Technical data of the Belaria® VRF heat pump

Heat pump Belaria®			VRF (33)	VRF (40)	VRF (67)
Heating	Rated heat output <sup>1)</sup>	kW	33.5	40.0	67.0
	Power consumption	kW	7.60	8.51	15.33
	COP	–	4.40	4.70	4.37
	$\eta_{s,h}$	–	173	169	151
	SCOP	–	4.41	4.31	3.86
Cooling	Rated cooling capacity <sup>2)</sup>	kW	33.5	40.0	67.0
	Power consumption	kW	8.90	9.88	18.10
	EER	–	3.75	4.05	3.70
	$\eta_{s,c}$	–	285	246	277
	SEER	–	7.20	6.22	7.00
Refrigerant	–	R410A	R410A	R410A	
Refrigerant fill volume	kg	11	13	22	

1) With fresh air temperature 7 °C / extract air temperature 20 °C  
 2) With fresh air temperature 35 °C / extract air temperature 27 °C / 45% rel. humidity

Table B11: Technical data Belaria® VRF

### 3.7 Sound level

Unit type			CP-6		CP-9	
			indoors	outdoors	indoors	outdoors
Sound pressure level (at a distance of 5 m) <sup>1)</sup>	dB(A)	55	42	59	46	
Total sound power level	dB(A)	77	64	81	68	
Octave sound power level	63 Hz	dB	45	40	47	42
	125 Hz	dB	61	55	65	59
	250 Hz	dB	67	57	70	60
	500 Hz	dB	71	60	73	62
	1000 Hz	dB	74	57	78	61
	2000 Hz	dB	70	56	76	62
	4000 Hz	dB	66	47	71	52
	8000 Hz	dB	65	39	66	40

1) with a hemispherical radiation pattern in a low-reflection room

Table B12: Sound level TopVent® CP

Heat pump Belaria®			VRF (33)	VRF (40)	VRF (67)
Sound pressure level (at a distance of 5 m)	dB(A)		59.0	63.0	67.0
Total sound power level <sup>1)</sup>	dB(A)		81.0	85.0	89.0
Octave sound pressure level <sup>2)</sup>	63 Hz	dB	62.6	63.5	66.5
	125 Hz	dB	60.6	61.2	65.0
	250 Hz	dB	61.0	60.8	65.0
	500 Hz	dB	58.3	57.5	63.0
	1000 Hz	dB	55.5	56.9	57.0
	2000 Hz	dB	46.8	47.5	52.0
	4000 Hz	dB	43.9	45.1	51.0
	8000 Hz	dB	43.5	44.1	50.2

1) The values given are maximum values; the noise level is fluctuating due to scroll technology.  
 2) Measured at a distance of 1 m in front of the unit and 1.3 m above the floor in a semi-anechoic chamber.

Table B13: Sound level Belaria® VRF

### 3.8 Heat output

$t_F$ °C	$t_{room}$ °C	Type CP-	Q kW	$H_{max}$ m	$t_S$ °C	$P_{HP}$ kW
-5	16	6-J	32.5	13.5	34.1	9.2
		6-L	38.9	12.5	37.2	10.3
		9-N	65.1	12.7	39.5	18.6
	20	6-J	31.0	13.8	37.3	9.0
		6-L	37.0	12.9	40.3	10.0
		9-N	61.9	13.0	42.4	18.1
-15	16	6-J	28.6	14.2	32.2	9.2
		6-L	34.2	13.2	34.9	10.3
		9-N	57.2	13.4	36.9	18.5
	20	6-J	28.5	14.3	36.1	9.4
		6-L	34.0	13.3	38.8	10.5
		9-N	57.0	13.5	40.8	18.9
Legend: $t_F$ = Fresh air temperature $t_{room}$ = Room air temperature Q = Heat output $H_{max}$ = Maximum mounting height $t_S$ = Supply air temperature $P_{HP}$ = Power consumption of the heat pump						
Reference: ■ At room air temperature 16 °C: extract air temperature 18 °C ■ At room air temperature 20 °C: extract air temperature 22 °C						

Table B14: Heat output TopVent® CP

### 3.9 Cooling capacity

$t_F$ °C	$t_{room}$ °C	$RH_{room}$ %	Type CP-	$Q_{sen}$ kW	$Q_{tot}$ kW	$t_S$ °C	$m_C$ kg/h	$P_{HP}$ kW
28	22	50	6-J	20.6	26.4	13.8	8.6	5.0
			6-L	24.6	31.5	11.8	10.2	5.7
			9-N	41.2	52.4	10.4	16.4	10.3
		70	6-J	19.2	32.7	14.5	19.8	6.8
			6-L	21.8	37.0	13.2	22.4	7.3
			9-N	36.4	61.6	12.0	37.1	13.3
32	26	50	6-J	23.3	34.0	16.5	15.8	8.1
			6-L	27.7	40.6	14.3	18.9	9.2
			9-N	47.1	68.0	12.5	30.7	16.9
		70	6-J	17.6	34.9	19.3	25.5	8.2
			6-L	20.9	41.7	17.6	30.5	9.3
			9-N	35.5	69.9	16.3	50.3	17.0
Legend: $t_F$ = Fresh air temperature $t_{room}$ = Room air temperature $RH_{room}$ = Relative humidity of the room air $Q_{sen}$ = Sensible cooling capacity $Q_{tot}$ = Total cooling capacity $t_S$ = Supply air temperature $m_C$ = Condensate quantity $P_{HP}$ = Power consumption of the heat pump								
Reference: ■ At room air temperature 22 °C: extract air temperature 24 °C ■ At room air temperature 26 °C: extract air temperature 28 °C								

Table B15: Cooling capacity TopVent® CP




3.10 Product information according to ErP

Model	TopVent® CP			Unit
	6-J	6-L	9-N	
Cooling capacity (sensible) ( $P_{rated,c}$ )	21.8	27.9	48.1	kW
Cooling capacity (latent) ( $P_{rated,c}$ )	9.7	9.7	14.9	kW
Heating capacity ( $P_{rated,h}$ )	33.7	40.4	67.4	kW
Total electric power input ( $P_{elec}$ )	1.4	1.4	2.6	kW
Sound power level ( $L_{WA}$ )	77.0	77.0	81.0	dB
Contact details	Hoval Aktiengesellschaft Austrasse 70, 9490 Vaduz, Liechtenstein www.hoval.com			

Table B16: Product information according to Commission Regulation (EU) 2016/2281, Table 13

3.11 Dimensions and weights

TopVent® CP

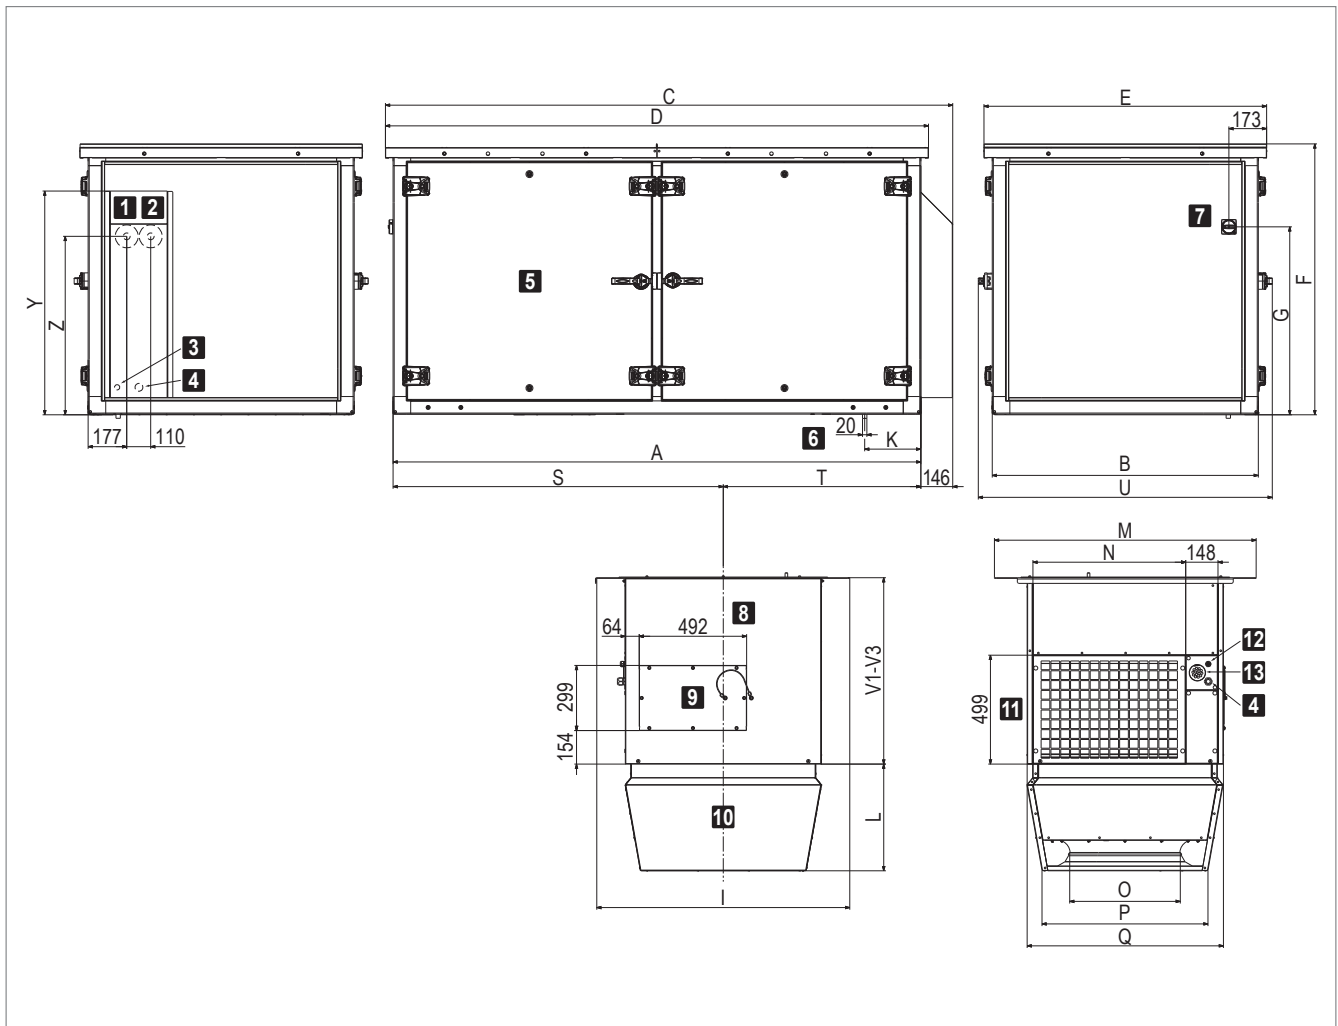

<b>1</b> Feedthrough for gas line (Ø 23...75 mm)	<b>8</b> Connection module
<b>2</b> Feedthrough for liquid line (Ø 23...75 mm)	<b>9</b> Installation lid
<b>3</b> Cable feedthrough for signal cables heat pump	<b>10</b> Air-Injector
<b>4</b> Cable feedthrough for power supply heat pump	<b>11</b> Extract air grille
<b>5</b> Roof unit	<b>12</b> Cable feedthrough for power supply TopVent®
<b>6</b> Condensate drain	<b>13</b> Cable feedthrough for signal cables
<b>7</b> Isolation switch	

Table B17: TopVent® CP dimensional drawing (dimensions in mm)

Unit type		CP-6	CP-9
A	mm	2420	2725
B	mm	1220	1420
C	mm	2601	2906
D	mm	2490	2795
E	mm	1290	1490
F	mm	1239	1439
G	mm	862	962
I	mm	1160	1360
K	mm	257	292
L	mm	490	570
M	mm	1200	1400
N	mm	701	901
O	mm	500	630
P	mm	767	937
Q	mm	900	1100
S	mm	1514	1684
T	mm	906	1041
U	mm	1348	1548
V1	mm	850	850
V2	mm	1300	1300
V3	mm	1750	1750
Y	mm	1025	1125
Z	mm	818	935

Table B18: TopVent® CP dimensions

Unit type		CP-6	CP-9
Gas line connection	mm	∅ 28	∅ 28
Liquid line connection	mm	∅ 12	∅ 22

Table B19: Refrigerant pipe connections in the roof unit

Unit type		CP-6-J	CP-9-N
<b>Total</b>	<b>kg</b>	<b>672</b>	<b>869</b>
Roof unit	kg	530	687
Below-roof unit	kg	142	182
Air-Injector	kg	40	57
Connection module V1	kg	102	125
Additional weight V2	kg	+ 42	+ 50
Additional weight V3	kg	+ 85	+ 101

Table B20: TopVent® CP weights

Belaria® VRF (33, 40)

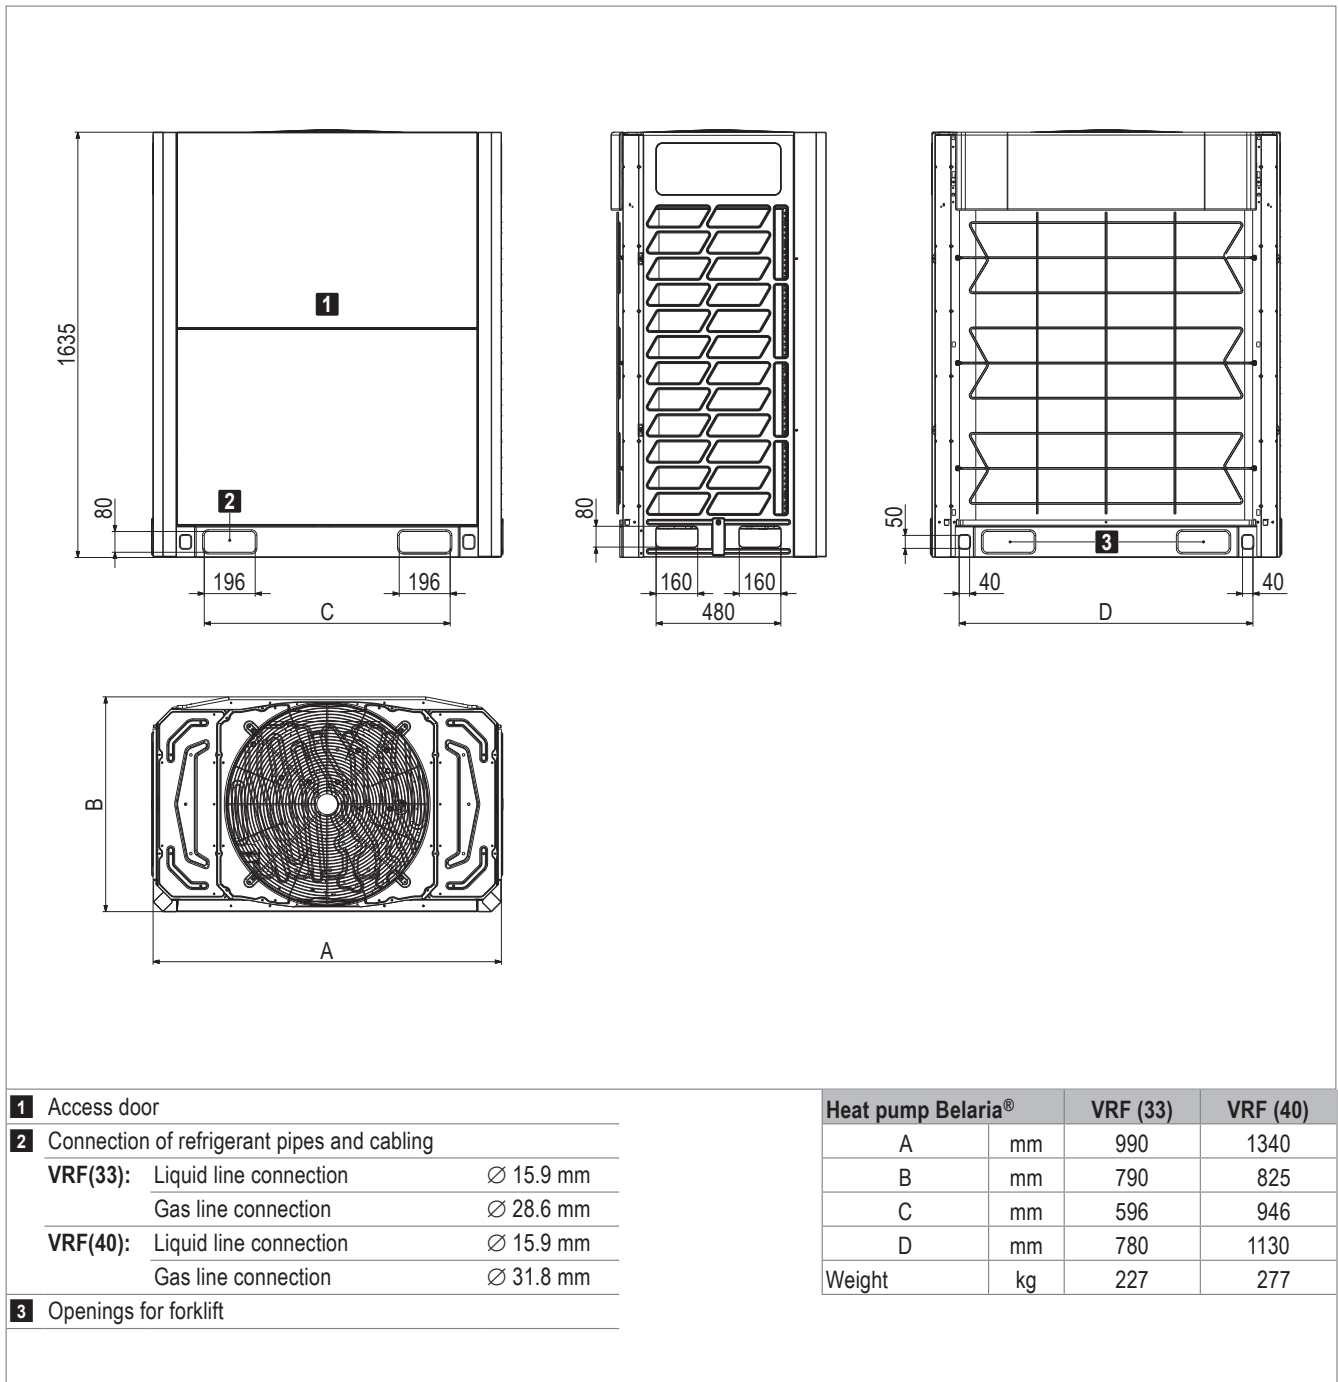


Fig. B4: Dimensions and weights Belaria® VRF (33, 40)

Belaria® VRF (67)

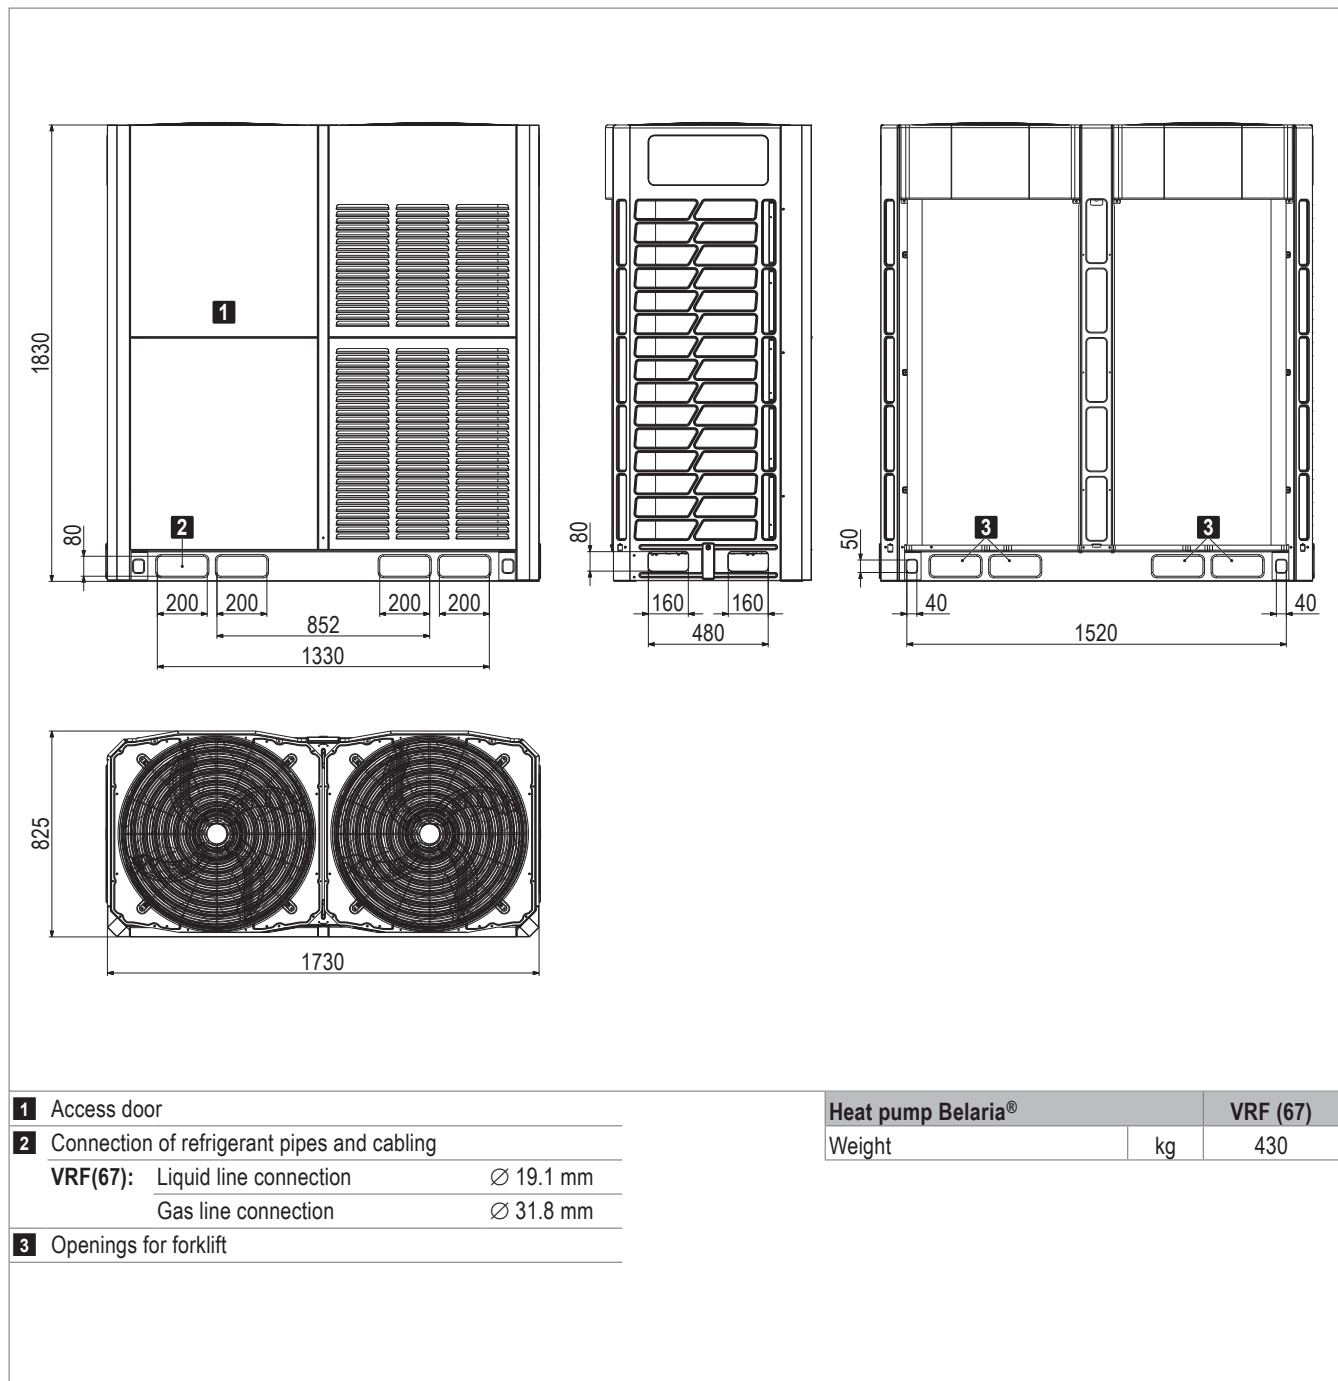


Fig. B5: Dimensions and weights Belaria® VRF (67)

## 4 Specification texts

### 4.1 TopVent® CP

Recirculation unit with reversible heat pump system for heating and cooling spaces up to 25 m in height; configured as roof unit; equipped with highly efficient air distributor.

The unit consists of the following components:

- Roof unit (with access to all components relevant for maintenance)
- Below-roof unit:
  - Connection module
  - Air-Injector
- Optional components

The heat pump system consists of the following components:

- Heat pump Belaria® VRF (33, 40, 67)
- Conversion board
- Expansion valve

The TopVent® CP unit complies with all the requirements of the Ecodesign Directive 2009/125/EC relating to environmentally friendly design of ventilation systems. It is a system of the 'fan coil unit' type, provided for in Commission Regulation (EU) 2016/2281.

---

#### Roof unit

---

Self-supporting casing, construction made of thermally decoupled aluminium profile frame system with nylon connecting elements and panels made of magnesium-zinc sheet, additional rain canopy made of aluminium:

- Weatherproof, corrosion resistant, impact resistant, air-tight
- Low flammability, double-shelled, without heat bridges, with highly efficient insulation made of expanded polystyrene
- Hygienic and easy to maintain because of smooth interior surfaces and large access doors with ageing-resistant, silicone-free sealing materials

The roof unit includes:

#### Fan

Configured as maintenance-free, directly driven radial fan with high-efficiency EC motor, backwards-curved, 3D contoured blades and free-running rotor made of a high-performance composite material, aerodynamically optimised inflow nozzle, low-noise, with integrated overload protection.

#### Heating/cooling section

The heating/cooling section contains

- The highly efficient heating/cooling coil consisting of seamless copper pipes with pressed-on, optimised and profiled aluminium fins, manifold made of copper and injection distributor
- The pull-out condensate separator with collecting channel, made of high-quality corrosion-resistant material, with a downslope in all directions for rapid draining
- The condensate drain on the roof via siphon

#### Extract air filter

Pleated cell filter of filter class ePM<sub>1</sub> 55% according to ISO 16890, consisting of micro glass with synthetic lamination as handle protection, pleat pack completely encapsulated to prevent leakage, frame made of recycled plastic, fully incinerable, including differential pressure switch for filter monitoring.

#### Unit control box

Control box for connection of the power supply and housing the control components that facilitate energy-optimised operation, controlled by the control system TopTronic® C. Plastic casing, protection rating IP 56. The following components are installed:

- Circuit board with all required electrical components, unit controller (clipped on)

The circuit board is fitted with push-in terminals facilitating easy installation of the connection cables. All components in the unit control box as well as sensors, actuators in the unit and the isolation switch attached to the outside of the unit are fully factory-wired.

Power supply, bus connection, connection to Air-Injector actuator to be installed on site.

#### Access openings

Defined side walls of the roof unit configured as inspection doors for easy access to all components relevant for maintenance. The hinges allow opening with an opening angle of 90° or complete removal of the inspection doors.

#### Heat pump connection

Side wall of the roof unit designed with:

- Pipe feedthroughs for the refrigerant pipes, equipped with grommets for airtight sealing
- Cable feedthrough for signal cable
- Protection hood for the connections, supplied loose with the appropriate connecting screws

On-site: Installation and insulation of the pipelines in the roof unit, heat pump signal cable, mounting of the protection hood to the roof unit.

---

 Below-roof unit
 

---

**Connection module V1**

Housing made of magnesium zinc sheet, air-tight, flame retardant, with highly efficient insulation made of expanded polystyrene, hygienic and easy to maintain because of smooth interior surfaces and ageing-resistant, silicone-free sealing materials; configured with:

- Extract air grille
- Cable feedthroughs for the electric supply

**Connection module V2 / V3 (variant)**

The connection module is extended for adapting to the local installation situation.

**Design with Air-Injector**

Housing made of magnesium zinc sheet, air-tight, hygienic and easy to maintain because of ageing-resistant, silicone-free sealing materials, internally insulated with closed-cell polyethylene foam, with:

- Vortex air distributor with concentric outlet nozzle, adjustable vanes and integrated absorber hood
- Actuator for infinitely variable adjustment of the air distribution from vertical to horizontal
  - for draught-free air distribution in the hall under changing operating conditions
  - for the rapid and large-area reduction of temperature stratification in the room through induction of secondary air and strong mixing of the room air with supply air

Actuator installed in the connection module for easy access from the roof.

**Design without Air-Injector (variant)**

Unit configured without vortex air distributor for connection to an on-site supply air duct and air distribution within the building.

**Air distribution box (variant)**

Housing made of magnesium zinc sheet, air-tight, hygienic and easy to maintain because of ageing-resistant, silicone-free sealing materials, insulated on the inside with closed-cell polyethylene foam; configured with 2 collars as connecting piece to the on-site air distribution system.

---

 Options for the unit
 

---

**Coating of roof unit**

Side walls of the roof unit made of coated zinc sheet (anthracite grey, similar to RAL 7016).

**Paint finish of below-roof unit**

Exterior painting of the below-roof unit in choice of RAL colour.

**Supply air silencer**

Designed as a sound-absorbing mat made of melamine foam; hygienically perfect with carbon fibre coating; mounted in the roof unit; insertion loss 3 dB.

**Roof frame**

Consisting of 4 load-bearing side walls made of galvanised sheet steel with fastening rails for the roof foil, supplied loose with the matching connecting screws.

Assembly, insulation, integration in the roof structure on site.

---

 Heat pump system
 

---

Highly efficient air-to-air heat pump system in split design with continuously modulating inverter technology for precise capacity control, reversible for heating and cooling the supply air, consisting of the following components:

**Heat pump Belaria® VRF (33, 40, 67)**

- Compact unit for outdoor installation
- Painted casing RAL 7044 (silk grey) made from galvanised sheet steel
- Variable-speed inverter scroll compressor
  - 1 × for Belaria® VRF (33, 40)
  - 2 × for Belaria® VRF (67)
- Speed-controlled fan
  - 1 × for Belaria® VRF (33, 40)
  - 2 × for Belaria® VRF (67)
- Coated Al/Cu finned-tube evaporator or condenser
- Electronic expansion valve (for heating mode)
- 4-way valve for defrosting
- Refrigerant shut-off valves
- Refrigerant R410A
- Terminal box

**Conversion board**

Printed circuit board assembly for communication between heat pump, expansion valve and indoor climate unit and for recording the temperatures of the refrigerant upstream, in and downstream of the heating/cooling coil. Mounted and fully wired in the roof unit.

- 1 × for Belaria® VRF (33, 40)
- 2 × for Belaria® VRF (67)

**Expansion valve**

Electronic expansion valve for cooling mode, supplied loose.

- 1 × for Belaria® VRF (33, 40)
- 2 × for Belaria® VRF (67)

---

Options for the heat pump

---

**Rear protection hood**

Hood made of magnesium zinc sheet, powder-coated (RAL 7044 silk grey), for protection against wind and snow.  
On-site: Mounting to the heat pump.

**Side protection hood**

Hood made of magnesium zinc sheet, powder-coated (RAL 7044 silk grey), for protection against wind and snow.  
On-site: Mounting to the heat pump.

**Front protection hood**

Hood made of magnesium zinc sheet, powder-coated (RAL 7044 silk grey), for protection against wind and snow.  
On-site: Mounting to the heat pump.

4.2 TopTronic® C – System control

Zone-based control system for the energy-optimised operation of decentralised Hoval indoor climate systems. Maximum system size per system bus: 64 control zones with up to 10 supply and extract air handling units or supply air handling units and 10 recirculation air handling units each.

**Zone allocation**

Configured in advance for the customer at the factory:

	Room designation	Unit type
Zone 1:	_____	_____
Zone 2:	_____	_____
...		

**System structure**

- Zone control panel made of coated sheet steel (light grey RAL 7035), ... x ... x ... mm, with:
  - System operator terminal
  - Fresh air temperature sensor
  - 1 zone controller and 1 room temperature sensor per zone (expandable to up to 4 room temperature sensors per zone)
  - Safety relay
  - Electrical cabinet internally pre-wired, all components routed to terminals
- Zone bus: as serial bus for communication with all controllers in one control zone, with robust bus protocol via shielded, twisted bus cable (provided by the client)
- Unit controller: installed in the particular indoor climate unit, works autonomously according to the specifications of the zone controller
- Heating/cooling demand per zone with feedback monitoring

**Functions, standard**

- Zone-based autonomous room control. Temperature and ventilation control separately adjustable for each zone
- Room temperature control via room-supply air cascade by means of energy-optimised double sequence control with priority circuit for energy recovery (supply and extract air handling units)
- Intelligent automatic heating to reach the desired room temperature at the switching time
- 5 adjustable room temperature set values per zone:
  - Cooling protection (lower setpoint in standby)
  - Overheating protection (upper setpoint in standby)
  - Room set value winter
  - Room set value summer
  - Night cooling set value (free cooling) (supply and extract air handling units, supply air units)
- Destratification mode for even temperature distribution



- Main operating modes of supply and extract air handling units:

VE .... Ventilation, infinitely variably adjustment

AQ.... Air quality, automatic control with Hoval combination sensor (option), optional reference variable:

- CO<sub>2</sub> or VOC
- Air humidity (optimised dehumidification mode)

REC . Recirculation, infinitely variably adjustment

DES.. Destratification

EA .... Exhaust air, infinitely variably adjustment

SA .... Supply air, infinitely variably adjustment

ST .... Standby

- Main operating modes of supply air units:

REC . Recirculation, infinitely variably adjustment

DES.. Destratification

SA .... Supply air, infinitely variably adjustment

With Hoval combination sensor (option) also demand-driven control of the fresh air ratio, optional reference variable CO<sub>2</sub> or VOC

ST .... Standby

- Main operating modes of recirculated air units:

REC . Recirculation, infinitely variably adjustment

DES.. Destratification

ST .... Standby

- Forced heating (construction site heating) can be activated on each device before completion of the overall system (activation by Hoval service technician)
- Control of draught-free air distribution with the Hoval Air-Injector: the discharge direction is adjusted infinitely variably and automatically according to the respective operating condition and the existing temperatures (heating/cooling).

#### Operation

- TopTronic® C-ST system operator terminal: touch panel for visualisation and control of all Hoval indoor climate units registered on the bus

#### Options for operation

- Activation of the system operator terminal for VNC access, for visualisation on customer's PC
- TopTronic® C-ZT as zone operator terminal: for simple on-site operation of a control zone
- Manual operating selector switches
- Manual operating selector buttons
- Operating of the units via building management system via standardised interfaces:
  - BACnet
  - Modbus IP
  - Modbus RTU

#### Alarms, protection

- Central alarm management with registration of all alarms (timestamp, priority, status) in an alarm list and alarm memory of the last 50 alarms; forwarding via e-mail can be set in the parameters.
- If there is a failure of communication, bus stations, sensor systems or supply media, each part of the system transitions to a protection mode which safeguards operation.
- A maintenance mode implemented in the control algorithm for testing all physical data points and alarms guarantees high reliability.
- Pre-programmed data points retrievable via logger function for 1 year

#### Options for the zone control panel

- Alarm lamp
- Socket

#### Per zone:

- The change-over between heating and cooling can be either automatic or manual
  - Cooling lock switch for automatic changeover
  - Heating/cooling switch for manual changeover
- Additional room temperature sensors (max. 3)
- Combination sensor room air quality, temperature and humidity
- Combination sensor fresh air temperature and humidity
- Transfer of actual values and setpoints from external systems (0...10 V; 4 - 20 mA)
- Load shedding input
- Signal for external extract air fan
- Operating selector switches on terminal
- Operating selector button on terminal
- Control of distributor pump, incl. power supply

#### Power distribution:

- Circuit breakers and output terminals for Hoval indoor climate units
- Safety relay (4-pin)





**TopVent® SP**

Supply air units configured as roof units with efficient air distribution for ventilating, heating and cooling spaces up to 25 m in height with decentralised heat pump

1 Use . . . . .	30
2 Construction and operation . . . . .	30
3 Technical data . . . . .	38
4 Specification texts . . . . .	47



## 1 Use

### 1.1 Intended use

TopVent® SP units are supply air units intended for ventilation, heating and cooling spaces up to 25 m in height with decentralised heat pump. They have the following functions:

- Heating and cooling with heat pump
- Fresh air supply
- Mixed air operation
- Recirculation operation
- Air distribution and destratification with adjustable Air-Injector
- Air filtration

The TopVent® SP unit complies with all the requirements of the Ecodesign Directive 2009/125/EC relating to environmentally friendly design of ventilation systems. It is a system of the 'non-residential ventilation unit' (NRVU) and 'unidirectional ventilation unit' (UVU) type, provided for in Commission Regulation (EU) 1253/2014.

The Hoval TopTronic® C integrated control system ensures energy-efficient, demand-based operation of Hoval indoor climate systems.

Intended use also includes compliance with the operating instructions. Any usage over and above this use is considered to be not as intended. The manufacturer can accept no liability for damage resulting from improper use.

### 1.2 User group

The units are only allowed to be installed, operated and maintained by authorised and instructed personnel who are well acquainted with the units and are informed about possible dangers.

## 2 Construction and operation

TopVent® SP units consist of the following components:

### Roof unit

The self-supporting housing for mounting on the roof frame is of double-shell construction; this ensures good thermal insulation and high stability. The roof unit includes the following components:

- Fan
  - Heating/cooling section
    - Heating/cooling coil for heating and cooling the supply air
    - Condensate separator
  - Fresh air and extract air filters
  - Control dampers
  - Unit control box (part of the TopTronic® C control system)
- All components are easily accessible for maintenance work through large access openings.

### Below-roof unit

The below-roof unit comprises the following components:

- Connection module:
 

The connection module serves as an air duct through the roof and for drawing in extract air from the hall through the extract air grille. To enable easy adaptation to local installation conditions, the connection module is available in 3 lengths.
- Air-Injector:
 

The Air-Injector is a patented, infinitely variable vortex air distributor for the draught-free introduction of air into the hall under changing operating conditions.

### Heat pump system


The reversible air/air heat pump system in split design generates both heat and cold decentrally. It consists of the following components:

- Belaria® VRF heat pump with continuously modulating inverter technology for precise output control and high efficiency
- Conversion board for communication between heat pump, expansion valve and indoor climate unit (mounted in the roof unit)
- Expansion valve (supplied loose)

TopVent® SP units are available in 2 unit sizes and a total of 3 output levels:

Unit size	Heat pump	Conversion board and expansion valve
SP-6	Belaria® VRF (33)	1 ×
	Belaria® VRF (40)	1 ×
SP-9	Belaria® VRF (67)	2 ×


Table C1: Availability

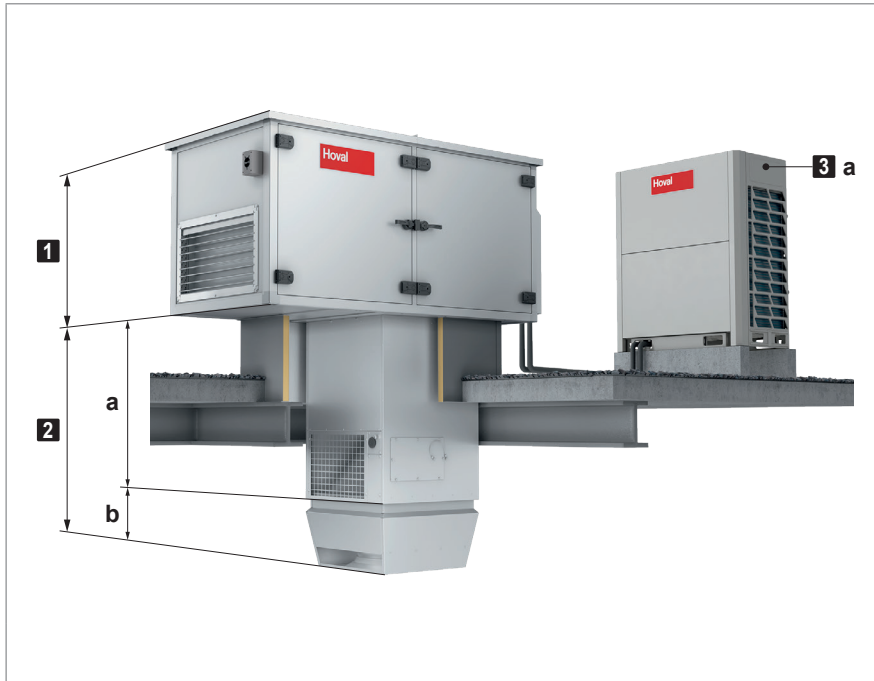

- 1** Roof unit
- 2** Below-roof unit
  - a** Connection module
  - b** Air-Injector
- 3** Heat pump system
  - a** Heat pump Belaria® VRF
  - b** Conversion board (mounted in the roof unit)
  - c** Expansion valve (supplied loose)


Fig. C1: TopVent® SP components

2.1 Construction and operation TopVent® SP-6

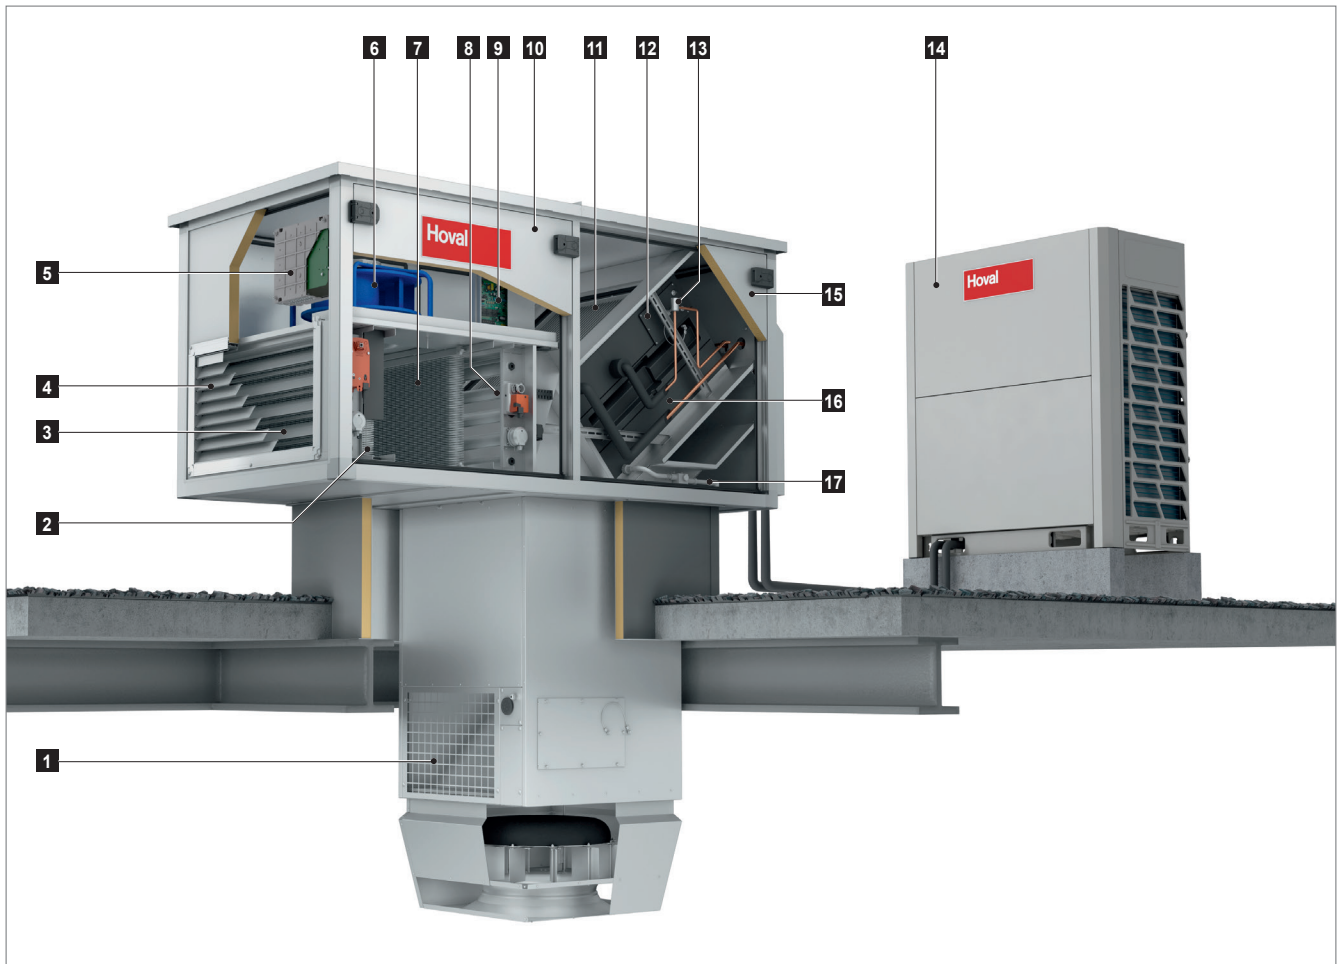

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li><b>1</b> Extract air grille</li> <li><b>2</b> Fresh air filter</li> <li><b>3</b> Fresh air damper</li> <li><b>4</b> Weather protection</li> <li><b>5</b> Unit control box</li> <li><b>6</b> Fan</li> <li><b>7</b> Extract air filter</li> <li><b>8</b> Recirculation damper</li> <li><b>9</b> Conversion board</li> </ul> | <ul style="list-style-type: none"> <li><b>10</b> Fan access door</li> <li><b>11</b> Heating/cooling coil</li> <li><b>12</b> Access panel, liquid temperature sensor</li> <li><b>13</b> Expansion valve (supplied loose)</li> <li><b>14</b> Heat pump Belaria® VRF (33, 40)</li> <li><b>15</b> Refrigerant connection access door</li> <li><b>16</b> Condensate separator</li> <li><b>17</b> Condensate drain</li> </ul> |
|--|---|


Fig. C2: Construction TopVent® SP-6

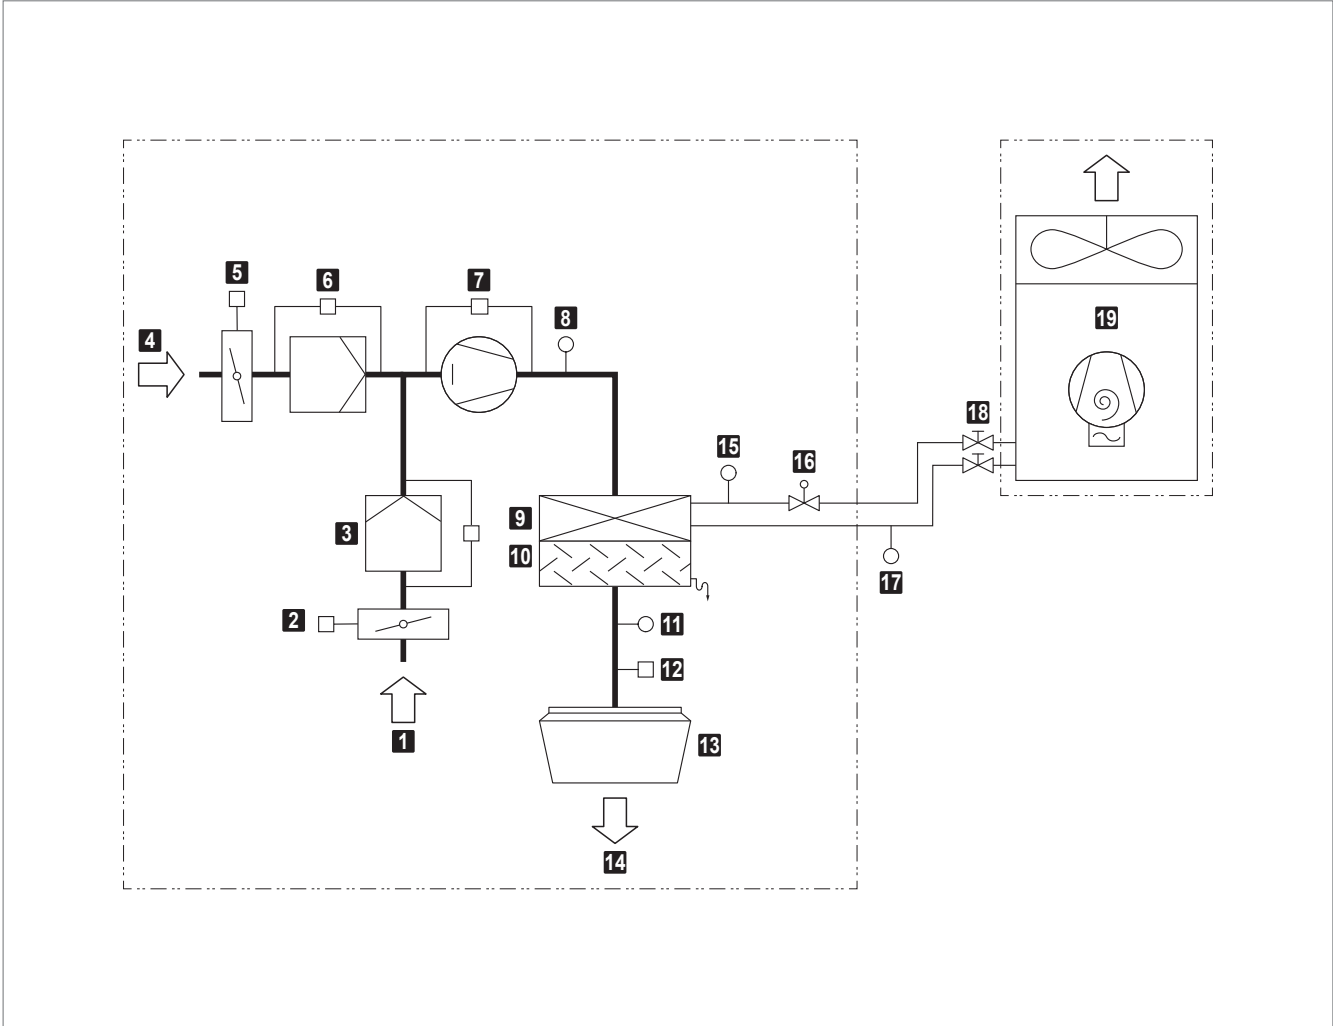

<b>1</b> Extract air	<b>11</b> Supply air temperature sensor
<b>2</b> Recirculation damper with actuator	<b>12</b> Actuator Air-Injector
<b>3</b> Extract air filter with differential pressure switch	<b>13</b> Air-Injector
<b>4</b> Fresh air	<b>14</b> Supply air
<b>5</b> Fresh air damper with actuator	<b>15</b> Liquid temperature sensor
<b>6</b> Fresh air filter with differential pressure switch	<b>16</b> Expansion valve (supplied loose)
<b>7</b> Fan with flow rate monitoring	<b>17</b> Gas temperature sensor (supplied loose)
<b>8</b> Mixed air temperature sensor	<b>18</b> Shut-off valves
<b>9</b> Heating/cooling coil	<b>19</b> Heat pump Belaria® VRF (33, 40)
<b>10</b> Condensate separator	

Table C2: Function diagram TopVent® SP-6


2.2 Construction and operation TopVent® SP-9

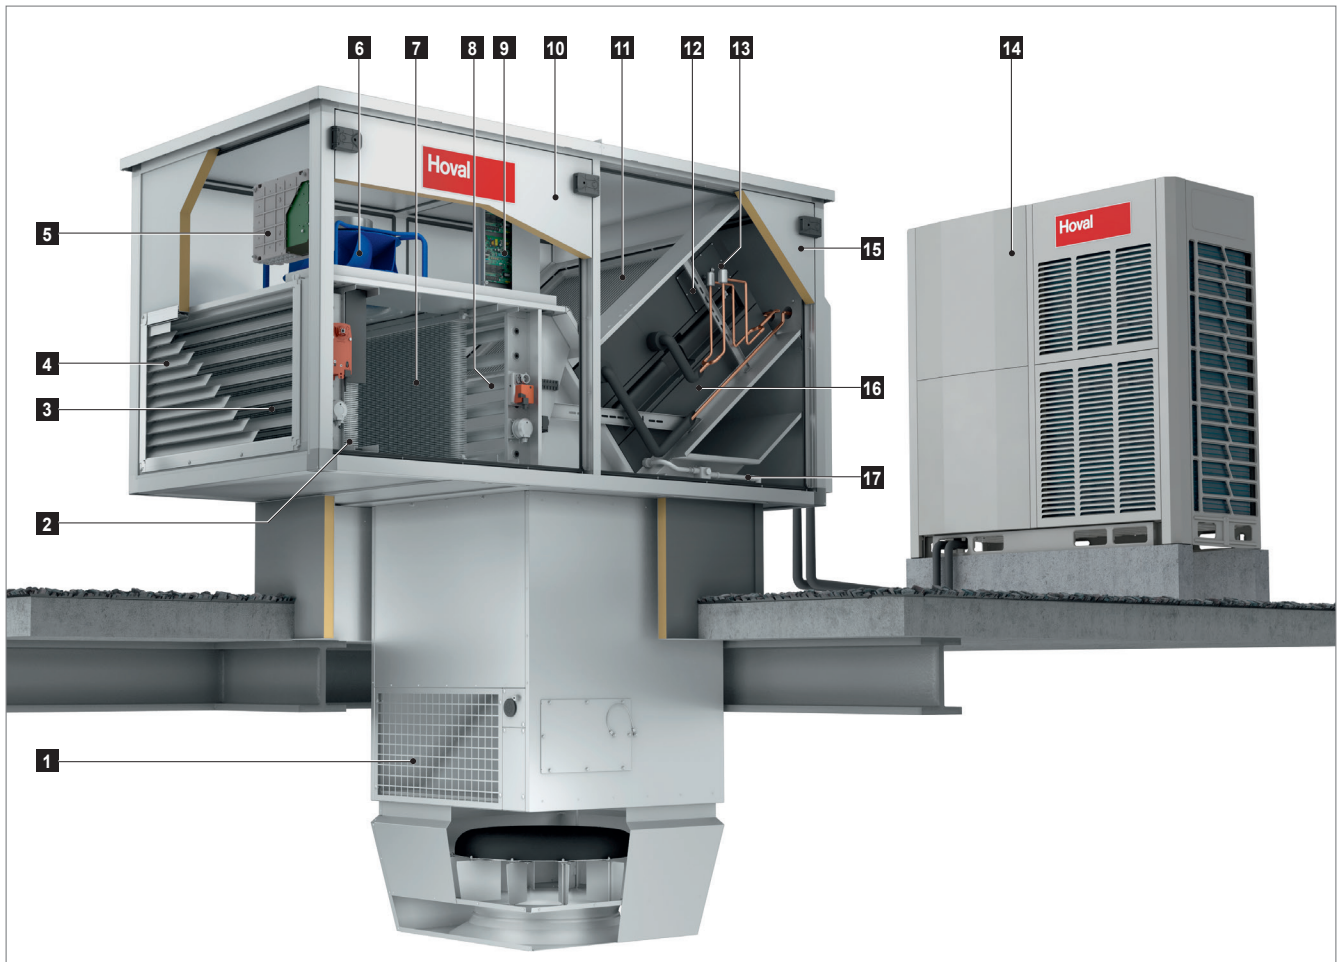

- |                               |   |
|-------------------------------|---|
| <b>1</b> Extract air grille   | <b>10</b> Fan access door                         |
| <b>2</b> Fresh air filter     | <b>11</b> Heating/cooling coil                    |
| <b>3</b> Fresh air damper     | <b>12</b> Access panel, liquid temperature sensor |
| <b>4</b> Weather protection   | <b>13</b> Expansion valves (supplied loose)       |
| <b>5</b> Unit control box     | <b>14</b> Heat pump Belaria® VRF (67)             |
| <b>6</b> Fan                  | <b>15</b> Refrigerant connection access door      |
| <b>7</b> Extract air filter   | <b>16</b> Condensate separator                    |
| <b>8</b> Recirculation damper | <b>17</b> Condensate drain                        |
| <b>9</b> Conversion boards    |   |

Fig. C3: Construction TopVent® SP-9



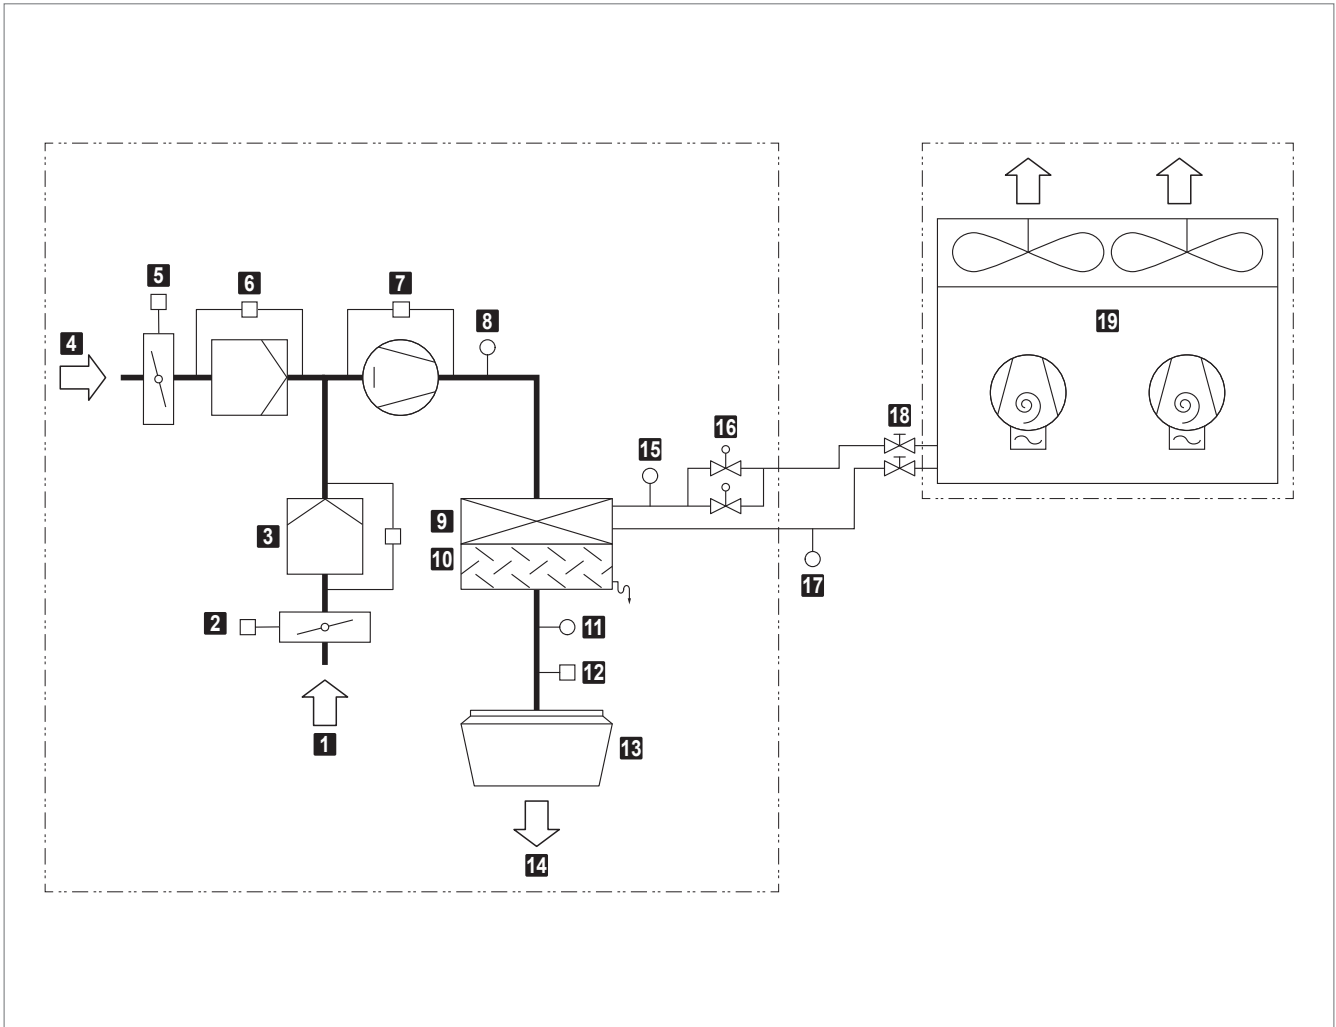

<b>1</b> Extract air	<b>11</b> Supply air temperature sensor
<b>2</b> Recirculation damper with actuator	<b>12</b> Actuator Air-Injector
<b>3</b> Extract air filter with differential pressure switch	<b>13</b> Air-Injector
<b>4</b> Fresh air	<b>14</b> Supply air
<b>5</b> Fresh air damper with actuator	<b>15</b> Liquid temperature sensor
<b>6</b> Fresh air filter with differential pressure switch	<b>16</b> Expansion valves (supplied loose)
<b>7</b> Fan with flow rate monitoring	<b>17</b> Gas temperature sensor (supplied loose)
<b>8</b> Mixed air temperature sensor	<b>18</b> Shut-off valves
<b>9</b> Heating/cooling coil	<b>19</b> Heat pump Belaria® VRF (67)
<b>10</b> Condensate separator	

Table C3: Function diagram TopVent® SP-9



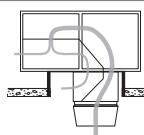
### 2.3 Operating modes

TopVent® SP operates in the following modes:

- Supply air speed 2
- Supply air speed 1
- Recirculation
- Recirculation speed 1
- Standby

The TopTronic® C control system regulates these operating modes automatically for each control zone in accordance with the specifications in the calendar. The following points also apply:

- The operating mode of a control zone can be switched over manually.
- Each TopVent® unit can operate individually in a local operating mode: Off, Supply air speed 2, Supply air speed 1, Recirculation, Recirculation speed 1.

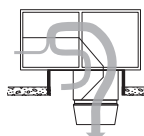Code	Operating mode		Description
SA2	<b>Supply air speed 2</b> The fan runs at speed 2 (high air flow rate). The room temperature set value day is active. The unit blows fresh air into the room. The control of the fresh air ratio can be selected:		
	<u>Fixed fresh air ratio:</u> The unit operates continuously with the set fresh air ratio. The system controls the heating/cooling according to the heating/cooling demand.		Fan ..... speed 2 Fresh air damper..... 10 % open <sup>1)</sup> Heating/cooling ..... 0-100 % <sup>2)</sup>  1) Percentage is adjustable 2) Depending on heat or cool demand
	<u>Variable fresh air ratio:</u> <ul style="list-style-type: none"> <li>■ The system regulates the fresh air ratio depending on the temperature. The set fresh air ratio serves as a minimum value. If the temperature conditions permit, more fresh air is brought into the room and used for free heating or free cooling. Only when this potential is fully utilised is the heating/cooling switched on via the coil if required.</li> <li>■ If a combination sensor for room air is installed (option), the system additionally controls the fresh air ratio depending on the air quality.                             <ul style="list-style-type: none"> <li>– If there is no heat demand, the fresh air damper is opened 100% if the indoor air quality is too poor.</li> <li>– When the setpoint value for the CO<sub>2</sub> or VOC content of the room air is reached, the fresh air damper closes again to the set minimum value.</li> </ul> </li> </ul>		Fan ..... speed 2 Fresh air damper..... MIN-100 % open <sup>1)</sup> Heating/cooling ..... 0-100 % <sup>2)</sup>  1) A minimum value can be set 2) Depending on heat or cool demand
<div style="border: 1px solid black; padding: 5px; margin-top: 10px;">  <b>Notice</b>                      In order to save heating energy, the unit only operates with the set minimum fresh air rate when heat is required.                 </div>			
SA1	<b>Supply air speed 1</b> The same as SA2, but the fan operates at speed 1 (low air flow rate)		Fan ..... speed 1 Fresh air damper..... MIN-100 % open <sup>1)</sup> Heating/cooling ..... 0-100 %  1) Fixed or variable (see above)

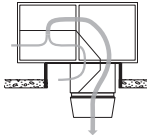
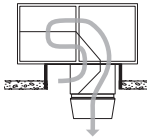
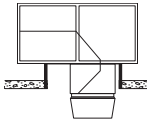
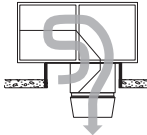

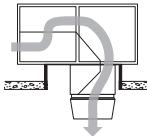
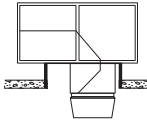
Code	Operating mode		Description
<b>REC</b>	<b>Recirculation</b> On/Off operation: during heat or cool demand, the unit draws in room air, heats or cools it and blows it back into the room. The room temperature set value day is active.		Fan ..... speed 1/2 <sup>1)</sup> Fresh air damper..... closed Heating/cooling ..... on <sup>1)</sup>  1) Depending on heat or cool demand
DES	<ul style="list-style-type: none"> <li>■ Destratification: To avoid heat build-up under the ceiling, it may be appropriate to switch on the fan when there is no heat or cool demand (either in permanent operation or in on/off operation depending on the temperature stratification, as desired).</li> </ul>		Fan ..... speed 2 Fresh air damper..... closed Heating/cooling ..... off
<b>REC1</b>	<b>Recirculation speed 1</b> The same as REC, but the unit operates only at speed 1 (low air flow rate)		Fan ..... speed 1 Fresh air damper..... closed Heating/cooling ..... on <sup>1)</sup>  1) Depending on heat or cool demand
DES	<ul style="list-style-type: none"> <li>■ Destratification: The same as for REC, but the unit operates only at speed 1</li> </ul>		Fan ..... speed 1 Fresh air damper..... closed Heating/cooling ..... off
<b>ST</b>	<b>Standby</b> The unit is ready for operation. The following operating modes are activated if required:		
CPR	<ul style="list-style-type: none"> <li>■ Cooling protection: If the room temperature drops below the set value for cooling protection, the unit heats up the room in recirculation operation.</li> </ul>		Fan ..... speed 2 Fresh air damper..... closed Heating ..... on
OPR	<ul style="list-style-type: none"> <li>■ Overheating protection: If the room temperature rises above the set value for over-heating protection, the unit cools down the room in recirculation operation.</li> </ul>		Fan ..... speed 2 Fresh air damper..... closed Cooling..... on
NCS	<ul style="list-style-type: none"> <li>■ Night cooling: If the room temperature exceeds the set value for night cooling and the current fresh air temperature permits it, the unit blows cool fresh air into the room and extracts warmer room air.</li> </ul>		Fan ..... speed 2 Fresh air damper..... open Heating/cooling ..... off
<b>L_OFF</b>	<b>Off (local operating mode)</b> The unit is switched off. Frost protection for the unit remains active.		Fan ..... off Fresh air damper..... closed Heating/cooling ..... off

Table C4: Operating modes TopVent® SP

### 3 Technical data

#### 3.1 Type code

	<b>SP - 6 - J ...</b>
<b>Unit type</b>	TopVent® MP
<b>Unit size</b>	6 or 9
<b>Heating/cooling section</b>	<p>J with coil type J for Belaria® VRF (33)</p> <p>L with coil type L for Belaria® VRF (40)</p> <p>N with coil type N for Belaria® VRF (67)</p>
<b>Further options</b>	

Table C5: Type code

#### 3.2 Application limits

<b>Heating mode</b>				
Fresh air temperature		min.	°C	-25
		max.	°C	24
Air inlet temperature to the heating/cooling coil		min.	°C	5
		max.	°C	30
<b>Cooling mode</b>				
Fresh air temperature		min.	°C	-15
		max.	°C	48
Air inlet temperature to the heating/cooling coil		min.	°C	17
		max.	°C	32
Extract air temperature		max.	°C	50
Moisture content of extract air <sup>1)</sup>		max.	g/kg	15
Supply air temperature		max.	°C	45
Room temperature setpoint		min.	°C	15
Air flow rate	Size 6:	min.	m³/h	3100
	Size 9:	min.	m³/h	5000
Condensate quantity	Size 6:	max.	kg/h	90
	Size 9:	max.	kg/h	150
The units cannot be used in:				
<ul style="list-style-type: none"> <li>■ Damp locations</li> <li>■ Rooms with mineral oil vapours in the air</li> <li>■ Rooms with a high salt content in the air</li> <li>■ Rooms with acidic or alkaline vapours in the air</li> </ul>				
<sup>1)</sup> Units for applications where the humidity in the room increases by more than 2 g/kg are available on request.				

Table C6: Application limits

### 3.3 Electrical connection

#### TopVent® SP

Unit type		SP-6	SP-9
Supply voltage	V AC	3 × 400	3 × 400
Permitted voltage tolerance	%	± 5	± 5
Frequency	Hz	50	50
Connected load	kW	2.2	3.4
Current consumption max.	A	3.7	5.9
Series fuse	A	13.0	13.0
Protection rating	–	IP 54	IP 54

Table C7: Electrical connection TopVent® SP

#### Heat pump Belaria® VRF

Heat pump Belaria®		VRF (33)	VRF (40)	VRF (67)
Supply voltage	V AC	3 × 400	3 × 400	3 × 400
Permitted voltage tolerance	%	± 2	± 2	± 2
Frequency	Hz	50	50	50
Connected load	kW	16.5	20.6	34.0
Current consumption max.	A	26.4	33.1	54.5
Series fuse	A	32.0	40.0	63.0
Inrush current	A	–	–	–

Table C8: Electrical connection Belaria® VRF

### 3.4 Air flow rate

Unit type		SP-6	SP-9
Nominal air flow rate	m³/h	6000	9000
Floor area covered	m²	537	946

Table C9: Air flow rate

### 3.5 Air filtration

Filter	Fresh air / Extract air
Class acc. to ISO 16890	ISO ePM <sub>1</sub> 55 %
Class acc. to EN 779	F7
Factory setting of differential pressure switches	300 Pa

Table C10: Air filtration

### 3.6 Technical data of the Belaria® VRF heat pump

Heat pump Belaria®		VRF (33)	VRF (40)	VRF (67)	
Heating	Rated heat output <sup>1)</sup>	kW	33.5	40.0	67.0
	Power consumption	kW	7.60	8.51	15.33
	COP	–	4.40	4.70	4.37
	$\eta_{s,h}$	–	173	169	151
	SCOP	–	4.41	4.31	3.86
Cooling	Rated cooling capacity <sup>2)</sup>	kW	33.5	40.0	67.0
	Power consumption	kW	8.90	9.88	18.10
	EER	–	3.75	4.05	3.70
	$\eta_{s,c}$	–	285	246	277
	SEER	–	7.20	6.22	7.00
Refrigerant	–	R410A	R410A	R410A	
Refrigerant fill volume	kg	11	13	22	

1) With fresh air temperature 7 °C / extract air temperature 20 °C  
 2) With fresh air temperature 35 °C / extract air temperature 27 °C / 45% rel. humidity

Table C11: Technical data Belaria® VRF

### 3.7 Sound level

Unit type		SP-6		SP-9		
		indoors	outdoors	indoors	outdoors	
Sound pressure level (at a distance of 5 m) <sup>1)</sup>	dB(A)	55	47	59	50	
Total sound power level	dB(A)	77	69	81	72	
Octave sound power level	63 Hz	dB	45	44	47	45
	125 Hz	dB	61	55	65	58
	250 Hz	dB	67	63	70	64
	500 Hz	dB	71	65	73	66
	1000 Hz	dB	74	60	78	65
	2000 Hz	dB	70	59	76	65
	4000 Hz	dB	66	56	71	61
	8000 Hz	dB	65	57	66	57

1) with a hemispherical radiation pattern in a low-reflection room

Table C12: Sound level TopVent® SP

Heat pump Belaria®		VRF (33)	VRF (40)	VRF (67)	
Sound pressure level (at a distance of 5 m)	dB(A)	59.0	63.0	67.0	
Total sound power level <sup>1)</sup>	dB(A)	81.0	85.0	89.0	
Octave sound pressure level <sup>2)</sup>	63 Hz	dB	62.6	63.5	66.5
	125 Hz	dB	60.6	61.2	65.0
	250 Hz	dB	61.0	60.8	65.0
	500 Hz	dB	58.3	57.5	63.0
	1000 Hz	dB	55.5	56.9	57.0
	2000 Hz	dB	46.8	47.5	52.0
	4000 Hz	dB	43.9	45.1	51.0
	8000 Hz	dB	43.5	44.1	50.2

1) The values given are maximum values; the noise level is fluctuating due to scroll technology.  
 2) Measured at a distance of 1 m in front of the unit and 1.3 m above the floor in a semi-anechoic chamber.

Table C13: Sound level Belaria® VRF

### 3.8 Heat output

$t_F$ °C	$t_{room}$ °C	Type SP-	Q kW	$H_{max}$ m	$t_S$ °C	$P_{HP}$ kW
-5	16	6-J	32.7	14.3	31.9	9.2
		6-L	39.0	13.2	35.0	10.3
		9-N	65.3	13.3	37.3	18.5
	20	6-J	32.5	14.6	35.4	9.3
		6-L	38.9	13.4	38.5	10.4
		9-N	65.1	13.5	40.8	18.7
-15	16	6-J	28.7	15.8	28.9	9.1
		6-L	34.3	14.4	31.7	10.2
		9-N	57.5	14.5	33.7	18.3
	20	6-J	28.6	16.1	32.5	9.2
		6-L	34.2	14.7	35.2	10.3
		9-N	57.2	14.7	37.2	18.5
Legend: $t_F$ = Fresh air temperature $t_{room}$ = Room air temperature Q = Heat output $H_{max}$ = Maximum mounting height $t_S$ = Supply air temperature $P_{HP}$ = Power consumption of the heat pump						
Reference: ■ At room air temperature 16 °C: extract air temperature 18 °C ■ At room air temperature 20 °C: extract air temperature 22 °C ■ Fresh air ratio 10 %						

Table C14: Heat output TopVent® SP


### 3.9 Cooling capacity

$t_F$ °C	$t_{room}$ °C	$RH_{room}$ %	Type SP-	$Q_{sen}$ kW	$Q_{tot}$ kW	$t_S$ °C	$m_C$ kg/h	$P_{HP}$ kW
28	22	50	6-J	20.7	26.4	14.2	8.5	5.0
			6-L	24.7	31.5	12.2	10.1	5.7
			9-N	41.8	52.9	10.6	16.3	10.4
		70	6-J	19.4	32.7	14.8	19.6	6.8
			6-L	22.5	38.1	13.2	22.8	7.5
			9-N	37.6	63.1	12.0	37.5	13.6
32	26	50	6-J	23.4	34.0	16.8	15.6	8.1
			6-L	27.9	40.6	14.6	18.6	9.2
			9-N	47.4	68.0	12.8	30.3	16.9
		70	6-J	17.7	34.9	19.6	25.3	8.2
			6-L	21.1	41.7	17.9	30.2	9.3
			9-N	35.9	69.9	16.6	50.0	17.0
Legend: $t_F$ = Fresh air temperature $t_{room}$ = Room air temperature $RH_{room}$ = Relative humidity of the room air $Q_{sen}$ = Sensible cooling capacity $Q_{tot}$ = Total cooling capacity $t_S$ = Supply air temperature $m_C$ = Condensate quantity $P_{HP}$ = Power consumption of the heat pump								
Reference: ■ At room air temperature 22 °C: extract air temperature 24 °C ■ At room air temperature 26 °C: extract air temperature 28 °C ■ Fresh air ratio 10 %								

Table C15: Cooling capacity TopVent® SP

3.10 Dimensions and weights

TopVent® SP

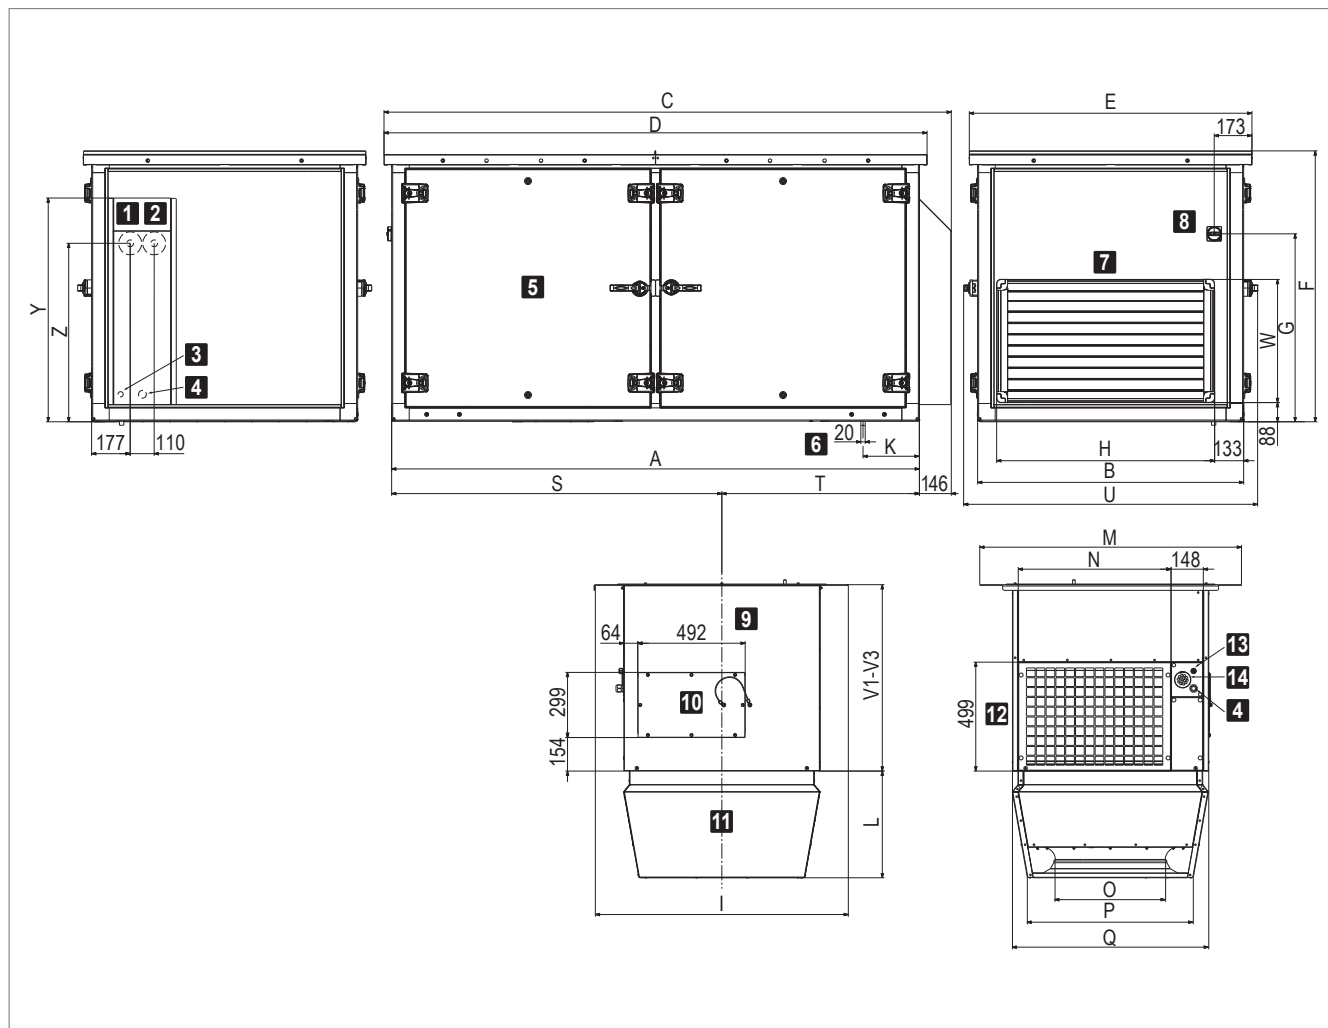

- |  |   |
|--|---|
| <b>1</b> Feedthrough for gas line (Ø 23...75 mm)       | <b>8</b> Isolation switch                             |
| <b>2</b> Feedthrough for liquid line (Ø 23...75 mm)    | <b>9</b> Connection module                            |
| <b>3</b> Cable feedthrough for signal cables heat pump | <b>10</b> Installation lid                            |
| <b>4</b> Cable feedthrough for power supply heat pump  | <b>11</b> Air-Injector                                |
| <b>5</b> Roof unit                                     | <b>12</b> Extract air grille                          |
| <b>6</b> Condensate drain                              | <b>13</b> Cable feedthrough for power supply TopVent® |
| <b>7</b> Weather protection                            | <b>14</b> Cable feedthrough for signal cables         |

Table C16: TopVent® SP dimensional drawing (dimensions in mm)



Unit type		SP-6	SP-9
A	mm	2420	2725
B	mm	1220	1420
C	mm	2601	2906
D	mm	2490	2795
E	mm	1290	1490
F	mm	1239	1439
G	mm	862	962
H	mm	999	1199
I	mm	1160	1360
K	mm	257	292
L	mm	490	570
M	mm	1200	1400
N	mm	701	901
O	mm	500	630
P	mm	767	937
Q	mm	900	1100
S	mm	1514	1684
T	mm	906	1041
U	mm	1348	1548
V1	mm	850	850
V2	mm	1300	1300
V3	mm	1750	1750
W	mm	565	664
Y	mm	1025	1125
Z	mm	818	935

Table C17: TopVent® SP dimensions

Unit type		SP-6	SP-9
Gas line connection	mm	∅ 28	∅ 28
Liquid line connection	mm	∅ 12	∅ 22

Table C18: Refrigerant pipe connections in the roof unit

Unit type		SP-6-J	SP-9-N
<b>Total</b>	<b>kg</b>	<b>717</b>	<b>924</b>
Roof unit	kg	575	742
Below-roof unit	kg	142	182
Air-Injector	kg	40	57
Connection module V1	kg	102	125
Additional weight V2	kg	+ 42	+ 50
Additional weight V3	kg	+ 85	+ 101

Table C19: TopVent® SP weights

**Belaria® VRF (33, 40)**

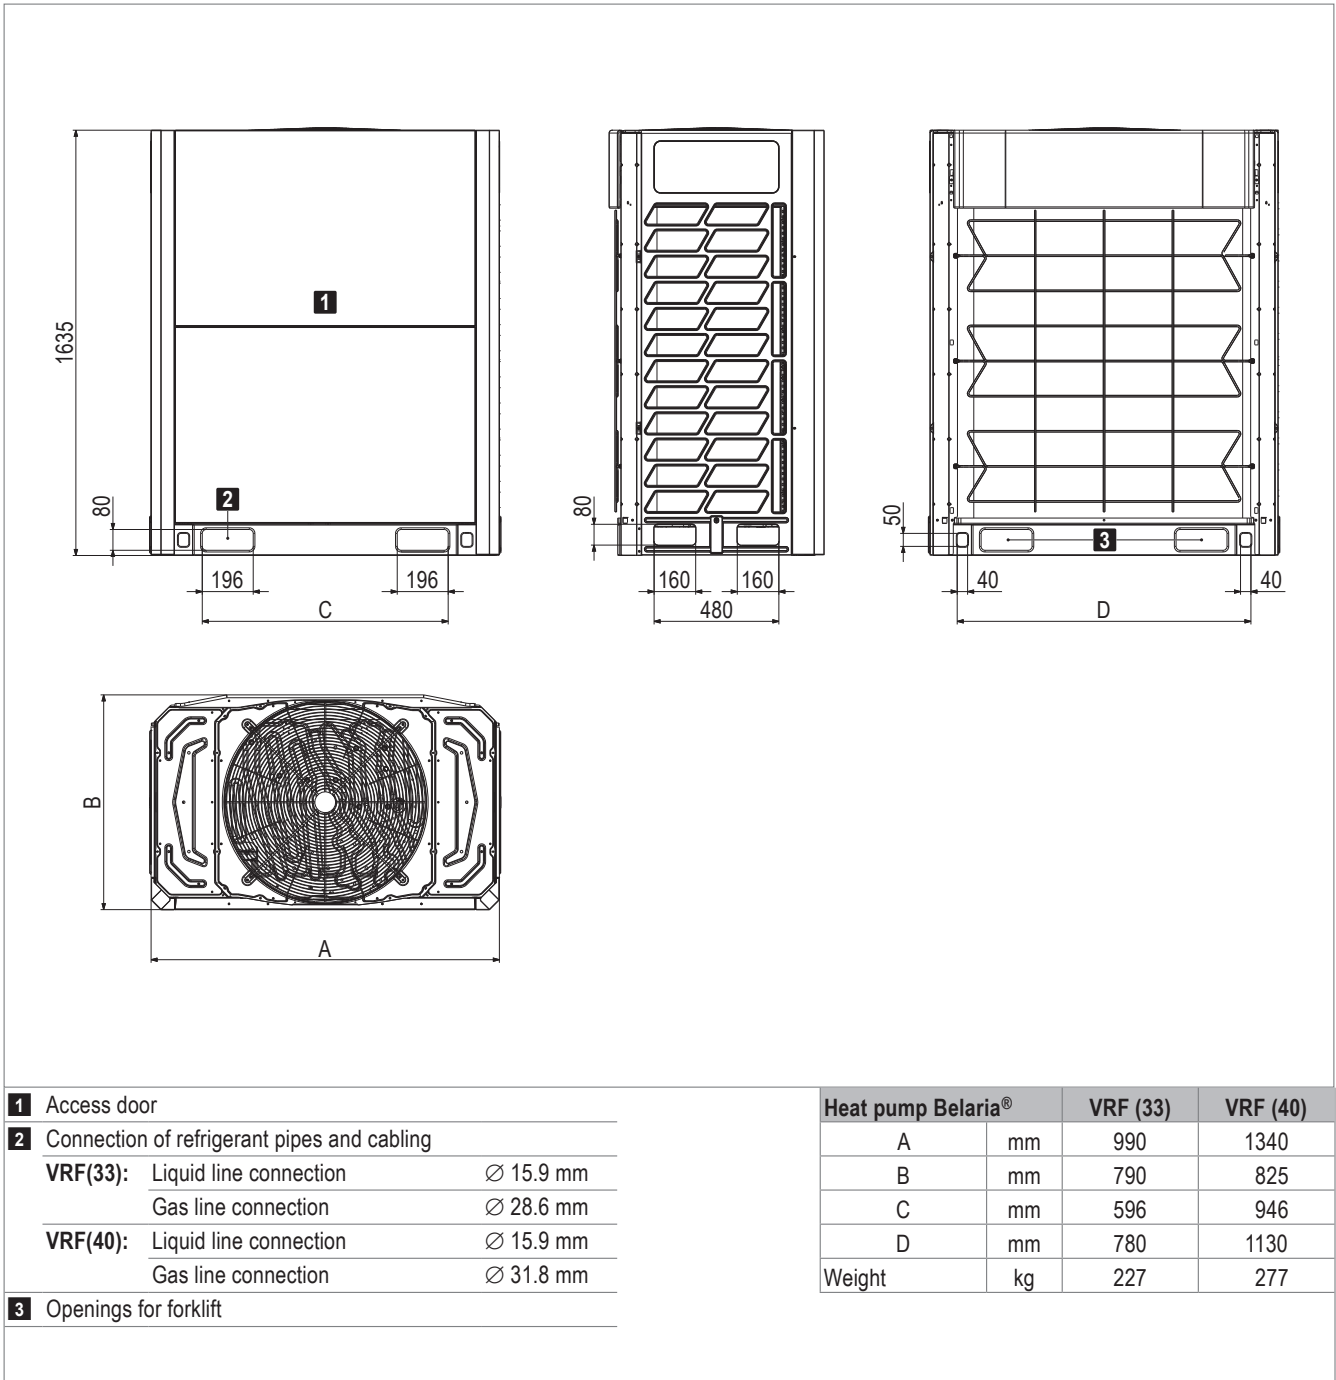


Fig. C4: Dimensions and weights Belaria® VRF (33, 40)

Belaria® VRF (67)

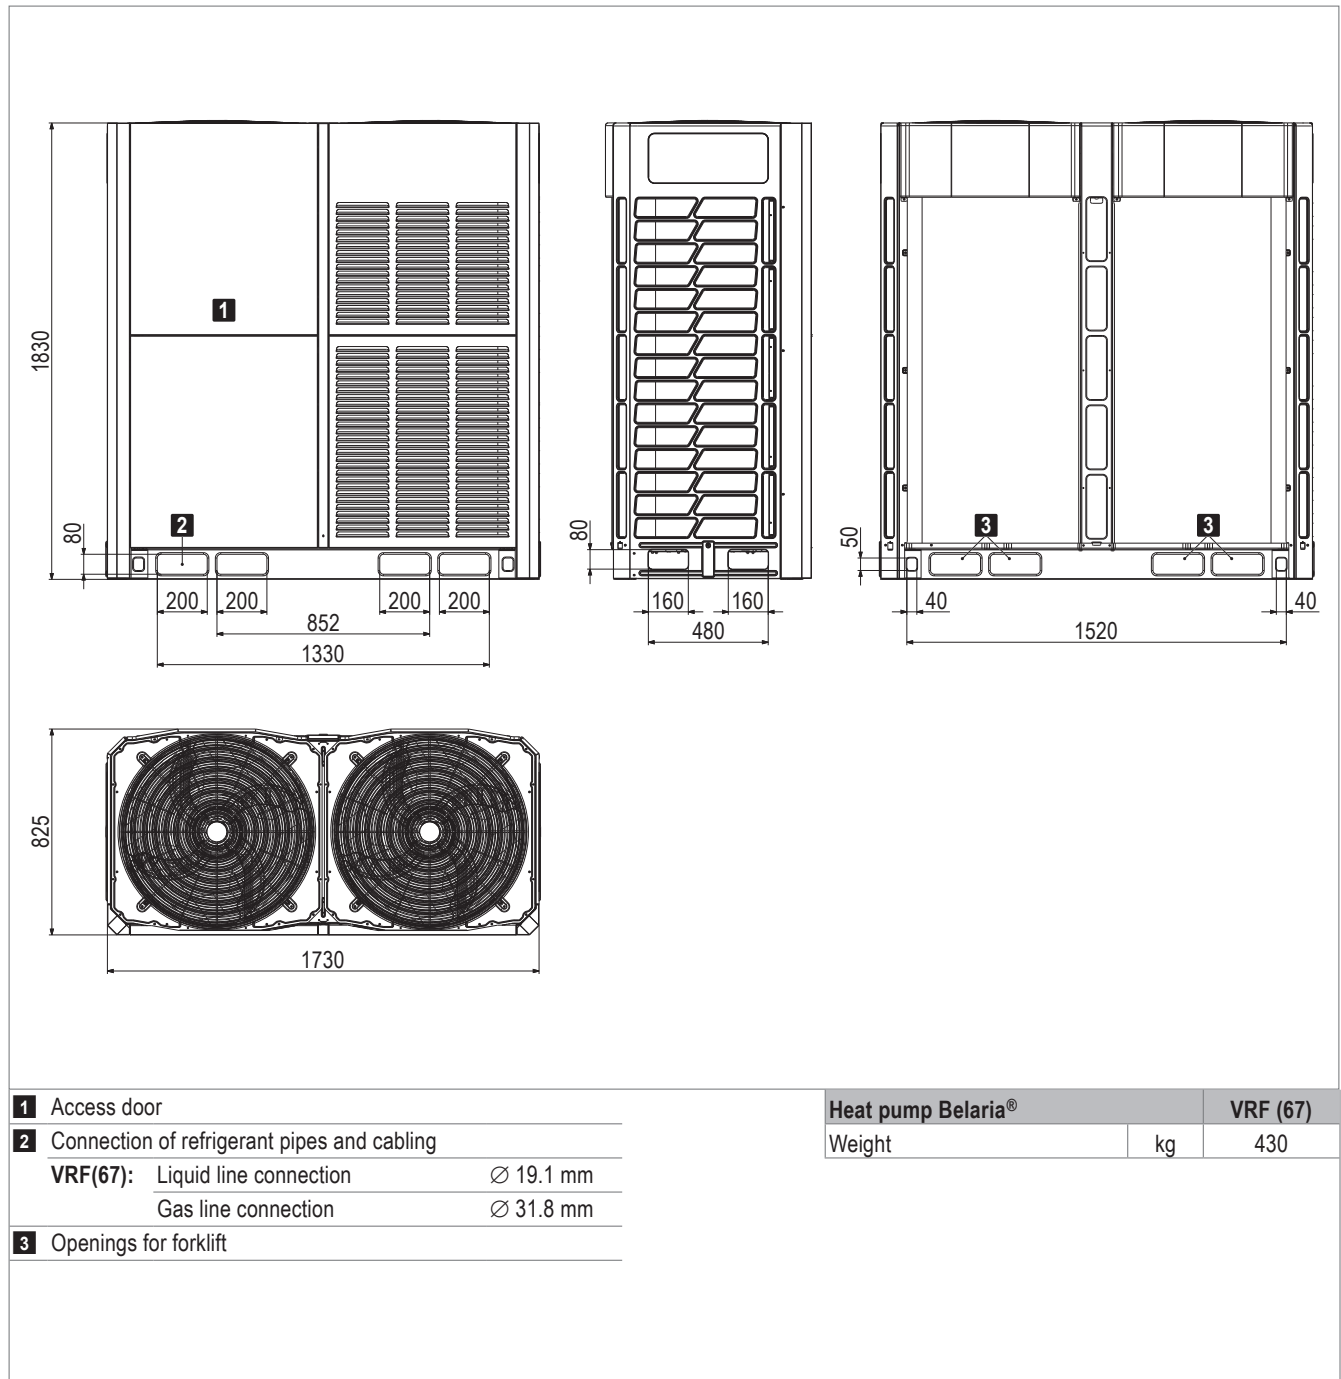


Fig. C5: Dimensions and weights Belaria® VRF (67)

3.11 Product information according to ErP

Trademark / Model		Hoval TopVent® SP			Unit
		6-J	6-L	9-N	
Type		NRVU, BVU			–
Drive		Variable speed drive			–
Heat recovery system		none			–
Thermal efficiency of heat recovery ( $\eta_{t\_nrvu}$ )		–			%
Nominal flow rate ( $q_{nom}$ )		1.666	1.666	2.5	m³/s
Effective electric power input (P)		1.4	1.4	2.6	kW
Internal specific fan power (SFP <sub>int</sub> )		162	162	65	W/(m³/s)
Face velocity		3.106	3.106	3.273	m/s
Nominal external pressure ( $\Delta p_{s, ext}$ )	Supply air	0	0	0	Pa
	Extract air	–	–	–	
Internal pressure drop of ventilation components ( $\Delta p_{s, int}$ )	Fresh air/supply air	–	–	–	Pa
	Extract air/exhaust air	–	–	–	
Static efficiency of the fans ( $\eta_{fan}$ ) in accordance with Regulation (EU) No. 327/2011		69.0	69.0	63.6	%
Maximum leakage rate	External	≤ 1	≤ 1	≤ 1	%
	Internal	–	–	–	
Energy classification of the filters	Supply air ePM <sub>1</sub> 55 %	D	D	D	–
	Extract air	–	–	–	
Visual filter warning		Displayed on the operating unit			–
Casing sound power level (L <sub>WA</sub> )		77	77	81	dB(A)
Disassembly instructions		Devices that are no longer functional must be dismantled by a specialist company and disposed of at suitable collection points.			–
Contact details		Hoval Aktiengesellschaft Austrasse 70, 9490 Vaduz, Liechtenstein www.hoval.com			

Table C20: Product information according to Commission Regulation (EU) 1253/2014, Article 4(2)

## 4 Specification texts

### 4.1 TopVent® SP

Supply air unit with reversible heat pump system for ventilating, heating and cooling spaces up to 25 m in height; configured as roof unit; equipped with highly efficient air distributor.

The unit consists of the following components:

- Roof unit (with access to all components relevant for maintenance)
- Below-roof unit:
  - Connection module
  - Air-Injector
- Optional components

The heat pump system consists of the following components:

- Heat pump Belaria® VRF (33, 40, 67)
- Conversion board
- Expansion valve

The TopVent® SP unit complies with all the requirements of the Ecodesign Directive 2009/125/EC relating to environmentally friendly design of ventilation systems. It is a system of the 'non-residential ventilation unit' (NRVU) and 'unidirectional ventilation unit' (UVU) type, provided for in Commission Regulation (EU) 1253/2014.

---

#### Roof unit

---

Self-supporting casing, construction made of thermally decoupled aluminium profile frame system with nylon connecting elements and panels made of magnesium-zinc sheet, additional rain canopy made of aluminium:

- Weatherproof, corrosion resistant, impact resistant, air-tight
- Low flammability, double-shelled, without heat bridges, with highly efficient insulation made of expanded polystyrene
- Hygienic and easy to maintain because of smooth interior surfaces and large access doors with ageing-resistant, silicone-free sealing materials

The roof unit includes:

#### Fan

Configured as maintenance-free, directly driven radial fan with high-efficiency EC motor, backwards-curved, 3D contoured blades and free-running rotor made of a high-performance composite material, aerodynamically optimised inflow nozzle, low-noise, with integrated overload protection.

#### Heating/cooling section

The heating/cooling section contains

- The highly efficient heating/cooling coil consisting of seamless copper pipes with pressed-on, optimised and profiled aluminium fins, manifold made of copper and injection distributor
- The pull-out condensate separator with collecting channel, made of high-quality corrosion-resistant material, with a downslope in all directions for rapid draining
- The condensate drain on the roof via siphon

#### Fresh air filter

Pleated cell filter of filter class ePM<sub>1</sub> 55% according to ISO 16890, consisting of micro glass with synthetic lamination as handle protection, pleat pack completely encapsulated to prevent leakage, frame made of recycled plastic, fully incinerable, including differential pressure switch for filter monitoring.

#### Extract air filter

Pleated cell filter of filter class ePM<sub>1</sub> 55% according to ISO 16890, consisting of micro glass with synthetic lamination as handle protection, pleat pack completely encapsulated to prevent leakage, frame made of recycled plastic, fully incinerable, including differential pressure switch for filter monitoring.

#### Fresh air damper

Damper consisting of sheet steel blades with sealing lip and plastic gearwheels; tightness class 4 according to EN 1751; including actuator with shut-off function by spring return.

#### Recirculation damper

Damper consisting of sheet steel blades with plastic gearwheels; tightness class 2 according to EN 1751; including actuator.

#### Unit control box

Control box for connection of the power supply and housing the control components that facilitate energy-optimised operation, controlled by the control system TopTronic® C. Plastic casing, protection rating IP 56. The following components are installed:

- Circuit board with all required electrical components, unit controller (clipped on)

The circuit board is fitted with push-in terminals facilitating easy installation of the connection cables. All components in the unit control box as well as sensors, actuators in the unit and the isolation switch attached to the outside of the unit are fully factory-wired.

Power supply, bus connection, connection to Air-Injector actuator to be installed on site

### Access openings

Defined side walls of the roof unit configured as inspection doors for easy access to all components relevant for maintenance. The hinges allow opening with an opening angle of 90° or complete removal of the inspection doors.

### Heat pump connection

Side wall of the roof unit designed with:

- Pipe feedthroughs for the refrigerant pipes, equipped with grommets for airtight sealing
- Cable feedthrough for signal cable
- Protection hood for the connections, supplied loose with the appropriate connecting screws

On-site: Installation and insulation of the pipelines in the roof unit, heat pump signal cable, mounting of the protection hood to the roof unit.

---

### Below-roof unit

---

#### Connection module V1

Housing made of magnesium zinc sheet, air-tight, flame retardant, with highly efficient insulation made of expanded polystyrene, hygienic and easy to maintain because of smooth interior surfaces and ageing-resistant, silicone-free sealing materials; configured with:

- Extract air grille
- Cable feedthroughs for the electric supply

#### Connection module V2 / V3 (variant)

The connection module is extended for adapting to the local installation situation.

#### Design with Air-Injector

Housing made of magnesium zinc sheet, air-tight, hygienic and easy to maintain because of ageing-resistant, silicone-free sealing materials, internally insulated with closed-cell polyethylene foam, with:

- Vortex air distributor with concentric outlet nozzle, adjustable vanes and integrated absorber hood
- Actuator for infinitely variable adjustment of the air distribution from vertical to horizontal
  - for draught-free air distribution in the hall under changing operating conditions
  - for the rapid and large-area reduction of temperature stratification in the room through induction of secondary air and strong mixing of the room air with supply air

Actuator installed in the connection module for easy access from the roof.

#### Design without Air-Injector (variant)

Unit configured without vortex air distributor for connection to an on-site supply air duct and air distribution within the building.

### Air distribution box (variant)

Housing made of magnesium zinc sheet, air-tight, hygienic and easy to maintain because of ageing-resistant, silicone-free sealing materials, insulated on the inside with closed-cell polyethylene foam; configured with 2 collars as connecting piece to the on-site air distribution system.

---

### Options for the unit

---

#### Coating of roof unit

Side walls of the roof unit made of coated zinc sheet (anthracite grey, similar to RAL 7016).

#### Paint finish of below-roof unit

Exterior painting of the below-roof unit in choice of RAL colour.

#### Supply air silencer

Designed as a sound-absorbing mat made of melamine foam; hygienically perfect with carbon fibre coating; mounted in the roof unit; insertion loss 3 dB.

#### Roof frame

Consisting of 4 load-bearing side walls made of galvanised sheet steel with fastening rails for the roof foil, supplied loose with the matching connecting screws.  
Assembly, insulation, integration in the roof structure on site.

#### Protection hood

Hood made of magnesium zinc sheet for protecting the fresh air inlet against wind and snow, supplied loose with the matching connecting screws.  
Assembly and mounting to the roof unit on site.

#### Protection hood coated

Hood made of coated zinc sheet (anthracite grey, similar to RAL 7016) for protecting the fresh air inlet against wind and snow, supplied loose with the matching connecting screws.  
Assembly and mounting to the roof unit on site.

---

## Heat pump system

---

Highly efficient air-to-air heat pump system in split design with continuously modulating inverter technology for precise capacity control, reversible for heating and cooling the supply air, consisting of the following components:

### Heat pump Belaria® VRF (33, 40, 67)

- Compact unit for outdoor installation
- Painted casing RAL 7044 (silk grey) made from galvanised sheet steel
- Variable-speed inverter scroll compressor
  - 1 × for Belaria® VRF (33, 40)
  - 2 × for Belaria® VRF (67)
- Speed-controlled fan
  - 1 × for Belaria® VRF (33, 40)
  - 2 × for Belaria® VRF (67)
- Coated Al/Cu finned-tube evaporator or condenser
- Electronic expansion valve (for heating mode)
- 4-way valve for defrosting
- Refrigerant shut-off valves
- Refrigerant R410A
- Terminal box

### Conversion board

Printed circuit board assembly for communication between heat pump, expansion valve and indoor climate unit and for recording the temperatures of the refrigerant upstream, in and downstream of the heating/cooling coil. Mounted and fully wired in the roof unit.

- 1 × for Belaria® VRF (33, 40)
- 2 × for Belaria® VRF (67)

### Expansion valve

Electronic expansion valve for cooling mode, supplied loose.

- 1 × for Belaria® VRF (33, 40)
- 2 × for Belaria® VRF (67)

---

## Options for the heat pump

---

### Rear protection hood

Hood made of magnesium zinc sheet, powder-coated (RAL 7044 silk grey), for protection against wind and snow. On-site: Mounting to the heat pump.

### Side protection hood

Hood made of magnesium zinc sheet, powder-coated (RAL 7044 silk grey), for protection against wind and snow. On-site: Mounting to the heat pump.

### Front protection hood

Hood made of magnesium zinc sheet, powder-coated (RAL 7044 silk grey), for protection against wind and snow. On-site: Mounting to the heat pump.

## 4.2 TopTronic® C – System control

Zone-based control system for the energy-optimised operation of decentralised Hoval indoor climate systems. Maximum system size per system bus: 64 control zones with up to 10 supply and extract air handling units or supply air handling units and 10 recirculation air handling units each.

### Zone allocation

Configured in advance for the customer at the factory:

	Room designation	Unit type
Zone 1:	_____	_____
Zone 2:	_____	_____
...		

### System structure

- Zone control panel made of coated sheet steel (light grey RAL 7035), ... x ... x ... mm, with:
  - System operator terminal
  - Fresh air temperature sensor
  - 1 zone controller and 1 room temperature sensor per zone (expandable to up to 4 room temperature sensors per zone)
  - Safety relay
  - Electrical cabinet internally pre-wired, all components routed to terminals
- Zone bus: as serial bus for communication with all controllers in one control zone, with robust bus protocol via shielded, twisted bus cable (provided by the client)
- Unit controller: installed in the particular indoor climate unit, works autonomously according to the specifications of the zone controller
- Heating/cooling demand per zone with feedback monitoring

### Functions, standard

- Zone-based autonomous room control. Temperature and ventilation control separately adjustable for each zone
- Room temperature control via room-supply air cascade by means of energy-optimised double sequence control with priority circuit for energy recovery (supply and extract air handling units)
- Intelligent automatic heating to reach the desired room temperature at the switching time
- 5 adjustable room temperature set values per zone:
  - Cooling protection (lower setpoint in standby)
  - Overheating protection (upper setpoint in standby)
  - Room set value winter
  - Room set value summer
  - Night cooling set value (free cooling) (supply and extract air handling units, supply air units)
- Destratification mode for even temperature distribution

- Main operating modes of supply and extract air handling units:

VE .... Ventilation, infinitely variably adjustment

AQ.... Air quality, automatic control with Hoval combination sensor (option), optional reference variable:

- CO<sub>2</sub> or VOC
- Air humidity (optimised dehumidification mode)

REC . Recirculation, infinitely variably adjustment

DES.. Destratification

EA .... Exhaust air, infinitely variably adjustment

SA .... Supply air, infinitely variably adjustment

ST .... Standby

- Main operating modes of supply air units:

REC . Recirculation, infinitely variably adjustment

DES.. Destratification

SA .... Supply air, infinitely variably adjustment

With Hoval combination sensor (option) also demand-driven control of the fresh air ratio, optional reference variable CO<sub>2</sub> or VOC

ST .... Standby

- Main operating modes of recirculated air units:

REC . Recirculation, infinitely variably adjustment

DES.. Destratification

ST .... Standby

- Forced heating (construction site heating) can be activated on each device before completion of the overall system (activation by Hoval service technician)
- Control of draught-free air distribution with the Hoval Air-Injector: the discharge direction is adjusted infinitely variably and automatically according to the respective operating condition and the existing temperatures (heating/cooling).

#### Operation

- TopTronic® C-ST system operator terminal: touch panel for visualisation and control of all Hoval indoor climate units registered on the bus

#### Options for operation

- Activation of the system operator terminal for VNC access, for visualisation on customer's PC
- TopTronic® C-ZT as zone operator terminal: for simple on-site operation of a control zone
- Manual operating selector switches
- Manual operating selector buttons
- Operating of the units via building management system via standardised interfaces:
  - BACnet
  - Modbus IP
  - Modbus RTU

#### Alarms, protection

- Central alarm management with registration of all alarms (timestamp, priority, status) in an alarm list and alarm memory of the last 50 alarms; forwarding via e-mail can be set in the parameters.
- If there is a failure of communication, bus stations, sensor systems or supply media, each part of the system transitions to a protection mode which safeguards operation.
- A maintenance mode implemented in the control algorithm for testing all physical data points and alarms guarantees high reliability.
- Pre-programmed data points retrievable via logger function for 1 year

#### Options for the zone control panel

- Alarm lamp
- Socket

#### Per zone:

- The change-over between heating and cooling can be either automatic or manual
  - Cooling lock switch for automatic changeover
  - Heating/cooling switch for manual changeover
- Additional room temperature sensors (max. 3)
- Combination sensor room air quality, temperature and humidity
- Combination sensor fresh air temperature and humidity
- Transfer of actual values and setpoints from external systems (0...10 V; 4 - 20 mA)
- Load shedding input
- Signal for external extract air fan
- Operating selector switches on terminal
- Operating selector button on terminal
- Control of distributor pump, incl. power supply

#### Power distribution:

- Circuit breakers and output terminals for Hoval indoor climate units
- Safety relay (4-pin)





**Options**

1 Type code . . . . .	52
2 Connection module. . . . .	53
3 Design without Air-Injector . . . . .	53
4 Air distribution box . . . . .	53
5 Coating of roof unit. . . . .	54
6 Paint finish of below-roof unit . . . . .	54
7 Supply air silencer . . . . .	54
8 Roof frame. . . . .	55
9 Protection hood . . . . .	56
10 Options for the heat pump . . . . .	56

# 1 Type code

	CP	-	6	-	J	/	ST	.	V1	.	D1	/	--	.	CA	.	Z	/	-	--	/	TC	.	--	--
<b>Unit type</b>	CP				J		ST		V1		D1		--		CA		Z		--		TC		--		
CP	TopVent® CP																								
SP	TopVent® CP																								
<b>Unit size</b>	6 or 9																								
<b>Heating/cooling section</b>	<ul style="list-style-type: none"> <li>J with coil type J for Belaria® VRF (33)</li> <li>L with coil type L for Belaria® VRF (40)</li> <li>N with coil type N for Belaria® VRF (67)</li> </ul>																								
<b>Design</b>	ST Standard																								
<b>Connection module</b>	<ul style="list-style-type: none"> <li>V1 Standard</li> <li>V2 Length + 450 mm</li> <li>V3 Length + 900 mm</li> </ul>																								
<b>Air outlet</b>	<ul style="list-style-type: none"> <li>D1 Design with Air-Injector</li> <li>D0 Design without Air-Injector</li> <li>DB Air distribution box</li> </ul>																								
<b>Surface</b>	<ul style="list-style-type: none"> <li>-- Standard</li> <li>CA Coating of roof unit (anthracite grey)</li> <li>LU Paint finish of below-roof unit (as desired)</li> <li>CL Coating of roof unit and paint finish of below-roof unit</li> </ul>																								
<b>Silencer</b>	<ul style="list-style-type: none"> <li>- without</li> <li>Z Supply air silencer</li> </ul>																								
<b>Control system</b>	TC TopTronic® C																								

Table D1: Type code

## 2 Connection module

The connection module is available in 3 lengths for adapting the unit to local conditions.

The connection module V3 is equipped with 2 installation lids.

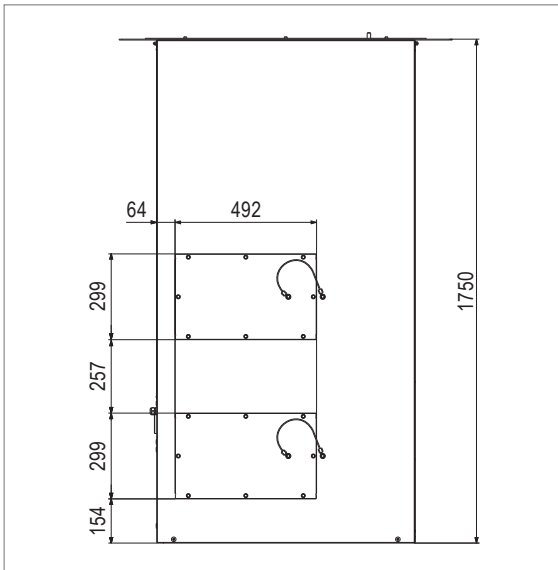


Fig. D1: Installation lids in connection module V3

## 3 Design without Air-Injector

TopVent® units in the design without Air-Injector are suitable for connecting to an air distribution system supplied by the client.

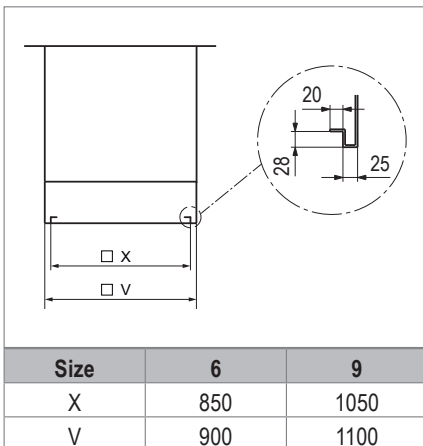


Table D2: Connection dimensions supply air duct (in mm)

## 4 Air distribution box

For easy connection to ventilation ducts or fabric sleeves, TopVent® units are available with an air distribution box. This has a collar on 2 opposite sides as a connection piece to the on-site air distribution system.

The air distribution box replaces the Air-Injector.

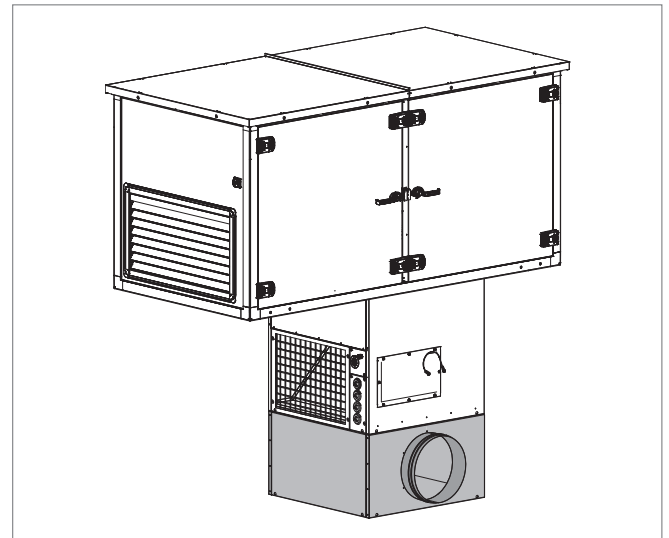


Fig. D2: TopVent® unit with air distribution box

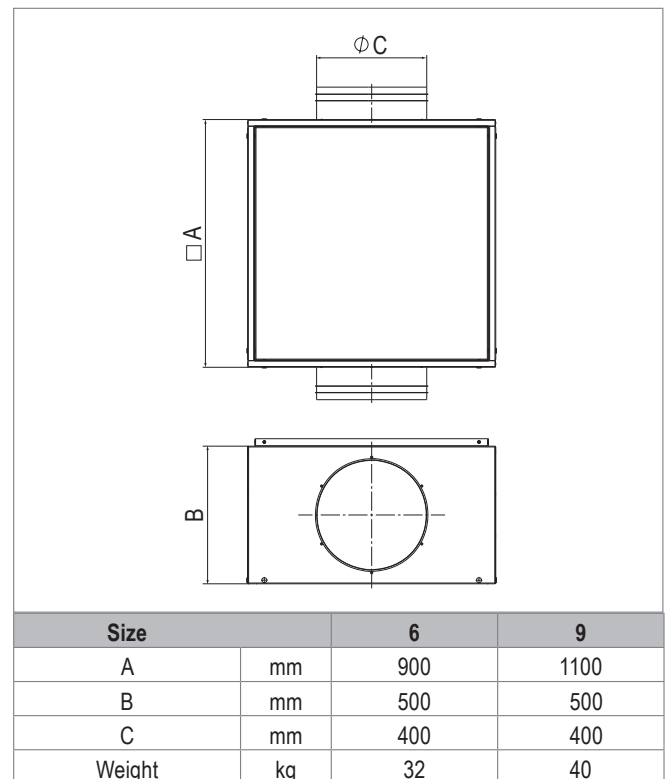


Fig. D3: Air distribution box dimensions and weights

## 5 Coating of roof unit

On request, the casing of the roof unit can be made of coated zinc sheet (anthracite grey, similar to RAL 7016).

## 6 Paint finish of below-roof unit

On request, the below-roof unit can be provided with an exterior painting in choice of RAL colour.

## 7 Supply air silencer

The supply air silencer reduces noise emissions from TopVent® units. It consists of a sound-absorbing mat made of melamine foam and is mounted above the fan on the casing ceiling. Insertion attenuation is 3 dB compared with the total sound power level of each TopVent® unit. Weight: 20 kg.

## 8 Roof frame

For easy installation of the TopVent® units in the roof, suitable roof frames are available as accessories. The roof frames consist of 4 load-bearing side walls made of galvanised sheet steel with fastening rails for the roof foil. They are supplied loose with the appropriate connecting screws for assembly on site.

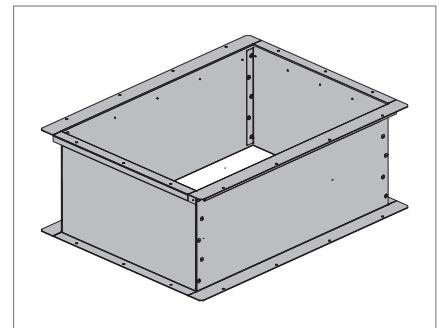
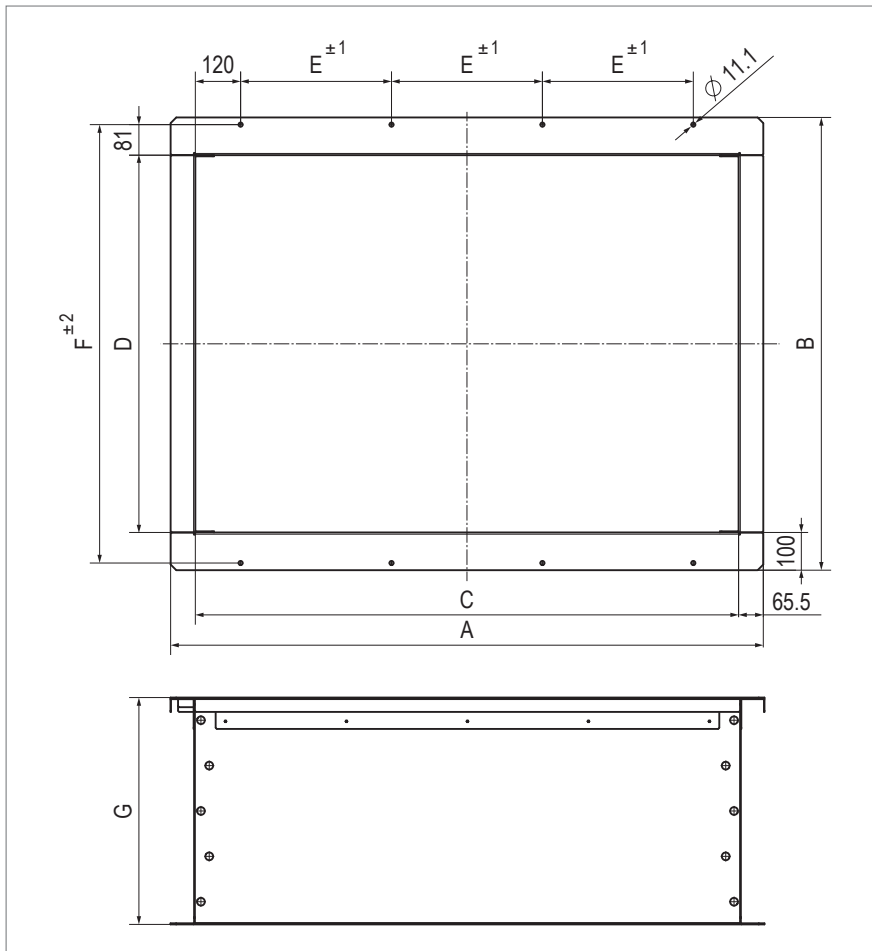


Fig. D5: Roof frame

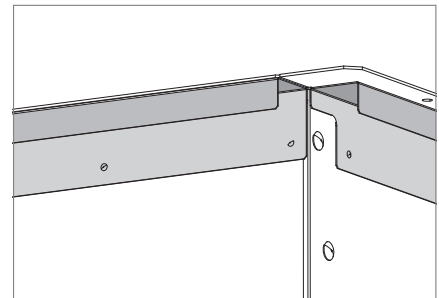


Fig. D6: Fastening rails for the roof foil

Size		6		9	
Type		RF-60-6	RF-80-6	RF-60-9	RF-80-9
A	mm	1571		1771	
B	mm	1200		1400	
C (inner dimension)	mm	1440		1640	
D (inner dimension)	mm	1000		1200	
E	mm	400		466.5	
F	mm	1162		1362	
G	mm	600	800	600	800
Weight	kg	101	125	116	144

Fig. D4: Roof frame dimensions and weights

## 9 Protection hood

To protect the fresh air inlet from strong winds and snowfall, protection hoods are available as accessories for TopVent® supply air units. They are supplied loose with the appropriate connecting screws for assembly on site.

2 designs are available, matching to the roof unit:

Size	6	9	6	9
Type	H-6	H-9	H-C-6	H-C-9
Weight	14.0	17.8	11.2	13.6
Material	Magnesium zinc sheet		coated zinc sheet (anthracite grey)	

Table D3: Designs and weights (in kg)

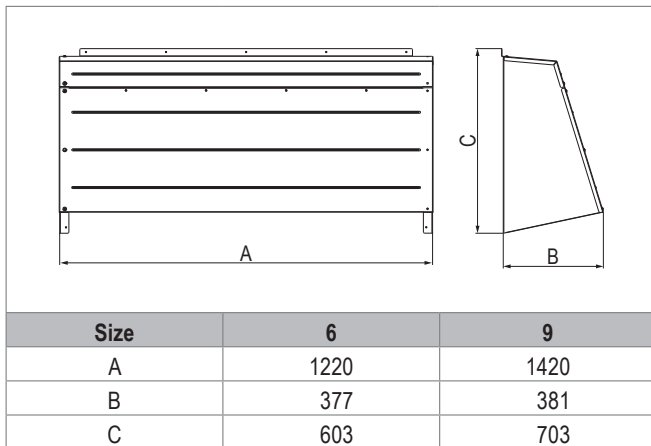


Table D4: Dimensional drawing for protection hood (dimensions in mm)


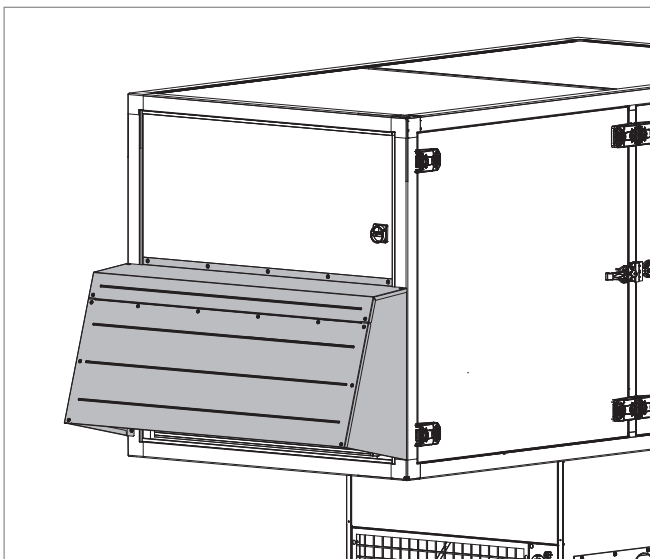


Fig. D7: Fresh air inlet with protection hood

## 10 Options for the heat pump


### 10.1 Protection hood

To protect the heat pump from strong winds and snowfall, protection hoods are available as accessories. They are supplied loose with the appropriate connecting screws for assembly on site.

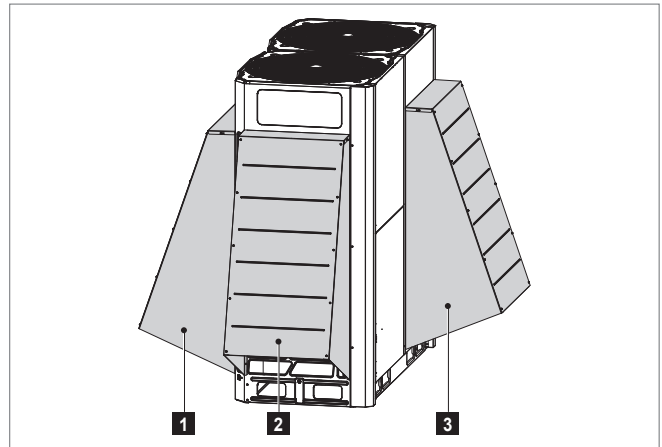

- 1 Rear protection hood
- 2 Side protection hood
- 3 Front protection hood

Fig. D8: Belaria® VRF (67) heat pump with protection hoods

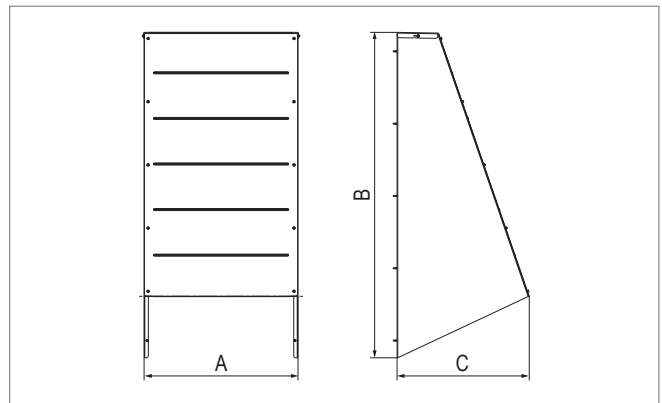

Belaria®	Protection hood	Qty.	A	B	C
VRF (33)	Side PS-33	2	578	1222	497
	Rear PR-33	1	842	1222	497
VRF (40)	Side PS-40	2	578	1222	497
	Rear PR-40	1	1192	1222	497
VRF (67)	Side PS-67	2	600	1396	557
	Rear PR-67	2	760	1378	550
	Front PF-67	1	760	1378	550

Table D5: Quantity and dimensions of protections hoods (in mm)



## Transport and installation

1 Installation . . . . .	58
2 Refrigeration system installation . . . . .	62
3 Hydraulic installation . . . . .	64
4 Electrical installation . . . . .	64

# 1 Installation

## 1.1 Preparation

The scope of delivery includes:

- TopVent® unit including conversion board, delivered in 2 parts on pallets (roof unit, below-roof unit)
- Heat pump Belaria® VRF
- Accessories (lifting kit, transport eyes, installation material, expansion valve, temperature sensor)
- Optional components

The units are installed in or on the roof. A crane or helicopter is required.

### TopVent® unit

- Transport eyes are supplied for lifting the below-roof unit.
  - Use lifting ropes at least 2 m in length to lift the below-roof unit.
- A lifting kit is supplied for lifting the roof unit.
  - Use lifting straps at least 3 m in length to lift the roof unit.
- Use the roof frames available as accessories for quick and easy installation of the TopVent® units in the roof.
- A sealing compound is required for sealing (e.g. Sikaflex® -221).



### Notice

Provide suitable protective devices and make sure the units can be accessed easily. The roof of the TopVent® units cannot be walked on.

### Heat pump Belaria® VRF

- Lifting the heat pump with a forklift:
  - Lift the unit under the pallet.
  - Unloading from the pallet: Guide the forklift tines into the large rectangular openings under the device.
- Lifting the heat pump with a crane:
  - Use 2 straps at least 8 m in length.

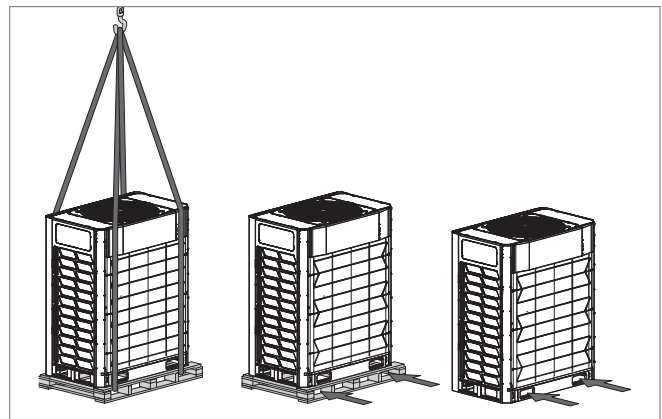



Fig. E1: Lifting the heat pump



### 1.2 Positioning

#### TopVent® unit

- Comply with the minimum and maximum distances.
- All air inlet and air outlet openings must be freely accessible. The supply air jet must be free to spread out unhindered.
- The access doors in the roof unit must be freely accessible and there must be sufficient space for maintenance work.
- Make sure that supply air units draw in fresh air through the fresh air damper:
  - Not impaired by exhaust air openings, flues or the like
  - Roof frame protruding at least 300 mm from the roof

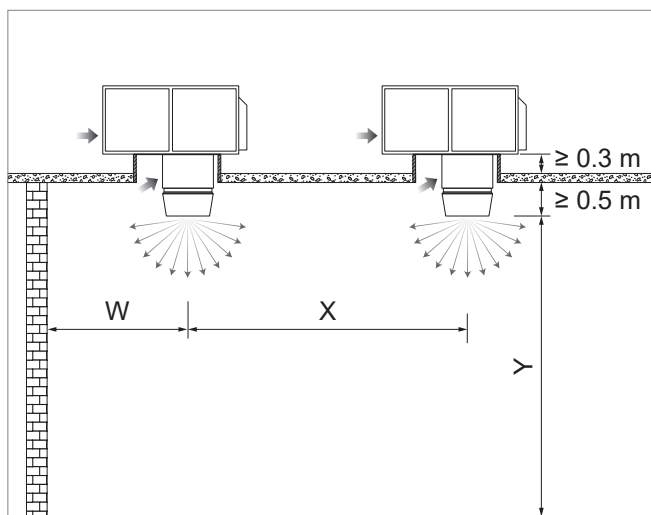

Unit type			CP-6	CP-9	SP-6	SP-9
Mounting height Y	max. <sup>1)</sup>	m	Approx. 9...25			
	min.	m	4	5	4	5
<b>Applications with higher comfort requirements</b>						
■ Distance from wall W	max.	m	12	16	12	16
	min.	m	6	7	6	7
■ Unit clearance X	max.	m	23	31	23	31
	min.	m	12	14	12	14
<b>Applications with low comfort requirements</b>						
■ Distance from wall W	max.	m	15	20	–	–
	min.	m	6	7	–	–
■ Unit clearance X	max.	m	30	41	–	–
	min.	m	12	14	–	–

1) The maximum mounting height varies depending on the boundary conditions (for values, see table of heat outputs or calculation with the 'HK-Select' selection program)

Fig. E2: Minimum and maximum distances

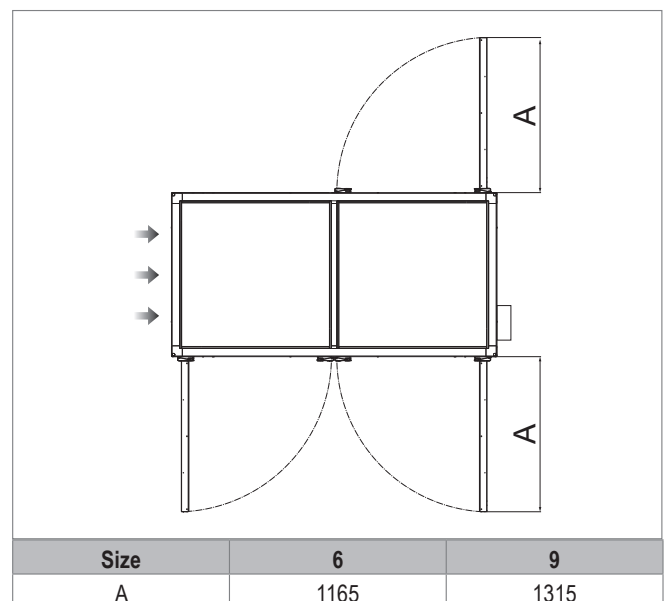


Fig. E3: Space requirements for opening the access doors (dimensions in mm)

### Heat pump Belaria® VRF


- Place the heat pump as close as possible to the indoor climate unit, in a well ventilated location.



#### Notice


Excessively long refrigerant lines reduce the efficiency of the system. Place the heat pump as close as possible to the indoor climate unit.

- Note the following when choosing a location:
  - Not near a heat source with high temperature
  - Not in locations where dust or dirt can affect the heat exchangers
  - Not in locations with mineral oil vapours in the air
  - Not in locations with acidic or alkaline vapours in the air
  - Not in locations with a high salt content in the air
- Observe the minimum distances for sufficient air flow through the heat pump.
- Place the heat pump on a solid base with sufficient load-bearing capacity to avoid vibrations and noise.
- Install the heat pump on a solid base made of concrete or steel:
  - The base must be at least 200 mm high to allow sufficient space for the installation of the refrigerant pipes.
  - The base must be flat and level. The support points must bear the weight evenly.
  - Water must be free to drain through the base plate of the heat pump.
- In areas with heavy snowfall:
  - Increase the base height to ensure that the unit operation is not affected by snow.
  - Protect the heat pump with protection hoods (option).

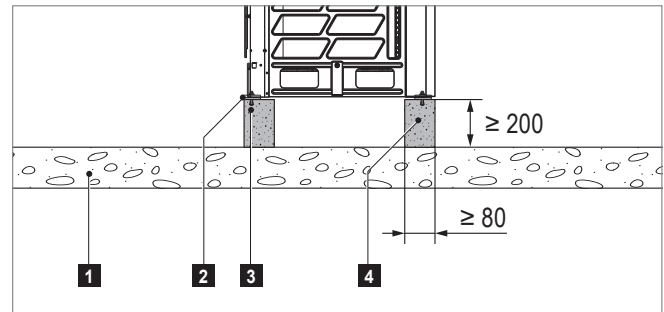

- Firm ground
- Vibration damper
- Expansion anchor  $\varnothing$  10 mm
- Base made of concrete or steel

Fig. E5: Base for the heat pump

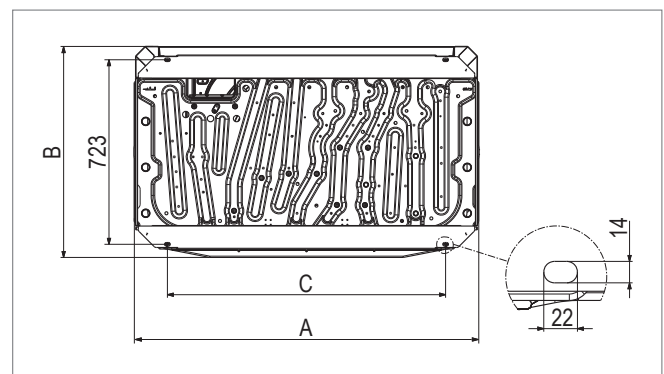

Dimension	VRF (33)	VRF (40)	VRF (67)
A	990	1340	1730
B	790	825	825
C	740	1090	1480

Table E1: Position of the screw connections (dimensions in mm)

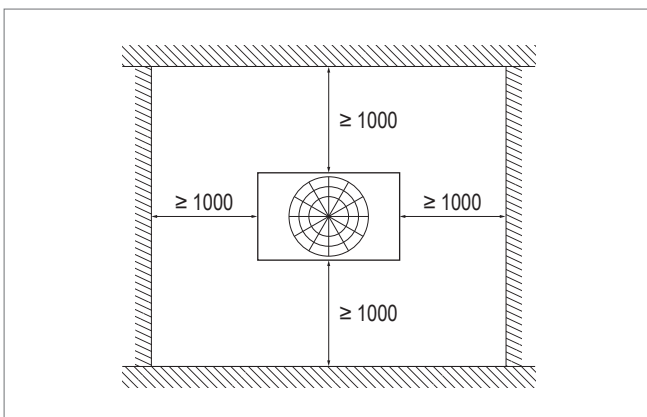


Fig. E4: Minimum distances for the heat pump (dimensions in mm)

### 1.3 Roof frame

Roof frames are required for installing TopVent® units in the roof. Suitable roof frames are available as accessories (see part D 'Options', section 8).

Please consider the following in the design process:

- The extract air grille must be freely accessible under the roof.
- Observe the minimum distances according to Fig. E2.
- The roof frame must protrude at least 300 mm from the roof, so that no water can penetrate during a rainstorm or snowfall and to ensure that the fresh air weather protection is sufficiently high above the roof.



#### Notice

Roof frames are available in 2 heights and connection modules in 3 lengths for adapting to the local installation situation.

- The condensate must be able to drain off freely.
- Ensure that the supporting surface for the unit is flat and level.
- Insulate the roof frame before installing the unit (thermal insulation, 60 mm thick).
- Embed the roof frame tightly into the roof structure with roof foil.
- The following applies to any roof frames constructed on site:
  - The supporting surface must correspond to the specifications in Fig. D4 on page 55.

### 1.4 Unit installation

Proceed as follows to position the unit:

#### Below-roof unit

- Apply sealing compound to the roof frame.
- Fasten the adjustment screws in the roof frame.
- Screw in the transport eyes and attach the lifting gear.
- Transport the below-roof unit to the roof frame using a helicopter or crane.
- Turn the below-roof unit to the desired position.
- Hang the below-roof unit into the roof frame from above.

#### Roof unit

- Attach the lifting kit to the roof unit.
- Attach the lifting straps.
- Transport the roof unit to the roof, correctly position the roof unit over the below-roof unit and set it down.
- Screw the roof unit to the below-roof unit.
- Remove the lifting kit.

#### Heat pump Belaria® VRF

- Transport the heat pump to the installation site.
- Place the unit on the prepared frame.
- Fasten the unit with 4 expansion anchors  $\varnothing$  10 mm.

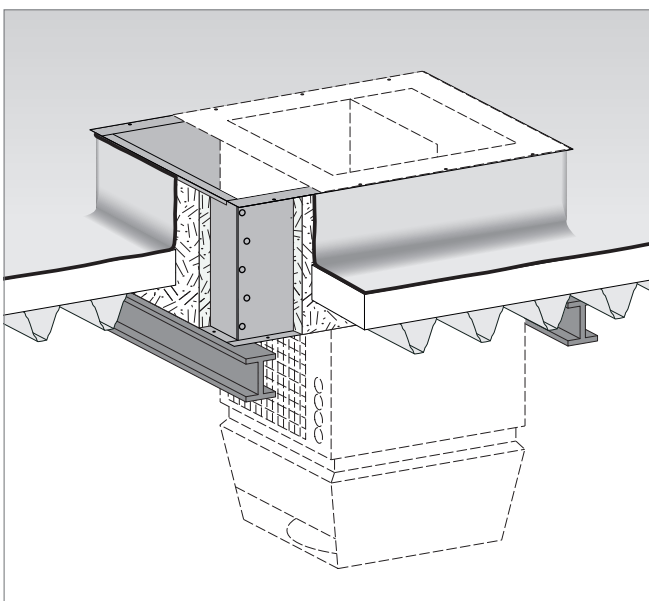


Fig. E6: Conceptual drawing of the roof frame

## 2 Refrigeration system installation

The refrigerant pipes must be installed by a qualified refrigeration technician in line with the local regulations.

To avoid damaging the unit:

- Do not use any flux.
- Ensure there is a nitrogen supply when soldering.
- Insulate the refrigerant pipes.
- Carry out a leak-tightness test and vacuum drying.

### 2.1 Refrigerant pipes

- Install the refrigerant pipes as shown in Fig. E9 to Fig. E11 schematically according to the local conditions. The maximum length for the flow and the return is 40 m each.

**i Notice**  
Excessively long refrigerant lines reduce the efficiency of the system. Place the heat pump as close as possible to the indoor climate unit.

- The material to be used and the pipe thickness depend on the pipe diameter:

Pipe diameter	Material	Pipe thickness
Ø 12.7 mm	Hardened copper	0.8 mm
Ø 15.9 mm		1.0 mm
Ø 19.1 mm		1.0 mm
Ø 28.6 mm	Semi-hard copper	1.3 mm

Table E2: Configuration of refrigerant pipes

- The thickness of the insulation depends on the pipe diameter. Minimum thicknesses are given in Table E3. Thicker insulation is required in hot, humid environments.

Pipe diameter	Minimum thickness of the insulation <sup>1)</sup>	Material
Ø 12.7 mm	15 mm	Closed-cell foam, fire protection class B1, temperature-resistant up to 120 °C, outer insulation UV-resistant
Ø 15.9 mm	20 mm	
Ø 19.1 mm	20 mm	
Ø 28.6 mm	20 mm	

<sup>1)</sup> Increase the thickness of the insulation in hot, humid environments (> 80% relative humidity).

Table E3: Insulation of the refrigerant pipes

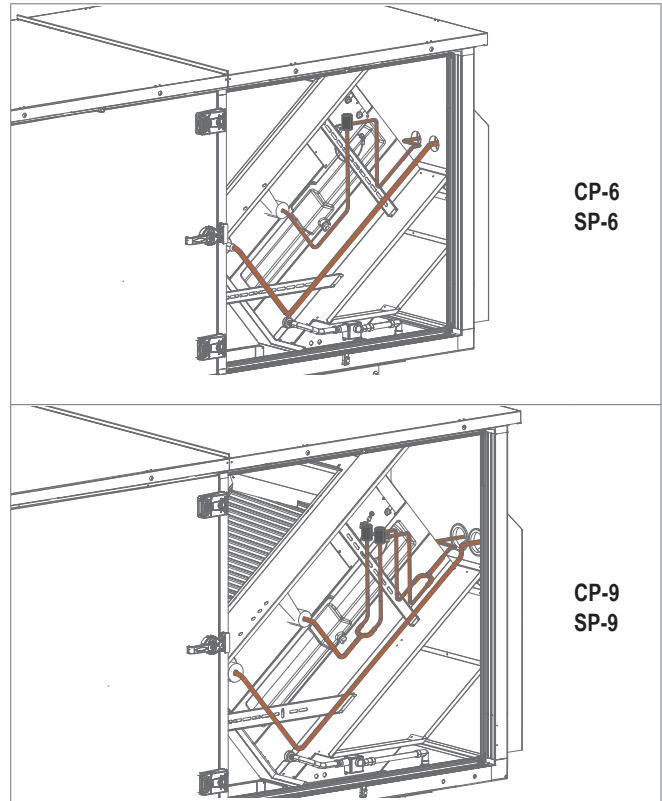


Fig. E7: Installation of refrigerant pipes in the roof unit

- Install the expansion valve supplied loose in the TopVent® roof unit, as shown in Fig. E7. Please note the following:
  - It is essential that the expansion valve is mounted in a vertical position.
  - The pipes of the expansion valve must not be shortened.
- 2 expansion valves are required for the Belaria® VRF (67). Use the branching kit supplied for branching the pipeline.
  - Install the branching kit so that the two branch pipes are in one plane.


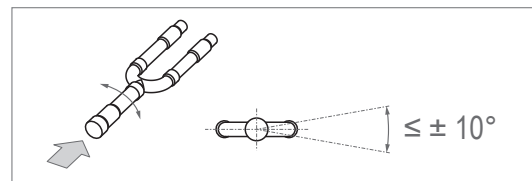


Fig. E8: Installation of the branching kit


**Refrigerant pipes for Belaria® VRF (33)**

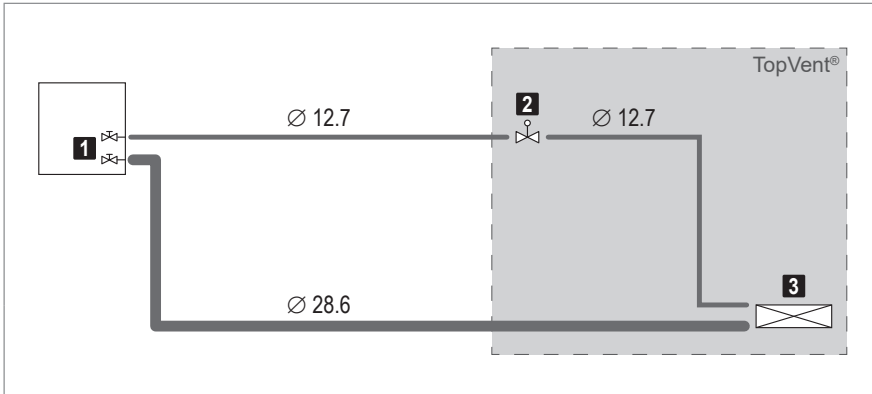

- 1** Connections on the heat pump
  - Liquid line . . . . . Ø 15.9 mm
  - Gas line . . . . . Ø 28.6 mm
- 2** Expansion valve (supplied loose for installation on-site in the TopVent® unit)
- 3** Heating/cooling coil

Fig. E9: Refrigerant pipes for Belaria® VRF (33) (pipe diameter in mm)


**Refrigerant pipes for Belaria® VRF (40)**

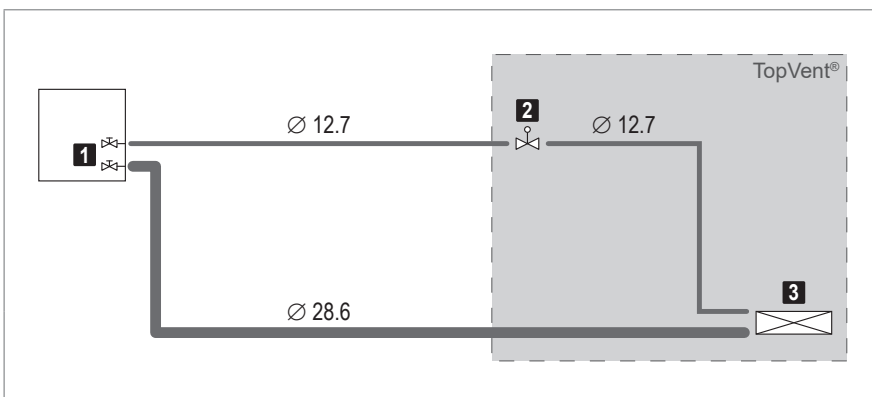

- 1** Connections on the heat pump
  - Liquid line . . . . . Ø 15.9 mm
  - Gas line . . . . . Ø 31.8 mm
- 2** Expansion valve (supplied loose for installation on-site in the TopVent® unit)
- 3** Heating/cooling coil

Fig. E10: Refrigerant pipes for Belaria® VRF (40) (pipe diameter in mm)

**Refrigerant pipes for Belaria® VRF (67)**

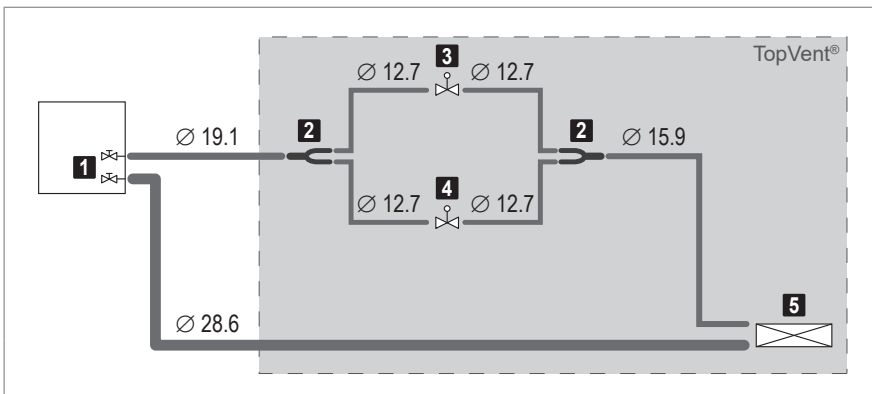

- 1** Connections on the heat pump
  - Liquid line . . . . . Ø 19.1 mm
  - Gas line . . . . . Ø 31.8 mm
- 2** Branching kit (supplied loose for installation on-site in the TopVent® unit)
- 3** Expansion valve 02 (supplied loose for installation on-site in the TopVent® unit)
- 4** Expansion valve 03 (supplied loose for installation on-site in the TopVent® unit)
- 5** Heating/cooling coil

Fig. E11: Refrigerant pipes for Belaria® VRF (67) (pipe diameter in mm)

- If the heat pump is placed more than 20 m higher than the heating/cooling coil: Install an oil return trap in the gas line every 10 m.

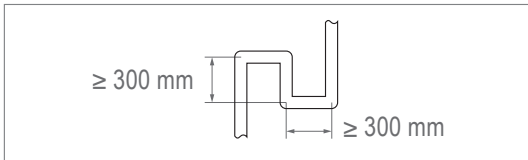


Fig. E12: Oil return trap

## 2.2 Calculation of the additional refrigerant fill

- The heat pump is filled with refrigerant at the factory:
  - Refrigerant R410A
- Depending on the unit size, the heat pump is only partially pre-filled at the factory, and so refrigerant must be added on site:

Belaria®		VRF (33)	VRF (40)	VRF (67)
Prefill volume	kg	11.0	11.8	11.8
Top-up volume	kg	–	1.2	10.2
<b>Total fill volume</b>	<b>kg</b>	<b>11.0</b>	<b>13.0</b>	<b>22.0</b>

Table E4: Refrigerant fill of the heat pump

- In addition, refrigerant must be topped up depending on the length and diameter of the liquid line (from the heat pump to the expansion valve).
  - $\varnothing$  12.7 mm . . . 0.11 kg refrigerant per metre length
  - $\varnothing$  19.1 mm . . . 0.26 kg refrigerant per metre length
- The entire top-up volume is calculated as follows:

Top-up volume of heat pump	=	_____
+ _____ m ( $\varnothing$ 12.7) $\times$ 0.11	=	_____
+ _____ m ( $\varnothing$ 19.1) $\times$ 0.26	=	_____
<b>Total top-up volume</b>	=	_____

## 3 Hydraulic installation


### Heat pump

- Make sure that the heat pump is not damaged by pooling water or ice formation:
  - Make sure that water is free to drain through the bottom plate of the heat pump.

## 4 Electrical installation

- The electrical installation must only be carried out by a qualified electrician.
- Observe the relevant regulations (e.g. EN 60204-1).
- Choose the dimensions of the cable cross sections in line with the applicable regulations.
- Route signal and bus lines separately from mains cables.
- Make sure the lightning protection system for the units or for the entire building is planned and carried out by professionals.
- Provide overload protection equipment on site in the mains connection line of the zone control panel.
- Carry out the electrical installation according to the wiring diagram:
  - Power supply for TopVent® CP, SP
  - Power supply for Belaria® heat pump with main switch in view of the heat pump
  - Zone bus based on system layout
  - Signal lines
- Connect the electrical components of the heat pump system.


4.1 Electrical installation for TopVent® CP-6, SP-6

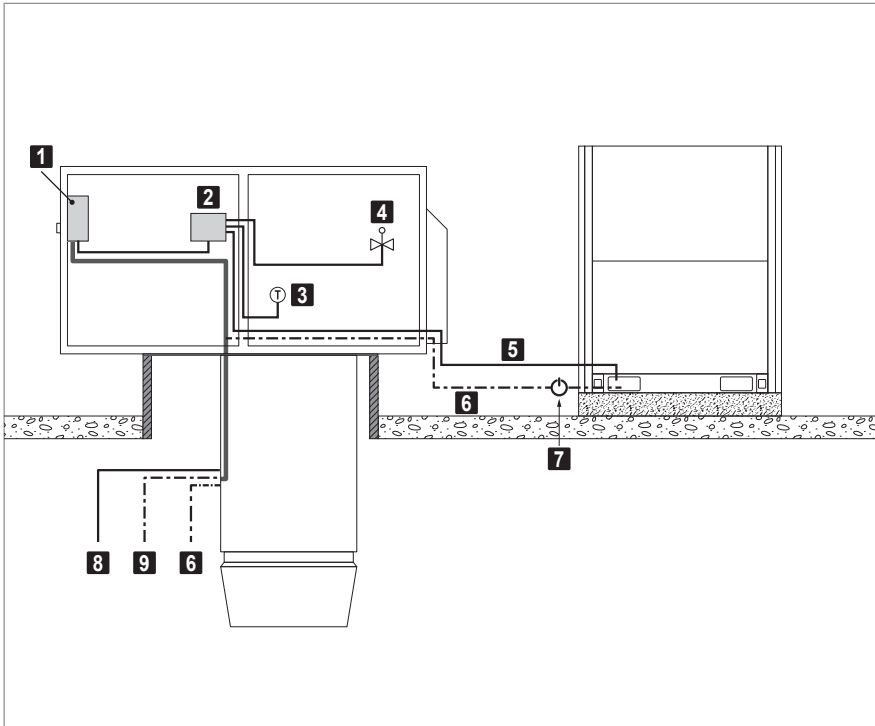

- 1 Unit control box
- 2 Conversion board
- 3 Gas temperature sensor (supplied loose)
- 4 Expansion valve (supplied loose)
- 5 Communication TopVent®
- 6 Power supply heat pump
- 7 Heat pump main switch (on-site)
- 8 Zone bus
- 9 Power supply TopVent®

Fig. E13: Electrical connection of the heat pump system for TopVent® CP-6, SP-6

4.2 Electrical installation for TopVent® CP-9, SP-9

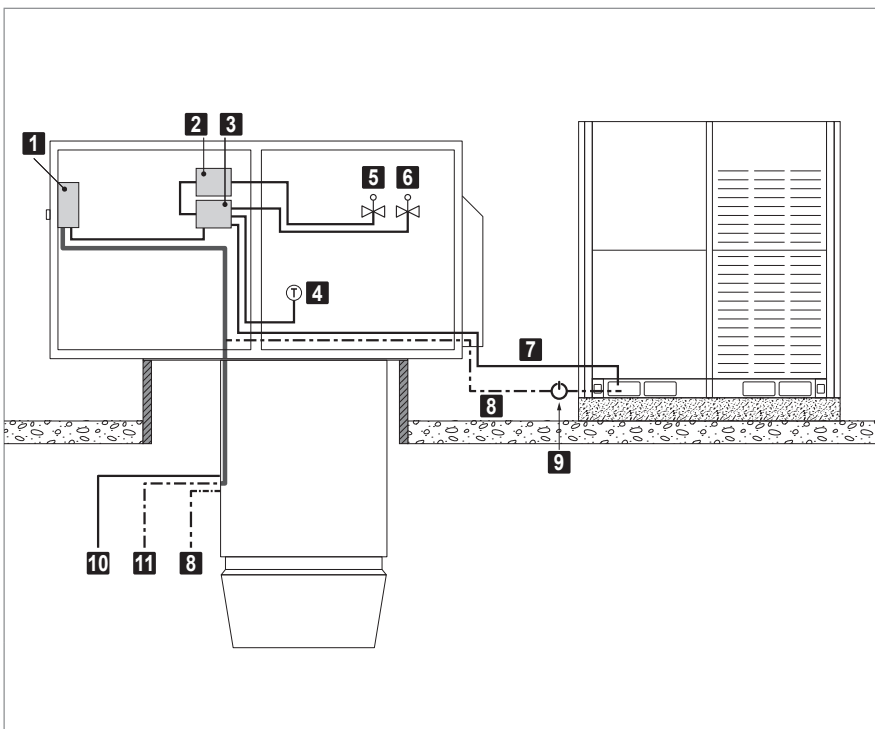

- 1 Unit control box
- 2 Conversion board 02 – client
- 3 Conversion board 03 – server
- 4 Gas temperature sensor (supplied loose)
- 5 Expansion valve 02 (supplied loose)
- 6 Expansion valve 03 (supplied loose)
- 7 Communication TopVent®
- 8 Power supply heat pump
- 9 Heat pump main switch (on-site)
- 10 Zone bus
- 11 Power supply TopVent®

Fig. E14: Electrical connection of the heat pump system for TopVent® CP-9, SP-9

## 4.3 Cable list

Component	Designation	Voltage	Cable	Comments	Start	Target
TopTronic® C System control	Power supply	3 × 400 VAC	NYM-J 5 × ... mm <sup>2</sup>		On-site	Zone control panel
		1 × 230 VAC	NYM-J 3 × ... mm <sup>2</sup>		On-site	Zone control panel
Zone control panel	Zone bus		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 500 m	Zone control panel	Hoval units
	System bus		Ethernet ≥ CAT 5	For connecting several zone control panels   max. 100 m	Zone control panel	Further zone control panel
	Integration into the building management system		Ethernet ≥ CAT 5	BACnet, Modbus IP   max. 100 m	Zone control panel	On-site (BMS)
			J-Y(ST)Y 2 × 2 × 0.8 mm	Modbus RTU   max. 1200 m	Zone control panel	On-site (BMS)
	Room temperature sensor		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 100 m	Zone control panel	Sensors
	Additional room temperature sensors		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 100 m	Zone control panel	Sensors
	Combination sensor room air quality, temperature and humidity		J-Y(ST)Y 4 × 2 × 0.8 mm	max. 250 m	Zone control panel	Sensors
	Fresh air temperature sensor		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 100 m	Zone control panel	Sensors
	Combination sensor fresh air temperature and humidity		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 250 m	Zone control panel	Sensors
	Collective alarm	Volt-free max. 230 VAC max. 24 VDC	NYM-O 2 × 1.5 mm <sup>2</sup>	max. 3 A max. 2 A	Zone control panel	On-site
	Power supply for units	3 × 400 VAC	NYM-J 5 × 1.5 mm <sup>2</sup> (min.)	RoofVent® size 6 max. cable cross section 5 × 6 mm <sup>2</sup>	Zone control panel or on-site	Hoval units
		3 × 400 VAC	NYM-J 5 × 4.0 mm <sup>2</sup> (min.)	RoofVent® size 9 max. cable cross section 5 × 10 mm <sup>2</sup>		
		3 × 400 VAC	NYM-J 5 × 1.5 mm <sup>2</sup> (min.)	TopVent® max. cable cross section 5 × 6 mm <sup>2</sup>		
	Power supply for heat pump	3 × 400 VAC	NYM-J 5 × 4.0 mm <sup>2</sup> (min.)	Belaria® VRF (33) (for 100 m length) max. cable cross section in panel 5 × 16 mm <sup>2</sup>	Zone control panel or on-site	Hoval heat pump
		3 × 400 VAC	NYM-J 5 × 6.0 mm <sup>2</sup> (min.)	Belaria® VRF (40) (for 100 m length) max. cable cross section in panel 5 × 25 mm <sup>2</sup>		
3 × 400 VAC		NYM-J 5 × 10.0 mm <sup>2</sup> (min.)	Belaria® VRF (67) (for 100 m length) max. cable cross section in panel 5 × 50 mm <sup>2</sup>			
System operator terminal (if external)	24 VDC	NYM-J 3 × 1.5 mm <sup>2</sup>	Power supply 0.42 A   max. 50 m max. cable cross section 3 × 4 mm <sup>2</sup>	Zone control panel	System operator terminal	
		Ethernet ≥ CAT 5	Communication   max. 100 m	Zone control panel	System operator terminal	
Zone operator terminal (if external)	24 VAC	J-Y(ST)Y 4 × 2 × 0.8 mm	Power supply, 1 A fusing   max. 500 m	Zone control panel	Zone operator terminal	
External sensor values	0-10 VDC	J-Y(ST)Y 2 × 2 × 0.8 mm	max. 100 m	On-site	Zone control panel	
External set values	0-10 VDC	J-Y(ST)Y 2 × 2 × 0.8 mm	max. 100 m	On-site	Zone control panel	
Load shedding input	24 VAC	NYM-O 2 × 1.5 mm <sup>2</sup>	max. 1 A   max. 100 m	On-site	Zone control panel	
Operating selector switch on terminal (analogue)	0-10 VDC	J-Y(ST)Y 2 × 2 × 0.8 mm	max. 100 m	On-site (switch)	Zone control panel	

ⓘ Max. outer diameter for cable routing through TopVent® roof unit:  
CP|SP-6: 20.5 mm  
CP|SP-9: 25.5 mm



Component	Designation	Voltage	Cable	Comments	Start	Target
	Operating selector switch on terminal (digital)	0-10 VDC	J-Y(ST)Y 6 × 2 × 0.8 mm	max. 100 m	On-site (switch)	Zone control panel
	Operating selector button on terminal	24 VAC	J-Y(ST)Y 6 × 2 × 0.8 mm	max. 100 m	On-site (button)	Zone control panel
	Forced off	24 VAC	NYM-O 2 × 1.5 mm <sup>2</sup>	max. 1 A   max. 100 m	On-site	Zone control panel
	Heating/cooling changeover	24 VAC	NYM-O 2 × 1.5 mm <sup>2</sup>	Signal external enabling/setting max. 1 A   max. 100 m	On-site	Zone control panel
	Signal for external extract air fan	2-10 VDC	J-Y(ST)Y 2 × 2 × 0.8 mm	for TopVent® SP   max. 100 m	Zone control panel	On-site
<b>TopVent® unit</b>	Power supply	3 × 400 VAC	NYM-J 5 × 1.5 mm <sup>2</sup> (min.)	max. cable cross section 5 × 6 mm <sup>2</sup>	Zone control panel or on-site	TopVent® unit
	Zone bus		J-Y(ST)Y 2 × 2 × 0.8 mm	max. 500 m	Zone control panel	TopVent® unit
	Forced off	24 VAC	NYM-O 2 × 1.5 mm <sup>2</sup>	max. 1 A for TopVent® SP   max. 100 m	On-site	TopVent® unit
<b>Belaria® VRF heat pump</b>	Power supply	3 × 400 VAC	NYM-J 5 × 4.0 mm <sup>2</sup> (min.)	Belaria® VRF (33) (for 100 m length) max. cable cross section in HP 5 × 25 mm <sup>2</sup>	Zone control panel or on-site	Hoval heat pump
		3 × 400 VAC	NYM-J 5 × 6.0 mm <sup>2</sup> (min.)	Belaria® VRF (40) (for 100 m length) max. cable cross section in HP 5 × 25 mm <sup>2</sup>		
		3 × 400 VAC	NYM-J 5 × 10.0 mm <sup>2</sup> (min.)	Belaria® VRF (67) (for 100 m length) max. cable cross section in HP 5 × 25 mm <sup>2</sup>		
	Communication TopVent®		J-Y(ST)Y 4 × 2 × 0.8 mm		TopVent® unit	Hoval heat pump

Table E5: Cable list for on-site connections





---

**System design**

1 Design example. . . . . 70

2 Maintenance schedule . . . . . 72

3 Checklist for project discussions . . . . . 73

# 1 Design example



**Notice**

Use the 'HK-Select' program to design Hoval Indoor Climate Systems. You can download it free of charge on the Internet.

## 1.1 Applications with higher comfort requirements (e.g. production halls, assembly halls, sports halls)

Design data	Example
<ul style="list-style-type: none"> <li>■ Geometry of the room</li> <li>■ Internal heat gains</li> <li>■ People in the room</li> <li>■ Heating and cooling with decentralised heat pump</li> <li>■ Improvement of air quality, fresh air supply for the people in the room (fresh air flow rate per person = 30 m³/h)</li> </ul>	<p>50 × 60 × 12 m 28 kW 20 people</p>
<p>Design conditions heating:</p> <ul style="list-style-type: none"> <li>■ Fabric heat losses</li> <li>■ Fresh air temperature</li> <li>■ Room temperature</li> <li>■ Extract air temperature</li> </ul>	<p>350 kW - 15 °C 18 °C 20 °C</p>
<p>Design conditions cooling:</p> <ul style="list-style-type: none"> <li>■ Transmission sensible gains</li> <li>■ Fresh air conditions</li> <li>■ Room air conditions</li> <li>■ Extract air temperature</li> </ul>	<p>140 kW 32 °C / 40 %rh 26 °C / 40 %rh 28 °C</p>
<p><b>Fresh air supply</b></p> <ul style="list-style-type: none"> <li>■ Required fresh air flow rate in total:</li> <li>■ Fresh air ratio of supply air units: max. 10 % of the nominal air flow rate</li> </ul> <p><i>The fresh air ratio can be adjusted from 0...100 %. Where EU Regulation 1253/2014 applies, it must be restricted to max. 10 % in the design conditions.</i></p> <ul style="list-style-type: none"> <li>■ Calculate the required number of supply air units from the nominal air flow rate.</li> </ul>	<p>20 × 30 = 600 m³/h</p> <p>Size 6: max. 600 m³/h fresh air Size 9: max. 900 m³/h fresh air</p> <p>→ <b>1 TopVent® SP unit</b></p>
<p><b>Mounting height</b></p> <ul style="list-style-type: none"> <li>■ Calculate the actual mounting height (= distance between the floor and the bottom edge of the units).</li> </ul> <p><math>Y = \text{Hall height} - \text{distance from ceiling} - \text{unit height}</math></p> <ul style="list-style-type: none"> <li>■ Compare the actual mounting height with the minimum and maximum mounting height (see Fig. E2 on page 59 and HK-Select).</li> </ul>	<p><u>Supply air units:</u> Size 6 → OK Size 9 → OK</p> <p><u>Recirculation units:</u> Size 6 → OK Size 9 → OK</p>

<b>Required performance for covering fabric heat losses</b>																																																																					
<ul style="list-style-type: none"> <li>Required heat output for coverage of fabric heat losses in total:  <math>Q_{H\_req} = \text{Fabric heat losses} - \text{internal heat loads}</math> </li> </ul>	350 – 28 = 322 kW																																																																				
<ul style="list-style-type: none"> <li>Required cooling capacity for coverage of transmission sensible gains in total:  <math>Q_{C\_req} = \text{Transmission sensible gains} + \text{internal heat loads}</math> </li> </ul>	140 + 28 = 168 kW																																																																				
<b>Required heat output of recirculation units</b>																																																																					
<ul style="list-style-type: none"> <li>Determine the required heat output of the recirculation units based on the output of the supply air unit.  <math>Q_{H\_Recirculation} = Q_{H\_req} - Q_{H\_Supply\ air}</math> </li> </ul> <p><i>For the supply air unit, take into account only the share of capacity that is used for coverage of fabric heat losses (separately shown in HK-Select).</i></p>	<table border="1"> <thead> <tr> <th>Type</th> <th><math>Q_{H\_Supply\ air}</math></th> <th><math>Q_{H\_Recirculation}</math></th> </tr> </thead> <tbody> <tr> <td>SP-6-J</td> <td>22.0</td> <td>322 – 22.0 = 300.0</td> </tr> <tr> <td>SP-6-L</td> <td>27.6</td> <td>322 – 27.6 = 294.4</td> </tr> <tr> <td>SP-9-N</td> <td>47.4</td> <td>322 – 47.4 = 274.6</td> </tr> </tbody> </table> <p>(values in kW)</p>	Type	$Q_{H\_Supply\ air}$	$Q_{H\_Recirculation}$	SP-6-J	22.0	322 – 22.0 = 300.0	SP-6-L	27.6	322 – 27.6 = 294.4	SP-9-N	47.4	322 – 47.4 = 274.6																																																								
Type	$Q_{H\_Supply\ air}$	$Q_{H\_Recirculation}$																																																																			
SP-6-J	22.0	322 – 22.0 = 300.0																																																																			
SP-6-L	27.6	322 – 27.6 = 294.4																																																																			
SP-9-N	47.4	322 – 47.4 = 274.6																																																																			
<b>Required cooling capacity of recirculation units</b>																																																																					
<ul style="list-style-type: none"> <li>Determine the required cooling capacity of the recirculation units based on the capacity of the supply air unit.  <math>Q_{C\_Recirculation} = Q_{C\_req} - Q_{C\_Supply\ air}</math> </li> </ul> <p><i>For the supply air unit, take into account only the share of capacity that is used for coverage of transmission sensible gains (separately shown in HK-Select).</i></p>	<table border="1"> <thead> <tr> <th>Type</th> <th><math>Q_{C\_Supply\ air}</math></th> <th><math>Q_{C\_Recirculation}</math></th> </tr> </thead> <tbody> <tr> <td>SP-6-J</td> <td>23.7</td> <td>168 – 23.7 = 144.3</td> </tr> <tr> <td>SP-6-L</td> <td>28.6</td> <td>168 – 28.6 = 139.4</td> </tr> <tr> <td>SP-9-N</td> <td>48.8</td> <td>168 – 48.8 = 119.2</td> </tr> </tbody> </table> <p>(values in kW)</p>	Type	$Q_{C\_Supply\ air}$	$Q_{C\_Recirculation}$	SP-6-J	23.7	168 – 23.7 = 144.3	SP-6-L	28.6	168 – 28.6 = 139.4	SP-9-N	48.8	168 – 48.8 = 119.2																																																								
Type	$Q_{C\_Supply\ air}$	$Q_{C\_Recirculation}$																																																																			
SP-6-J	23.7	168 – 23.7 = 144.3																																																																			
SP-6-L	28.6	168 – 28.6 = 139.4																																																																			
SP-9-N	48.8	168 – 48.8 = 119.2																																																																			
<b>Minimum number of recirculation units</b>																																																																					
<ul style="list-style-type: none"> <li>Determine the minimum number of recirculation units depending on the available supply air units. Take into account the following criteria: <ul style="list-style-type: none"> <li>Floor area covered</li> <li>Heat output</li> <li>Cooling capacity</li> <li>Unit clearances</li> </ul> </li> </ul>																																																																					
<table border="1"> <thead> <tr> <th rowspan="2">Supply air unit</th> <th rowspan="2">Recirculation units</th> <th colspan="4">Required number of recirculation units</th> <th rowspan="2">Minimum number of recirculation units</th> </tr> <tr> <th>Floor area covered</th> <th>Heat output</th> <th>Cooling capacity</th> <th>Unit clearances</th> </tr> </thead> <tbody> <tr> <td rowspan="3">1 unit SP-6-J</td> <td>CP-6-J</td> <td>6</td> <td>10</td> <td>6</td> <td>5</td> <td>10</td> </tr> <tr> <td>CP-6-L</td> <td>6</td> <td>9</td> <td>5</td> <td>5</td> <td>9</td> </tr> <tr> <td>CP-9-N</td> <td>4</td> <td>5</td> <td>3</td> <td>5</td> <td>5</td> </tr> <tr> <td rowspan="3">1 unit SP-6-L</td> <td>CP-6-J</td> <td>6</td> <td>10</td> <td>6</td> <td>5</td> <td>10</td> </tr> <tr> <td>CP-6-L</td> <td>6</td> <td>9</td> <td>5</td> <td>3</td> <td>9</td> </tr> <tr> <td>CP-9-N</td> <td>4</td> <td>5</td> <td>3</td> <td>3</td> <td>5</td> </tr> <tr> <td rowspan="3">1 unit SP-9-N</td> <td>CP-6-J</td> <td>5</td> <td>10</td> <td>5</td> <td>5</td> <td>10</td> </tr> <tr> <td>CP-6-L</td> <td>5</td> <td>8</td> <td>4</td> <td>3</td> <td>8</td> </tr> <tr> <td>CP-9-N</td> <td>4</td> <td>5</td> <td>3</td> <td>3</td> <td>5</td> </tr> </tbody> </table>	Supply air unit	Recirculation units	Required number of recirculation units				Minimum number of recirculation units	Floor area covered	Heat output	Cooling capacity	Unit clearances	1 unit SP-6-J	CP-6-J	6	10	6	5	10	CP-6-L	6	9	5	5	9	CP-9-N	4	5	3	5	5	1 unit SP-6-L	CP-6-J	6	10	6	5	10	CP-6-L	6	9	5	3	9	CP-9-N	4	5	3	3	5	1 unit SP-9-N	CP-6-J	5	10	5	5	10	CP-6-L	5	8	4	3	8	CP-9-N	4	5	3	3	5	
Supply air unit			Recirculation units	Required number of recirculation units				Minimum number of recirculation units																																																													
	Floor area covered	Heat output		Cooling capacity	Unit clearances																																																																
1 unit SP-6-J	CP-6-J	6	10	6	5	10																																																															
	CP-6-L	6	9	5	5	9																																																															
	CP-9-N	4	5	3	5	5																																																															
1 unit SP-6-L	CP-6-J	6	10	6	5	10																																																															
	CP-6-L	6	9	5	3	9																																																															
	CP-9-N	4	5	3	3	5																																																															
1 unit SP-9-N	CP-6-J	5	10	5	5	10																																																															
	CP-6-L	5	8	4	3	8																																																															
	CP-9-N	4	5	3	3	5																																																															
<ul style="list-style-type: none"> <li>Choose the final solution from the remaining possibilities, depending on the geometry of the hall and the costs.</li> </ul>																																																																					

1.2 Applications with low comfort requirements  
(e.g. warehouses, logistics centres)

Design data	Example																								
<ul style="list-style-type: none"> <li>■ Geometry of the room</li> <li>■ Heating and cooling with decentralised heat pump</li> </ul>	181 × 105 × 12 m																								
Design conditions heating: <ul style="list-style-type: none"> <li>■ Fabric heat losses</li> <li>■ Fresh air temperature</li> <li>■ Room temperature</li> <li>■ Extract air temperature</li> </ul>	892 kW - 15 °C 15 °C 18 °C																								
Design conditions cooling: <ul style="list-style-type: none"> <li>■ Transmission sensible gains</li> <li>■ Fresh air conditions</li> <li>■ Room air conditions</li> <li>■ Extract air temperature</li> </ul>	923 kW 32 °C / 40 %rh 26 °C / 40 %rh 28 °C																								
<b>Mounting height</b> <ul style="list-style-type: none"> <li>■ Calculate the actual mounting height (= distance between the floor and the bottom edge of the units). <math>Y = \text{Hall height} - \text{distance from ceiling} - \text{unit height}</math></li> <li>■ Compare the actual mounting height with the minimum and maximum mounting height (see Fig. E2 on page 59 and HK-Select).</li> </ul>	<b>Recirculation units:</b> Size 6 → OK Size 9 → OK																								
<b>Required number of recirculation units</b> <ul style="list-style-type: none"> <li>■ Determine the required number of recirculation units based on the heat output. <math>n = \text{Fabric heat losses} : \text{heat output per unit}</math></li> <li>■ Determine the required number of recirculation units based on the cooling capacity. <math>n = \text{Transmission sensible gains} : \text{cooling capacity per unit}</math></li> <li>■ Choose the final solution from the remaining possibilities, depending on the geometry of the hall and the costs.</li> </ul>	<table border="1"> <thead> <tr> <th>Type</th> <th>kW</th> <th>Quantity</th> </tr> </thead> <tbody> <tr> <td>CP-6-J</td> <td>892 : 28.6</td> <td>32</td> </tr> <tr> <td>CP-6-L</td> <td>892 : 34.2</td> <td>27</td> </tr> <tr> <td>CP-9-N</td> <td>892 : 57.2</td> <td>16</td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Type</th> <th>kW</th> <th>Quantity</th> </tr> </thead> <tbody> <tr> <td>CP-6-J</td> <td>923 : 24.8</td> <td>38</td> </tr> <tr> <td>CP-6-L</td> <td>923 : 29.6</td> <td>32</td> </tr> <tr> <td>CP-9-N</td> <td>923 : 50.4</td> <td>19</td> </tr> </tbody> </table>	Type	kW	Quantity	CP-6-J	892 : 28.6	32	CP-6-L	892 : 34.2	27	CP-9-N	892 : 57.2	16	Type	kW	Quantity	CP-6-J	923 : 24.8	38	CP-6-L	923 : 29.6	32	CP-9-N	923 : 50.4	19
Type	kW	Quantity																							
CP-6-J	892 : 28.6	32																							
CP-6-L	892 : 34.2	27																							
CP-9-N	892 : 57.2	16																							
Type	kW	Quantity																							
CP-6-J	923 : 24.8	38																							
CP-6-L	923 : 29.6	32																							
CP-9-N	923 : 50.4	19																							

2 Maintenance schedule

Activity	Interval
Renew air filter	When the filter alarm is displayed, at least annually
Comprehensively checking function; cleaning and possibly repairing the TopVent® unit and the Belaria® VRF heat pump	Annually by Hoval customer service

Table F1: Maintenance schedule

Project

Project No.

Date

Name

Function

Address

Tel.

Fax

E-mail

**Information about the hall**

Application

Type

Insulation

Length

Width

Height

Is the roof strong enough?

yes  no

Are there window areas?

yes  no

Percentage?

Is there a crane?

yes  no

Height?

Is there enough space for installation and servicing?

yes  no

Are there any voluminous installations or machines?

yes  no

Are pollutants present?

yes  no

Which?

– If yes, are they heavier than air?

yes  no

Is oil contained in the extract air?

yes  no

Is dust present?

yes  no

Dust level?

Is there high humidity?

yes  no

How much?

Are local machine extractions required?

yes  no

Are any conditions imposed by public authorities?

yes  no

Which?

Are sound level requirements to be fulfilled?

yes  no

Which?

### Design data

- Internal heat gains (machines, ...)  kW
- Heating and cooling
- Unit size
- Control zones

### Design conditions heating


- Standard outside temperature  °C
- Room temperature  °C
- Extract air temperature  °C
- Fabric heat losses  kW


### Design conditions cooling

- Standard outside temperature  °C
- Room temperature and humidity  °C  %
- Extract air temperature  °C
- Transmission sensible gains  kW

### Further information



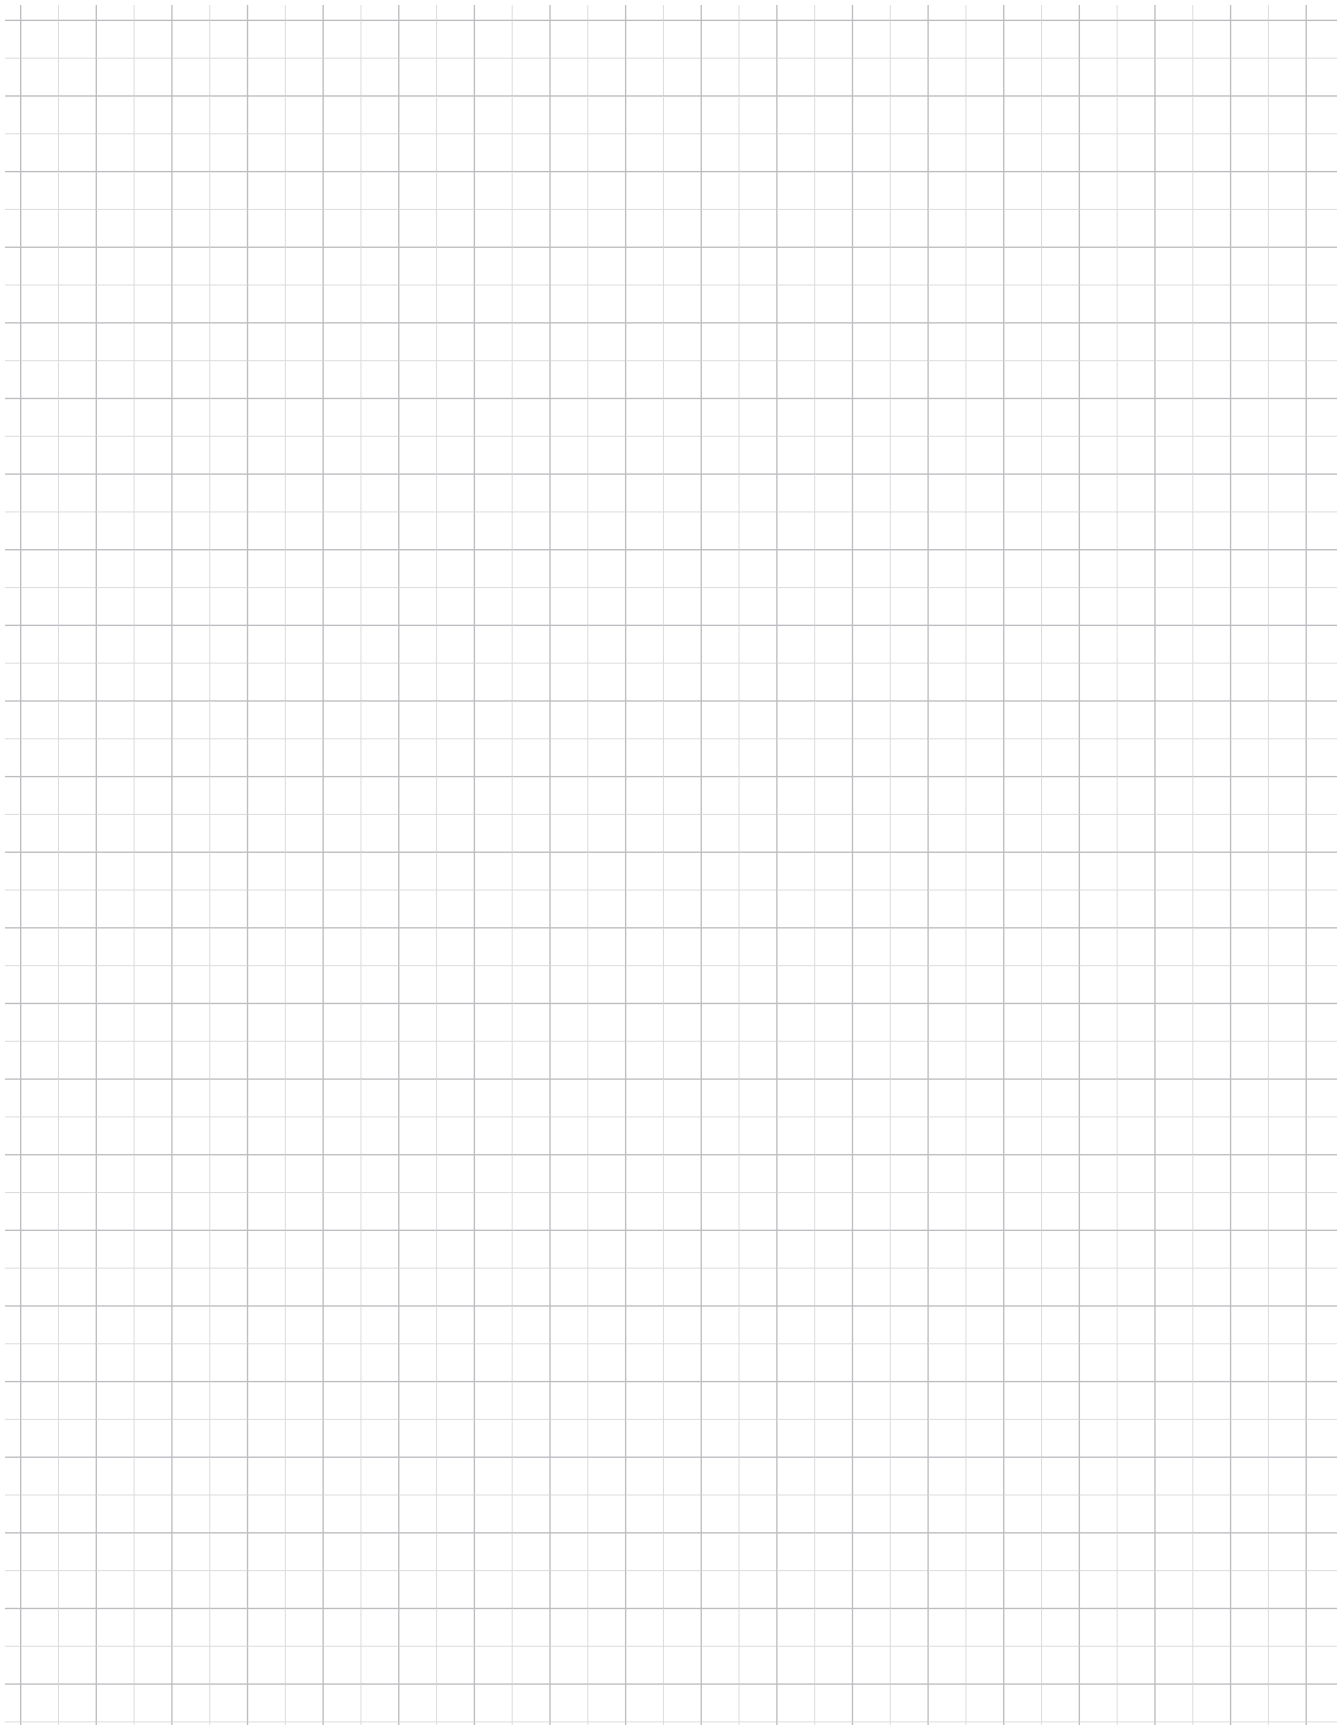

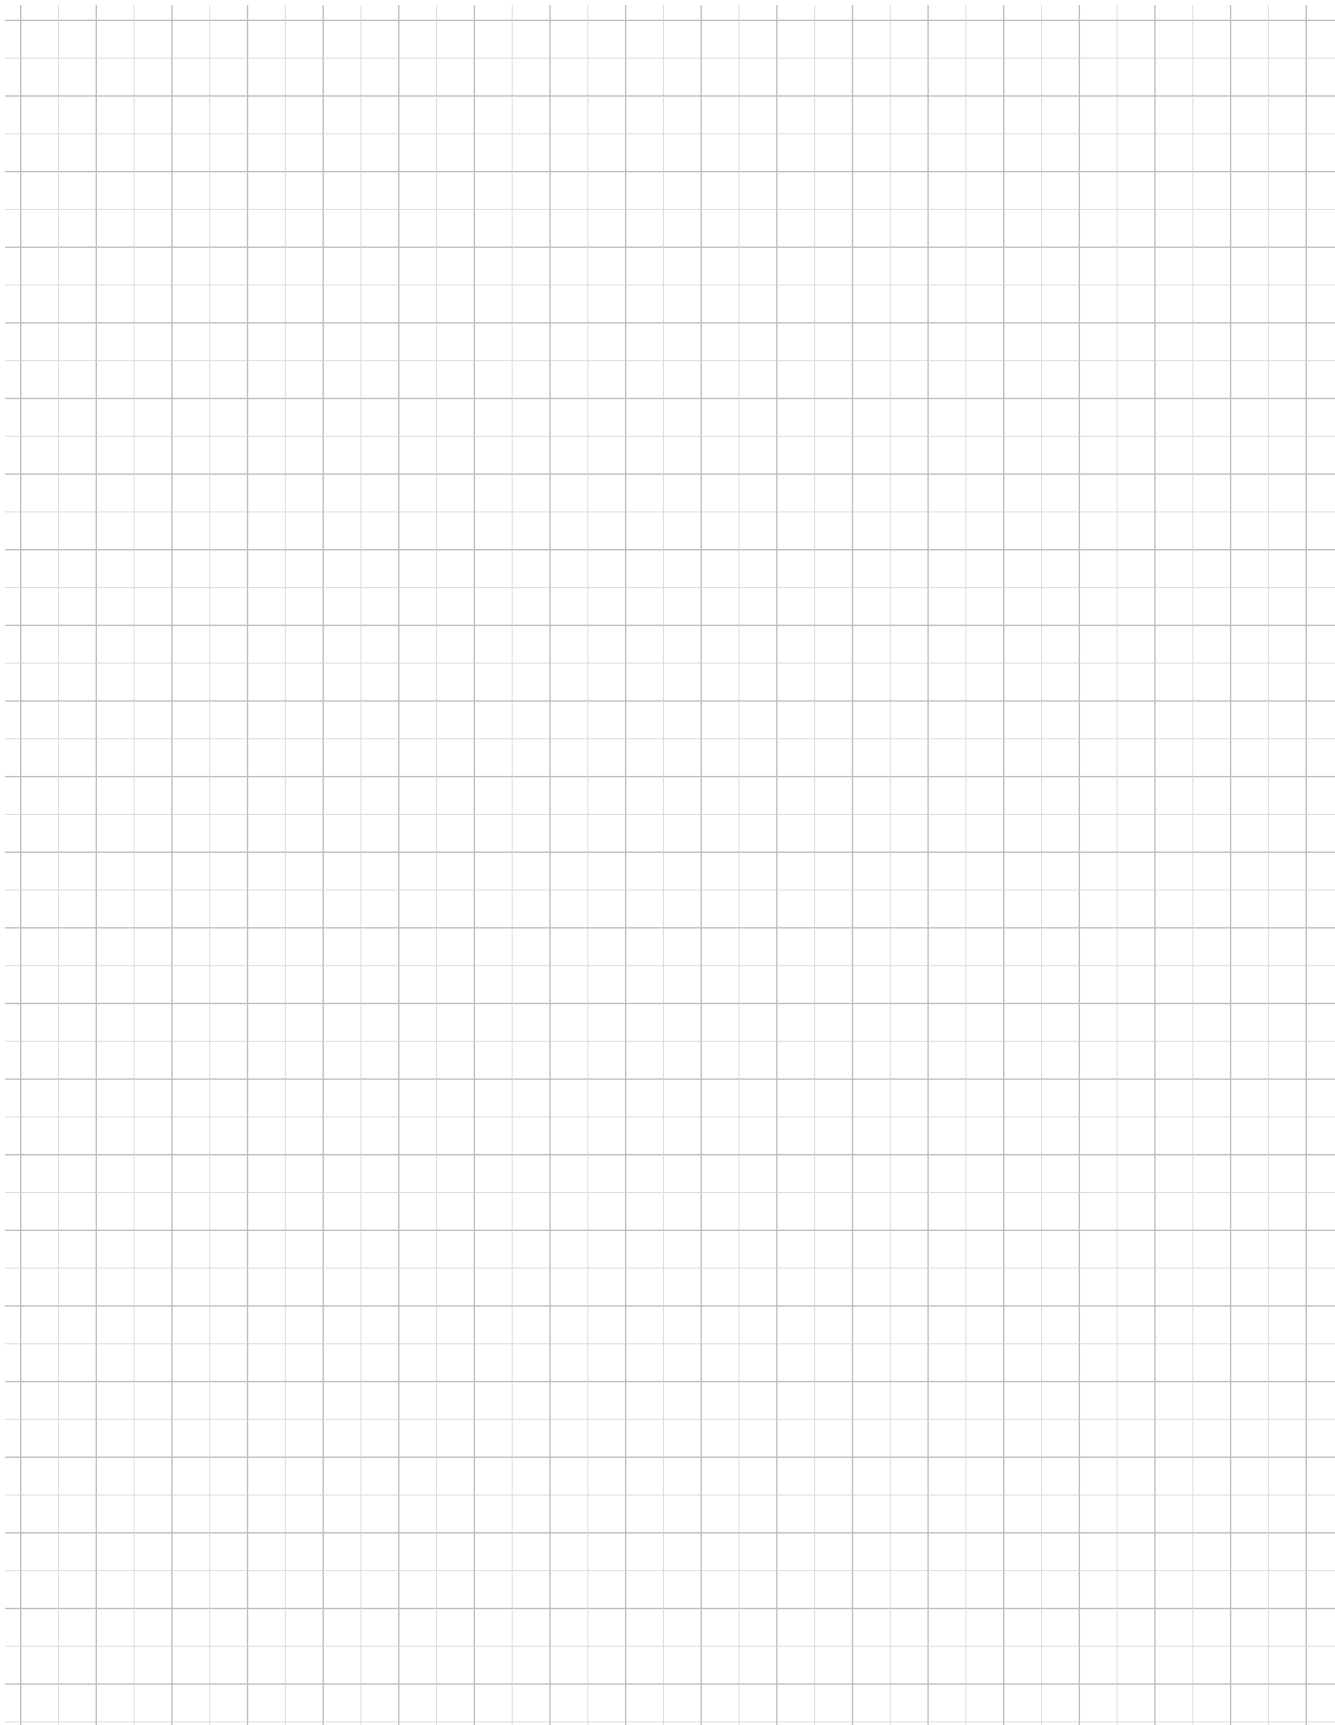



**Hoval quality.**  
You can count on us.

Hoval is one of the leading international companies for heating and indoor climate solutions. Drawing on more than 75 years of experience and benefiting from a close-knit team culture, the Hoval Group delivers exciting solutions and develops technically superior products. This leadership role requires a sense of responsibility for energy and the environment, which is expressed in an intelligent combination of different heating technologies and customised indoor climate solutions.

Hoval also provides personal consultations and comprehensive customer service. With around 2500 employees in 15 companies around the world, Hoval sees itself not as a conglomerate, but as a large family that thinks and acts globally.

Hoval heating and indoor climate solutions are currently exported to more than 50 countries.

## Responsibility for energy and environment

### United Kingdom

Hoval Ltd.  
Northgate, Newark  
Nottinghamshire  
NG24 1JN  
[hoval.co.uk](http://hoval.co.uk)

Your Hoval partner